

TOTO

WASHLET


Instruction Manual with Warranty Information

➤ See Page 46.



washLÉT

TCF6531***
TCF6530***

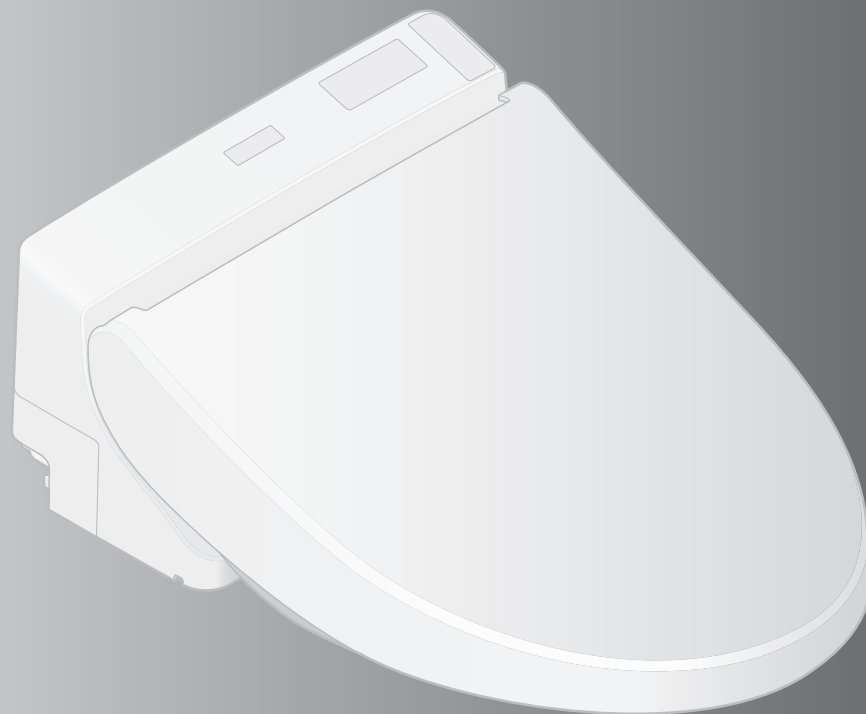

- Thank you for your recent purchase of the product. Please read the enclosed information to ensure the safe use of your product.
- Be sure to read this Instruction Manual before using your product and keep it in a safe place for future reference.

What functions are available on your product?

Check your model name and write a check mark in this field as needed.

Functions		Your Model	Product name (Model)		Ref. Page
			WASHLET		
			Part No. TCF6531***	TCF6530***	
Basic Functions	Cleansing	Rear cleansing	●	●	14
		Rear soft cleansing	●	●	
		Front cleansing	●	●	
	Changing the washing method	Wand position adjustment	●	●	14, 15
		Water pressure adjustment	●	●	
		Oscillating cleansing	●	●	
		Pulsating cleansing	●	●	
	Drying	Warm air drying	●	●	14
		Changing the temperature	Temperature adjustment	●	●
Sanitary Functions	Removing odors	Deodorizer	●	●	18, 19
	Bowl pre-cleaning	Pre-mist	●	●	
Convenient Functions	Heating the toilet seat	Heated seat	●	●	—
	Saving energy	Energy Saver	●	●	22, 23
Maintenance	Main Unit One-touch removal		●	●	28
	Removable toilet lid		●	●	29
	Wand cleaning		●	●	30

Product name,
Part No.



A mist is automatically sprayed in the toilet bowl to create a water cushion, which prevents dirt from adhering to the surface.

The self-cleaning functions operate automatically.
(See pages 18 for details.)

As you sit

- A mist is sprayed in the toilet bowl.
- The deodorizer operates.



Table of Contents

Safety Precautions	4	Introduction
Operational Precautions.....	9	
Parts Names	10	
Preparation.....	12	
Basic Operations	14	Operation
Automatic Functions	18	
DEODORIZER, PRE-MIST		
Temperature Adjustment.....	20	
Energy Saver Feature	22	
Main unit	26	Maintenance
Deodorizing Filter	27	
Gap between the Main Unit and the Toilet Bowl	28	
Gap between the Main Unit and the Toilet Lid	29	
Wand	30	
Wand cleaning		
Water Filter Drain Valve.....	31	
Changing Settings	32	Reference
What to Do?.....	38	
● If you cannot operate with the remote control	38	
● Freeze Damage Prevention ...	38	
● Long Periods of Disuse	40	
Troubleshooting	41	
Specifications	45	
Warranty	46	



Safety Precautions

These precautions are important for safe usage. Be sure to follow them and use the product correctly.



Symbols and Meanings

	WARNING	May result in death or serious injury.
	CAUTION	May result in injury or property damage.

The following symbols are used to indicate important safety instructions for the use of the product.

Symbol	Meaning
	This symbol indicates a prohibited use of the product.
	This symbol is used to indicate a required step in the use of this product.

- This product is classified as Class 1 Equipment and must be grounded.
- Install this equipment where the electrical outlet is accessible.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Use the new hose set included with this equipment. Do not reuse an old hose set.

 WARNING	
	Do not touch the power plug or connection of power cord with wet hands. • Doing so may cause electrical shock.
	Do not get any water or cleaning solution on the main unit or power plug or connection of power cord. • Doing so may cause fire, electrical shock, heat or short circuit. • Doing so may cause the product to crack resulting in injury or water damage.
	Never disassemble, repair or alter. • Doing so may cause fire, electrical shock, heat or short circuit.
	Do not install the product on moving vehicles such as wheeled vehicles or boats. • Doing so may cause fire, electric shock, short circuit or malfunction. • The toilet seat, toilet lid, main unit or other parts may come loose and fall off, resulting in injury.

WARNING

Do not use the Washlet if a malfunction occurs.

- In the following cases, switch the breaker on the distribution board to OFF and close the shutoff valve.
- Close the water shutoff valve to stop water supply.

Possible malfunctions:

- Water is leaking from a pipe or the main unit.
- The product is cracked or broken.
- The product makes a strange noise or emits a strange odor.
- The product emits smoke.
- The product is abnormally hot.
- The toilet seat cushion is out of place.

- Continued use after malfunction could cause a fire, electric shock, heat, short circuit, injury or water damage.

Only use tap water or potable well water (underground water).

Do not use seawater.

- Doing so may cause irritation to the skin and malfunction.

Do not touch the power plug or connection of power cord during thunderstorms.

- Doing so may cause electrical shock.

Do not allow the water supply hose to touch the power plug, outlet or connection of power cord.

- Doing so may cause condensation resulting in a fire, electrical shock, heat or a short.

Do not do anything that may damage the power cord, power plug.

Do not strike, yank, twist, excessively bend, damage, alter, or heat the electrical cords. Also, do not place anything heavy on, bind or pinch the electrical cords.

- Using a damaged electrical cord may result in a fire, electrical shock, heat or short.

Do not use a loose or faulty electrical outlet.

- Doing so may cause fire or short circuit.

Do not use any outlet or wiring equipment beyond its specified rating.

- Plugging too many plugs into the same outlet, for example using outlet splitters, can cause fire due to heat.

Do not use any power supply other than the one specified.

AC 220-240V, 50Hz/60Hz

- Doing so may cause fire or excessive heat.

Do not stick a finger or anything else into the warm air outlet.

Do not place anything on the warm air outlet or drape clothes over it.

- Doing so may cause burns, electrical shock or malfunction.

Keep cigarettes and other open flames away from the product.

- Failure to do so may cause fire.



Safety Precautions (Continued)

WARNING

Beware of irritation or burn

- Improper use of the toilet seat may cause irritation or burn.
When sitting for a long time on the toilet seat, switch the toilet seat temperature adjustment to "OFF".
When any of the following persons use a heated seat or warm air drying, someone should switch the toilet seat temperature adjustment to "OFF" and switch the drying air temperature to "Low".
 - Young children, the aged and other users unable to set the temperature appropriately themselves
 - The ill, physically disabled and others who do not have freedom of movement.
 - Those using any medicines that cause drowsiness (sleeping or cold medicine), those who have been drinking heavily, anyone severely fatigued and anyone else liable to fall asleep.

This is an electrical product. Do not install it anywhere water is likely to get on the product or anywhere with humidity high enough that water is likely to form on the surface of this product. When using the product in a bathroom, install a fan or ventilation port and ensure good air flow through the bathroom.

- Failure to do so may cause fire or electrical shock.

Always connect the Washlet to the cold water supply.

- Connecting to hot water supply may result in burns and equipment damage.

Check that an appropriate ground is installed.

- If the ground is not installed, if there is a breakdown or electrical current leak, the lack of a ground could cause electrical shock.
For the ground, use copper wire with a ground resistance of 100 Ω max. and a diameter of 1.6 mm min.
 - * If there is no ground installed, ask the contractor who did the installation to install the ground.



Make sure that a properly grounded (3 prong) outlet has been installed.

- Failure to install a grounded outlet could cause electrical shock in the event of a malfunction or short circuit.

Insert the power plug securely into the outlet.

- Failure to do so may cause fire, heat or short circuit.

Check that the power plug is waterproofed with silicone rubber.

- A power plug that is not water-proofed may cause fire and electrical shock.
 - * If the power plug is not water-proofed, ask the contractor who did the installation to water-proof it.

To unplug, hold the plug, not the cord.

Do not unplug by pulling the cord.

- Pulling on the cord may cause damage and result in fire or heat.

If the electric cord is damaged, avoid danger by having the manufacturer's repair department or equivalent specialist replace it.

Always turn off the breaker on the distribution board before cleaning, maintenance or examination.

- Doing so may cause electrical shock or malfunction.
Except when using "Wand cleaning"

WARNING



Preliminary studies in females suggest that overuse of continuous spraying can increase the possibility of vaginal mucosa drying and potential reduction in desirable microbial organisms.

Although these studies have not been validated, please consult your healthcare provider for concerns regarding whether these circumstances may apply to you. More importantly, if you are an individual suffering from any immune deficiency as a result of disease, chemotherapy, or other medical condition compromising the immune system you should consult your healthcare provider before use of this product.

Always switch the breaker on the distribution board to OFF before removing the main unit.

- Failure to do so may cause fire or electrical shock.

CAUTION



Do not use the product if the main unit is unstable.

- Doing so may cause the main unit to come loose and fall, resulting in injury.

If the product is damaged, do not touch the damaged section.

- Doing so may cause electrical shock or injury. Replace it immediately.

Do not apply strong force, mechanical shock, step on or stand on the toilet seat, toilet lid or main unit. Also do not place any heavy object on the toilet seat, toilet lid or main unit.

- Doing so may cause cracking or cause the main unit to come loose and fall, resulting in injury.
- Doing so may damage the product and cause injury or water damage.

Do not lift up this product by the toilet seat or lid.

Do not raise the toilet seat or lid while objects are resting on top of the toilet.

- Doing so may cause the main unit to come loose and fall, resulting in injury.

When cleaning or maintaining the plastic parts (main unit etc.) or the water supply hose, use a kitchen cleaner diluted with water. Do not use any of the following. Toilet cleaner, household cleaner, benzene, paint thinner, powdered cleanser or nylon scrubbing pads.

- These items may damage or crack the plastic and cause injury or malfunction.
- These items could damage the water supply hose and cause a water leak.

Safety Precautions (Continued)

CAUTION



To prevent a sudden water leak, do not remove the water filter drain valve when the shutoff valve is open.

- Doing so will cause water to spurt out.
(Refer to Page 31 for instructions on cleaning the water filter drain valve.)

Do not fold or crush the water supply hose; do not damage by cutting with a sharp object.

- Doing so may cause water leaks.

Do not install the base plate, which is not attached.

- Doing so could cause a fire or damage.



If a water leak should occur, always close the shutoff valve.

When the ambient temperature is likely to drop to 0°C or lower, prevent damage to the pipes and hoses due to freezing.

- Frozen water pipes could cause the main unit and the pipes to break, resulting in a water leak.
- Regulate the room temperature to prevent the pipes and hoses from freezing during cold months.
- Drain the water.

When not using the Washlet for a long time, close the shutoff valve, drain the water from the main unit and water supply hose, and then turn off the breaker on the distribution board.

When using the product again, allow the product to refill with water first.

- Otherwise, the water in the tank might become contaminated and cause skin inflammation or other problems. (Refer to Page 39 for instructions on replenishing the water.)
- Leaving the power on may cause fire or heat.

When installing the water filter drain valve, make sure that it is securely tightened in its proper position.

- Failure to securely tighten it may cause a water leaks.

Push the main unit securely on to the base plate.

After pushing the main unit until a click sound is heard, pull it slightly toward you to make sure that the product does not detach.

- Failure to do so could cause the main unit to come loose and fall resulting in injury.


Operational Precautions

■ For prevention of malfunctions

- Do not block the remote control transmitter or receiver.

< About the seat switch >

- When you sit on the toilet seat, the seat switch turns ON, enabling you to use various features.
(A click sound is heard when the seat switch is ACTIVATED.)

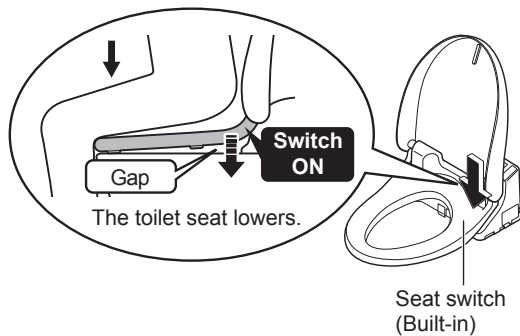

- Sit back on the toilet seat.
 - The seat switch will not turn on unless you sit on the seat properly.



Note

- When a child uses the Washlet, the seat switch may not be ACTIVATED by their light body weight.
- Since the toilet seat is designed to move up and down, a clearance is provided between the toilet seat cushion and the toilet bowl.

■ For prevention of damage

- Wipe plastic areas such as the main unit and remote control with a soft, wet cloth.
- Do not lean against the toilet lid.




■ Problem Prevention







- Switch the breaker on the distribution board to OFF if there is a risk of lightning.
- A toilet seat cover or a toilet lid cover cannot be used. (The seat switch may not function properly.)



- Do not urinate on the main unit, toilet seat or wand. (Doing so may cause pink or brown stains or a malfunction.)
- Do not apply strong forces to the control panel of the remote control.
- When using a toilet cleaner to clean the toilet, wash it off within 3 minutes and leave the toilet seat and toilet lid open. Wipe off any cleaner that remains on the toilet bowl. (If vapor from a toilet bowl cleaner enters the main unit, it may cause a malfunction.)
- Do not expose to direct sunlight. (Doing so may cause changes in color, irregular heated seat temperature, remote control malfunction or Washlet malfunction due to the change in temperature.)
- Use radios, etc. away from the Washlet. (The Washlet could cause interference with the radio signal.)
- If you use a booster seat for infants or a soft highchair, remove it after use. (Keeping it installed may prevent some of the functions from being used.)
- Do not apply force to the remote control. (May cause malfunction.)
To prevent the remote control from being dropped, set it in the hanger when you are not using it. Be careful not to expose it to water.
- Do not place anything on the toilet seat and lid, and do not press them with hands.
Failure to do so may turn on the seat switch, causing the floor to get wet if buttons on the remote control are touched and warm water comes out from the wand. (The seat switch may turn on if force is applied to the toilet seat or lid.)

Parts Names

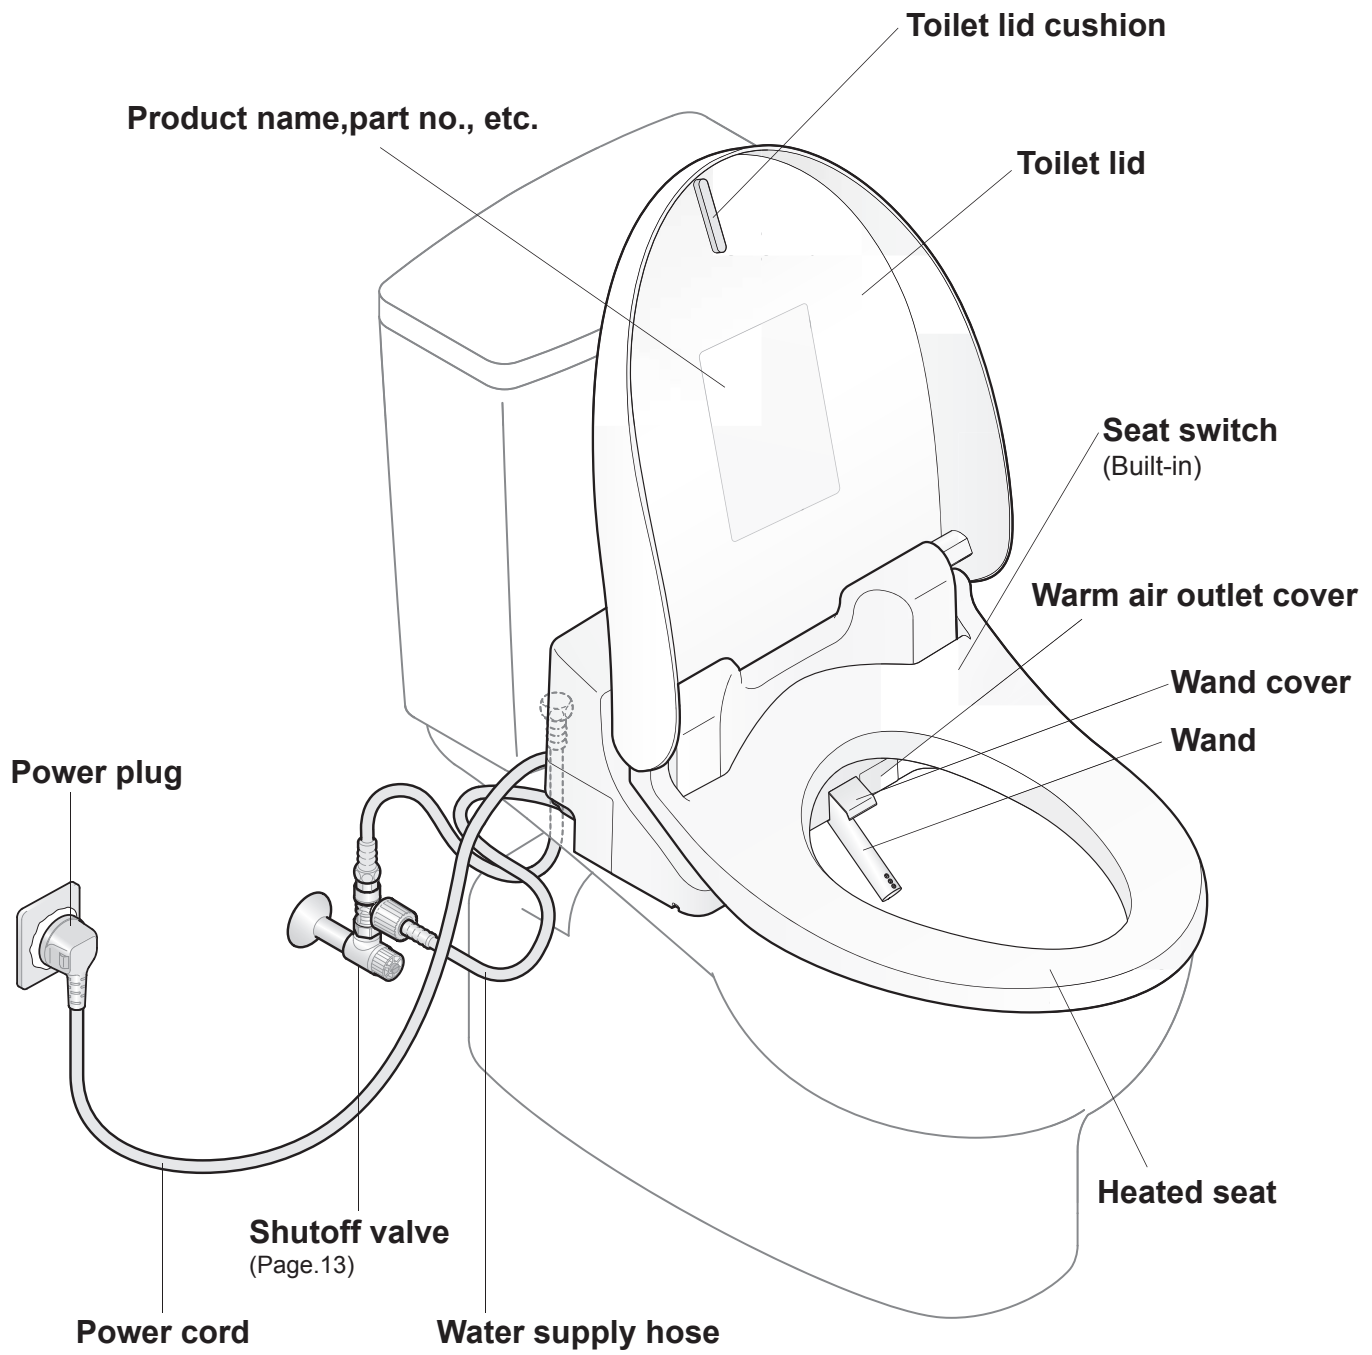

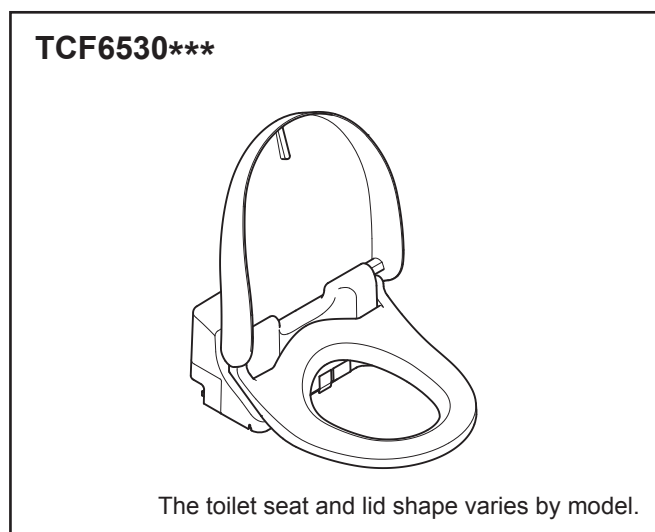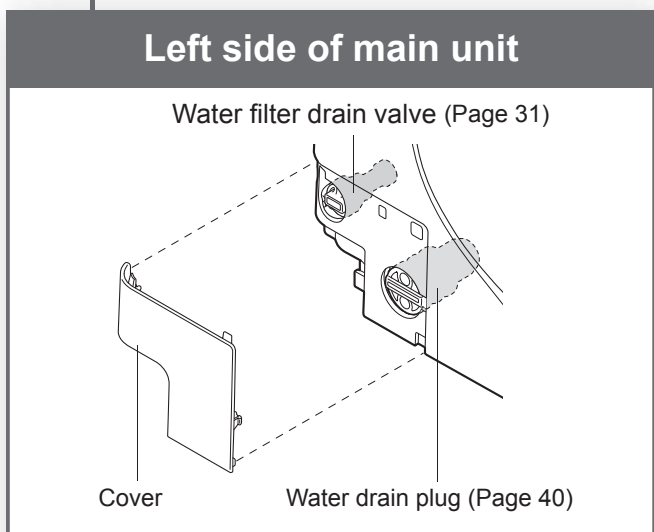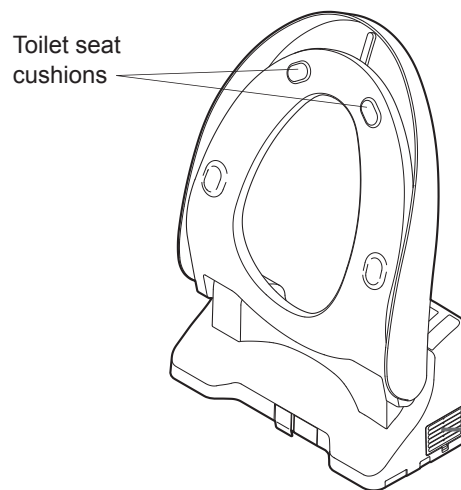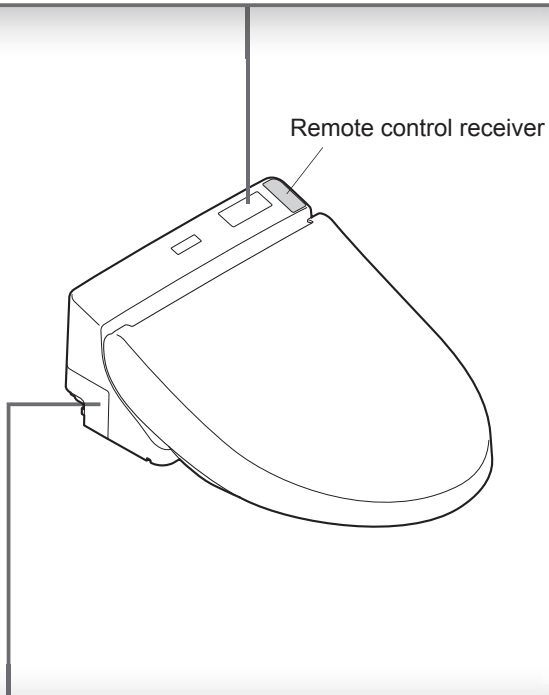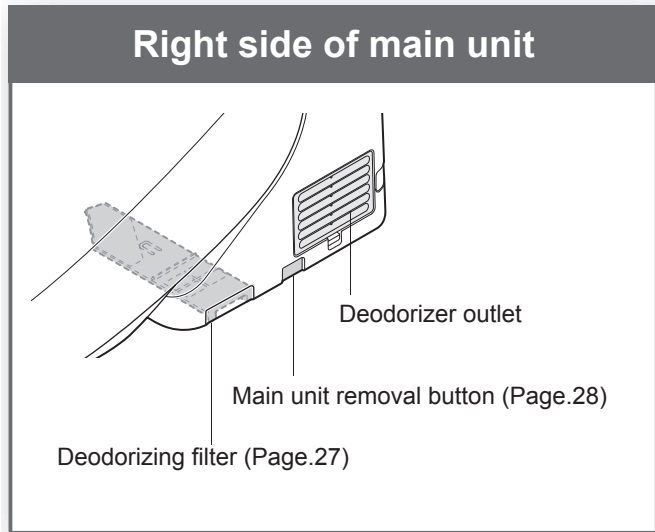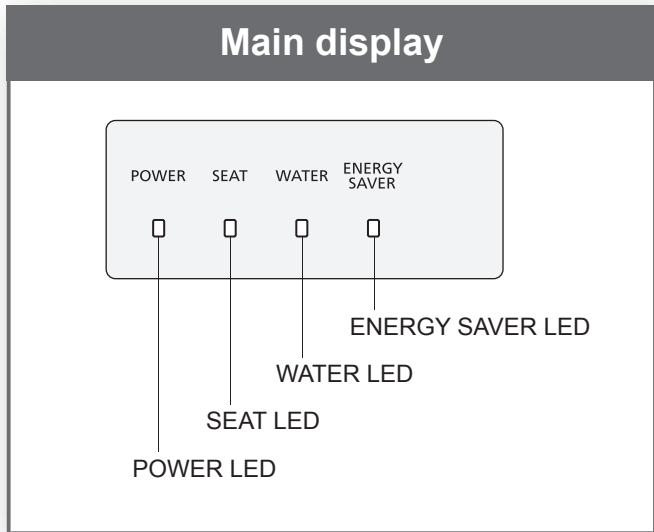


Descriptions in this manual are based on the illustrations of TCF6531***.

Preparation


Using the Product for the First Time

1. Insert the battery

- 1 Remove the remote control from the hanger.

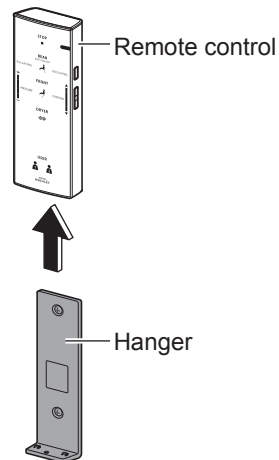

- 2 Open the battery cover and insert two AA batteries.

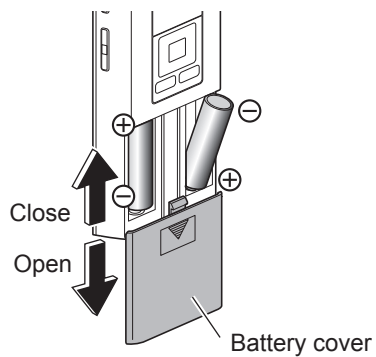

- When batteries are properly inserted, temperature levels appear on the display of the remote control (back side).
- The display goes out when no button on the remote control is pressed for 5 minute or more.


- 3 Mount the remote control in the hanger.

■ About the batteries

- Use dry cell, alkaline batteries. Follow the instructions below to prevent the batteries from rupturing or leaking fluid.
- When replacing the batteries, use new batteries of the same brand.
- If you will not be using the remote control for a long time, remove the batteries.
- Do not use rechargeable batteries.

If the remote control is secured (for anti theft)

- 1 Remove the screw from the remote control fixture.

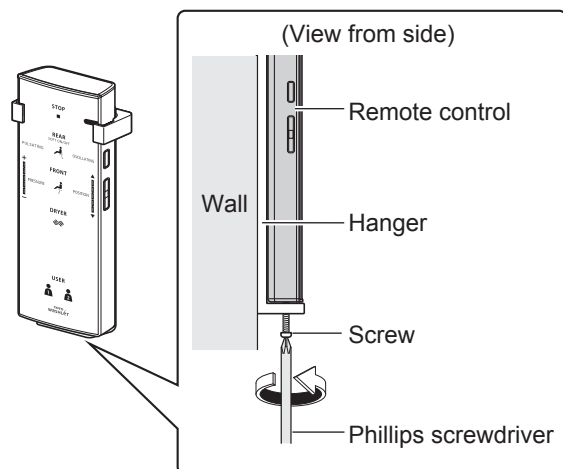


- 2 Remove the remote control from the hanger.

- To secure the remote control again
Tighten the screw.
(Overtightening may cause damage to parts such as the hanger)

2. Turn on the power


- 1 Switch the breaker on the distribution board to ON.
 - The wand extends and then retracts.

- 2 Check that the POWER LED on the main display is lit up.

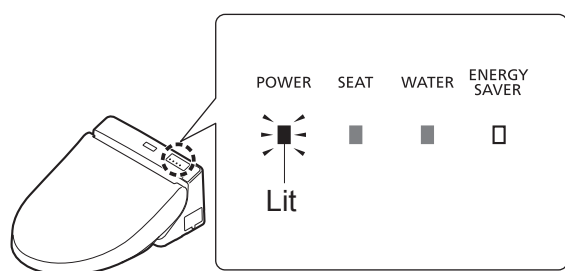


3. Open the shutoff valve

- 1 Fully open the shutoff valve.

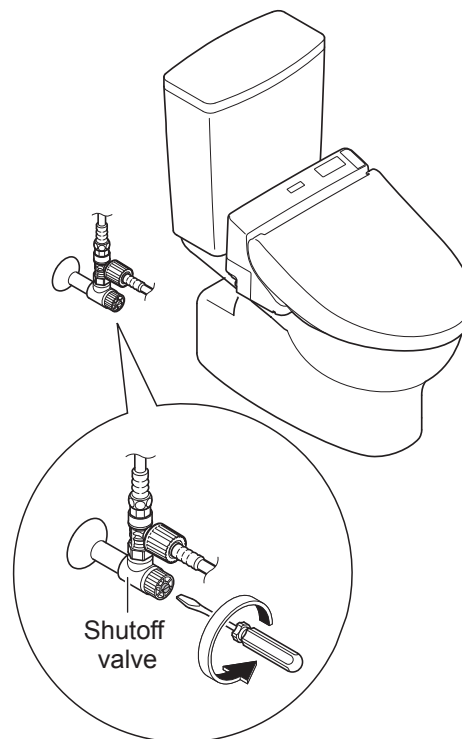

Basic Operations

Press a button on the remote control; a beep sounds when the main unit receives the signal.

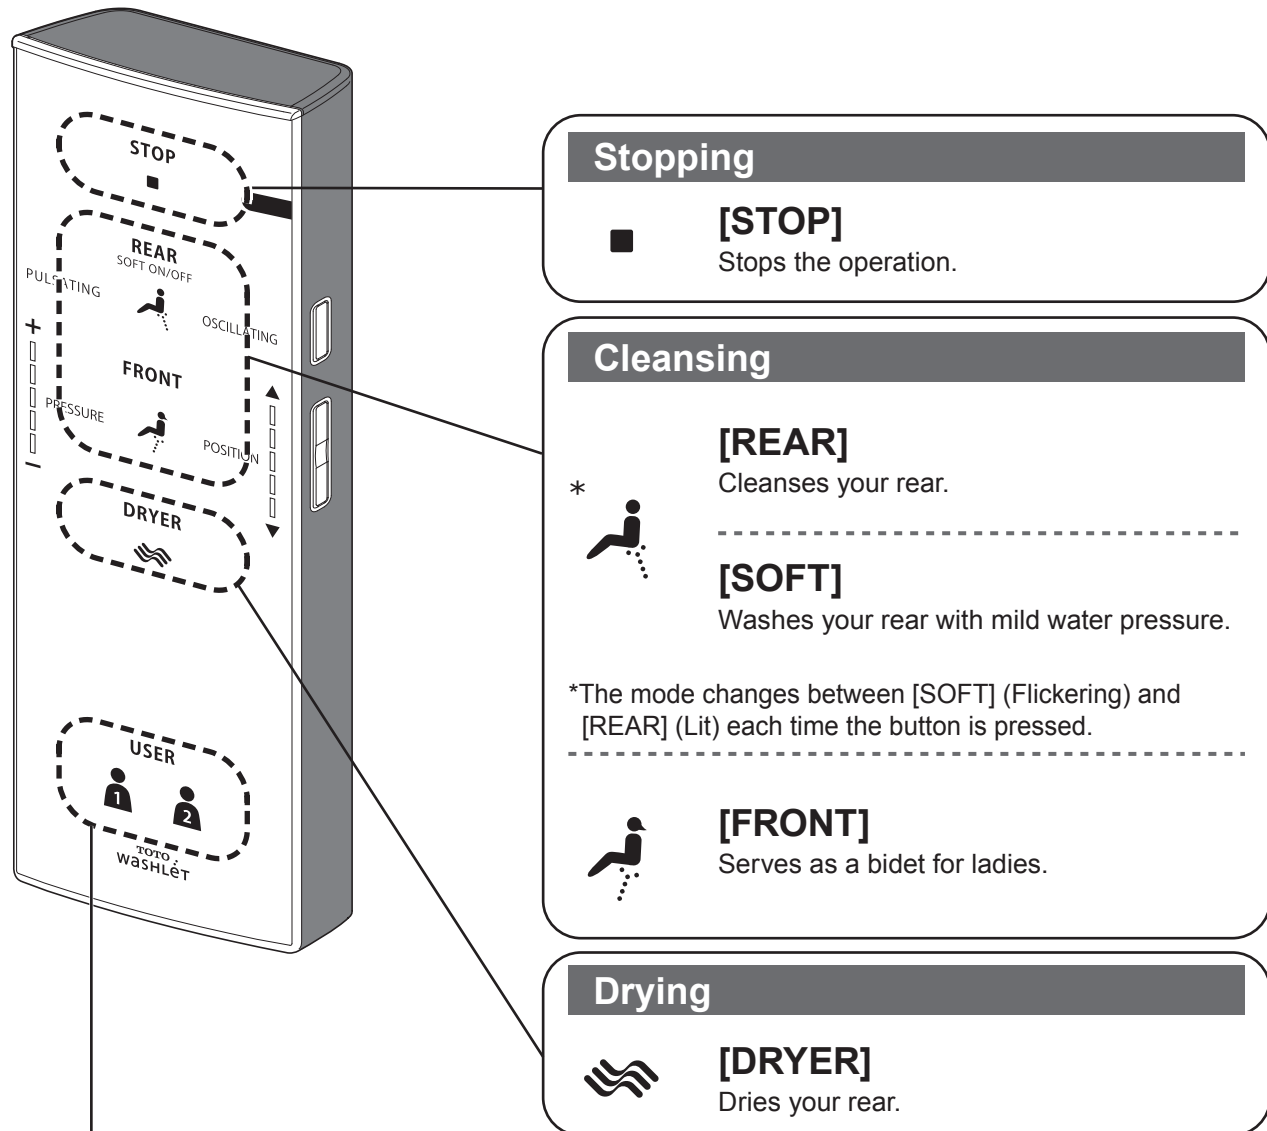


Personal Setting

[USER1] / [USER2]
 You can store your preferred wand position, water pressure and water temperature a setting.

- To store a setting
 While cleansing is in progress, set your preferred wand position, water pressure, and warm water temperature, and then press and hold [USER 1] or [USER 2] for 2 seconds or longer.
- To use
 Press [USER 1] or [USER 2], and then press the button for the cleansing you want to use.

*The wand position and water pressure lamps will light up for about 10 seconds in their set positions, and the water temperature display switches.

- Functions that operate when a button is pressed during "REAR", "SOFT", or "FRONT" cleansing.

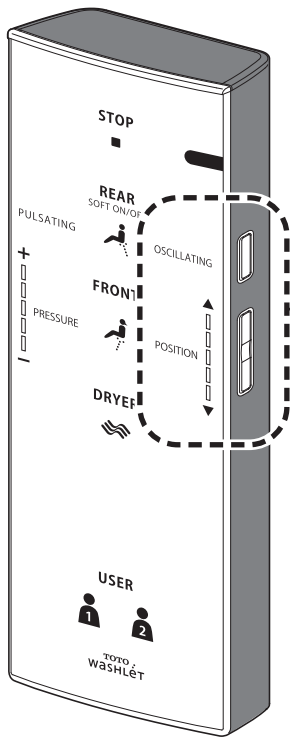


[OSCILLATING]

- The wand moves back and forth to wash your rear thoroughly.
- The setting changes between "ON" and "OFF" each time the button is pressed.

[POSITION]

- The wand position can be adjusted to the front or rear.
- ("▲": Moves to the front, "▼": Moves to the rear)

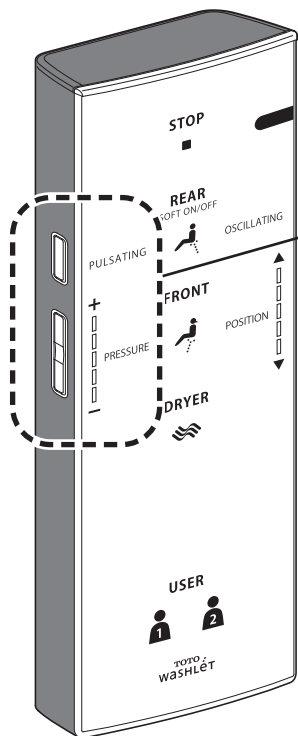

[PULSATING]

- Washes with the water pressure pulsating between soft and strong.
- The setting changes between "ON" and "OFF" each time the button is pressed.

[PRESSURE]

- The water pressure strength can be adjusted for cleansing functions such as REAR. ("-" : Softer, "+" : Stronger)

Note

- Sitting back on the toilet seat makes it easier to adjust the wand position and to reduce splashing.

For your information


- Water may sometimes come out from around the wand when it expands in the warm water tank, but this is normal.
- As the warm water tank of hot-water system is used, the temperature of warm water may become lower if it is continuously consumed.


Basic Operations

About the Menu Screen

This section is an overview of the settings that can be configured with the remote control.
• See the corresponding pages for the detailed descriptions.

Remote control back side

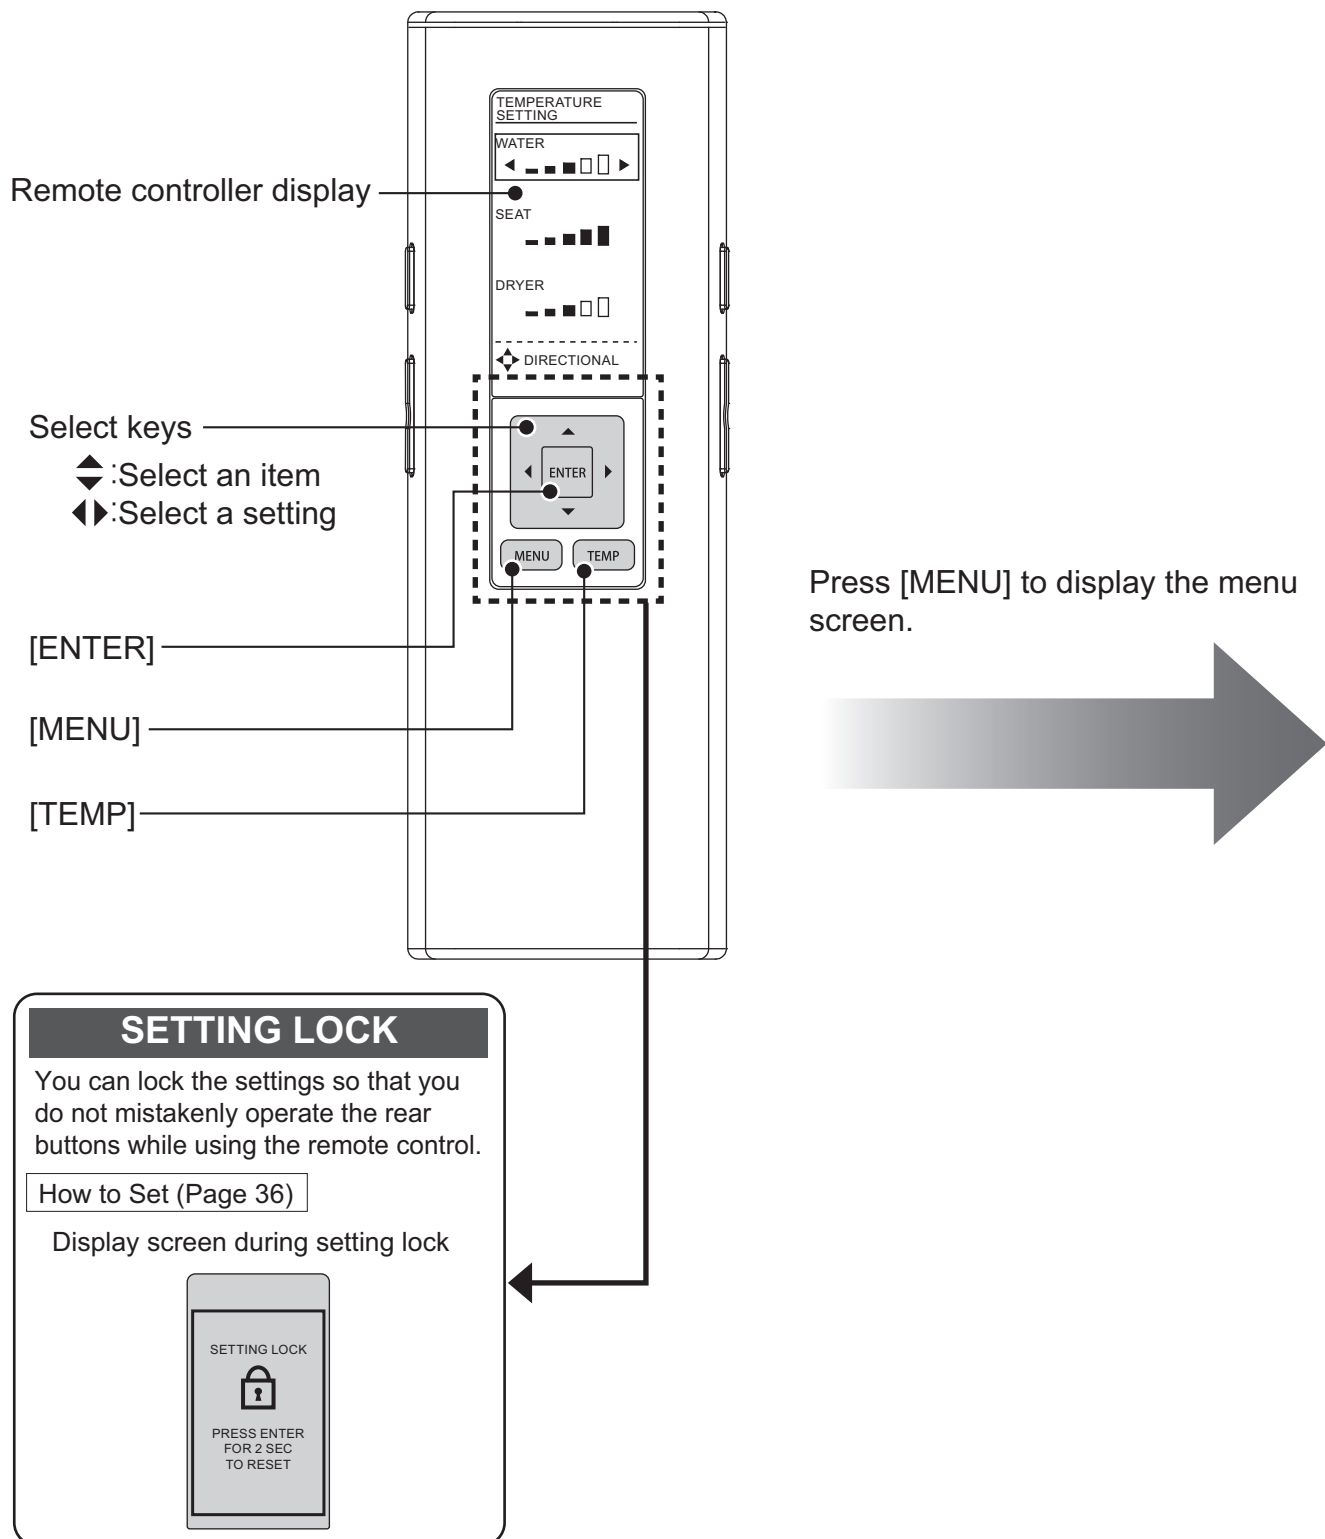

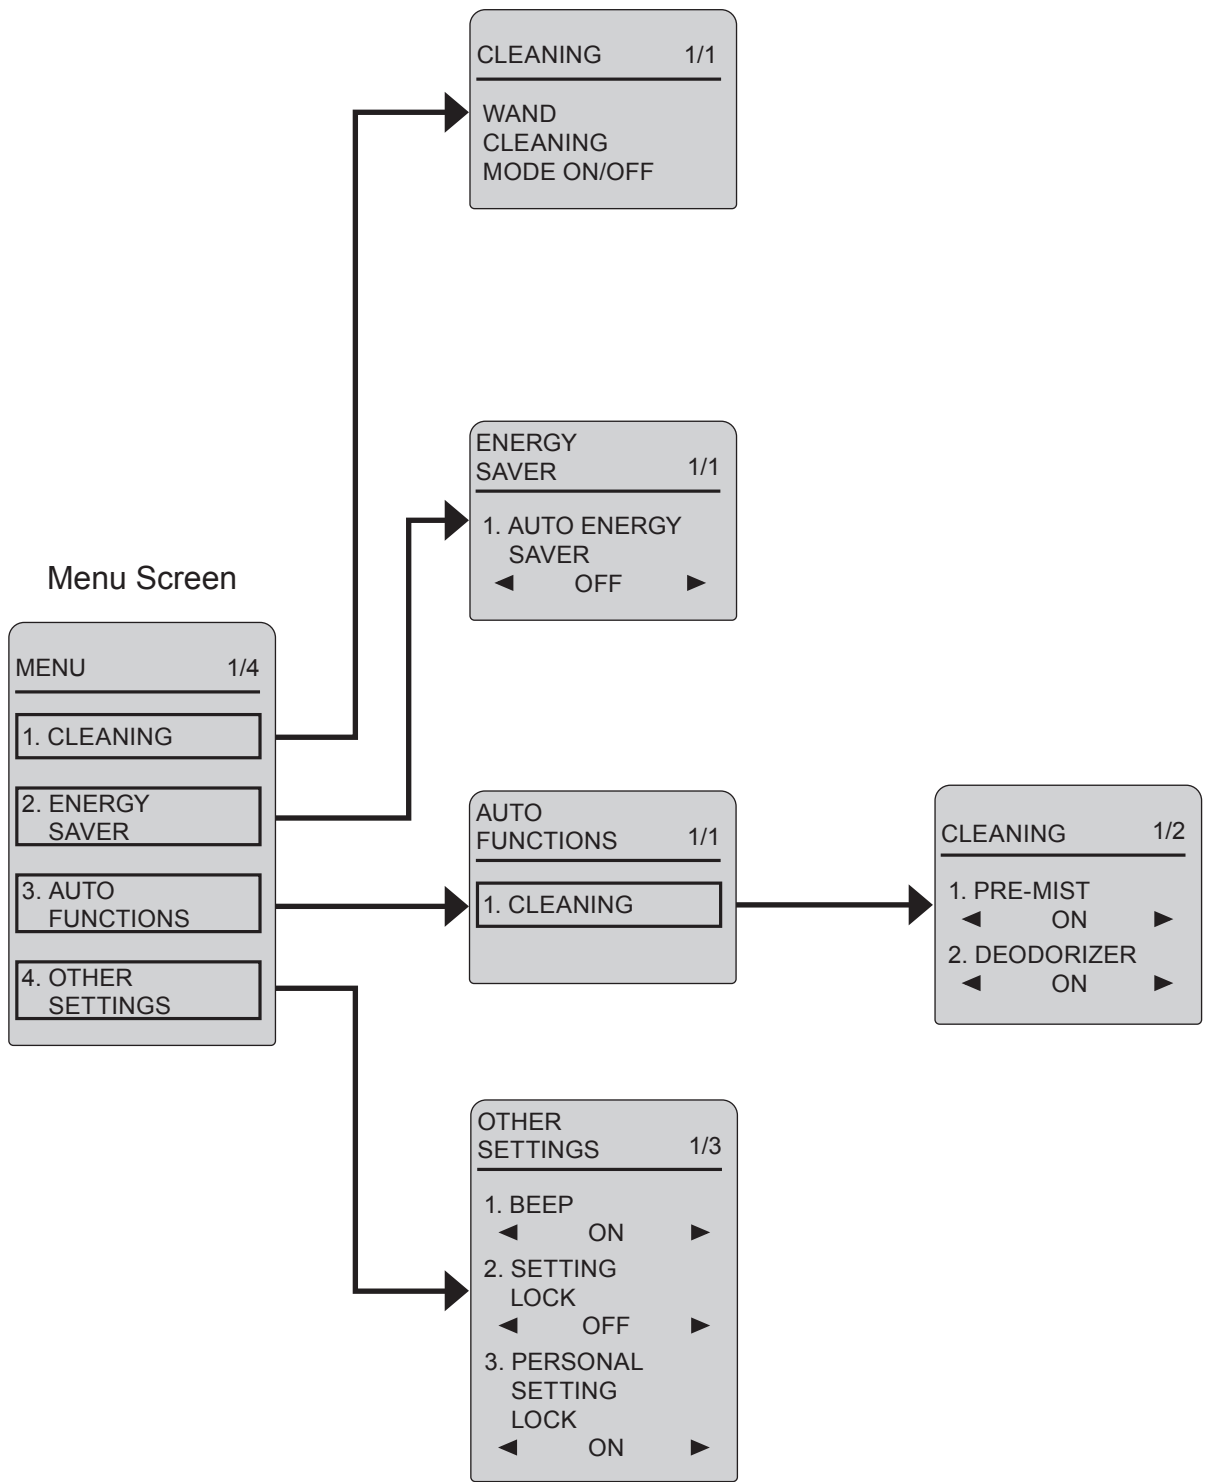






Operation

Automatic Functions

Cleaning Features

	As you approach	As you sit	As you stand up*
DEODORIZER			
		 <p>Starts the deodorizer</p>	<p>Deodorizer stops →It stops after about 2 minutes</p>
<p>A mist is sprayed inside the toilet bowl to make it more difficult for dirt to adhere</p> PRE-MIST		 <p>A mist is sprayed inside the toilet bowl.</p>	

* To sanitize the toilet bowl every time it is used, water remaining in the wand is drained after you stand up from the toilet seat.

Note

Changing settings

- DEODORIZER ON/OFF (Page 34)

- The pre-mist will not spray for about 90 seconds after you stand up from the toilet seat.

- PRE-MIST ON/OFF (Page 34)

If dirt adheres...

- **If dirt adheres to the wand during use, you can extend the wand to clean it.**

- Cleaning the wand (Page 30)


Temperature Adjustment

Warm Water / Toilet Seat / Drying

You can adjust the temperature levels or turn the settings to "OFF".

1  Press [TEMP].


2  Use  to select the item you want to set.

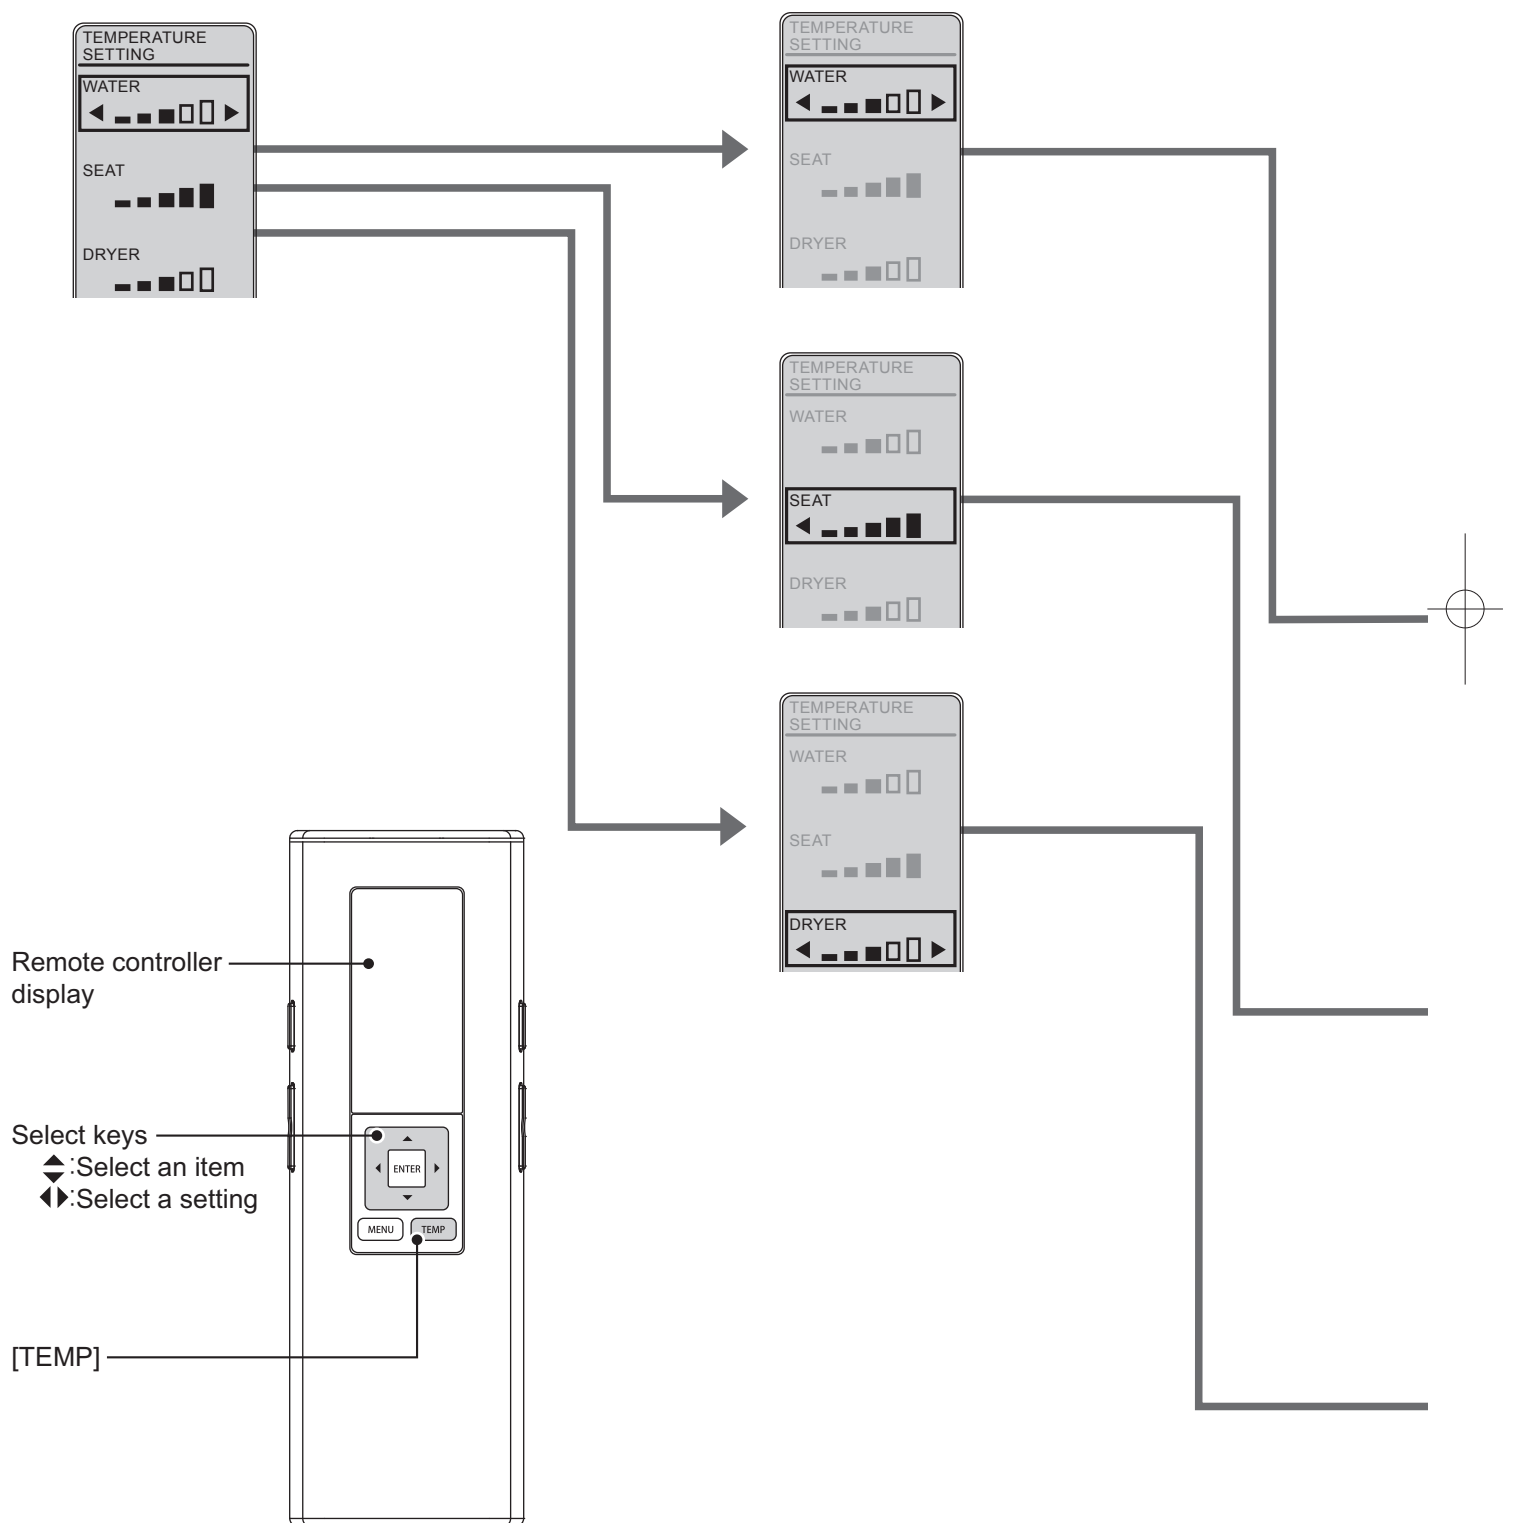




3

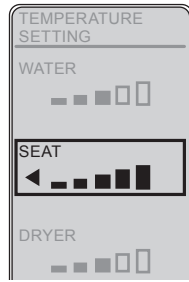

Use ◀▶ to select the temperature level. <Settings complete>



Operation

<p>Warm water temperature</p>	 <p>Press ◀ until "OFF" appears.</p> <ul style="list-style-type: none">• When "OFF" is set, the WATER LED will go off.
<p>Toilet seat temperature</p>	 <p>Press ◀ until "OFF" appears.</p> <ul style="list-style-type: none">• When "OFF" is set, the SEAT LED will go off.
<p>Drying air temperature</p>	

Energy Saver Feature





You can save energy by turning the toilet seat heater to a low temperature (or turning the heater "OFF") during periods when the toilet will be used infrequently.

- It takes about 10 days for the product to determine the periods when it is used relatively less frequently.

Type	Situation	When energy saver is set	
		Main Display	
ENERGY SAVER	<p>You want the Washlet to save energy automatically</p> <p>The Washlet detects time periods with infrequent use and lowers the toilet seat temperature automatically. Furthermore, it automatically turns off the toilet seat and warm water heater during time periods when the toilet is never used.</p>	<p>POWER SEAT WATER ENERGY SAVER Lit (Green)</p>	→
		<p>When energy saver is not set</p> <p>POWER SEAT WATER ENERGY SAVER OFF</p>	→

 Note

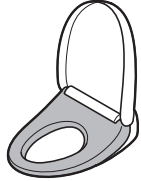- Even if the toilet seat heater is being activated (with the toilet seat heater set to "Low" or "OFF," or with the warm water heater set to "OFF"), the toilet seat will be temporarily heated when you sit on it. (To reach the setting temperature, the toilet seat and warm water take about 15 minutes and 10 minutes, respectively.)

When energy saver is in operation			AM						PM					
	Toilet seat heater	Warm water heater	0	6	8	5	9	0						
<p>Time period with infrequent use</p> <p>POWER SEAT WATER ENERGY SAVER</p> <p>OFF Lit Lit (Orange)</p>  <p>Low</p>  <p>Set temperature^{*1}</p>			<p>Example) Time period with infrequent use (from 9:00PM to 6:00AM): Low Time period the toilet is never used (8:00AM to 5:00PM): OFF</p>											
<p>Time period the toilet is never used</p> <p>POWER SEAT WATER ENERGY SAVER</p> <p>OFF OFF Lit (Orange)</p>  <p>OFF</p>  <p>OFF</p>														

Operation

*1 The temperature set on Page 20.




*2 The time period when the toilet seat heater is set to a "low temperature" by the energy saver. The warm water heater is "Set temperature".


*3 The time period when the toilet seat heater and warm water heater are "OFF".

To set energy saver Page 24 · 25



Energy Saver Feature

How to set

- 1**  Press [MENU].
- 2**  Use  to select "ENERGY SAVER" and then press [ENTER].

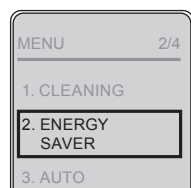

ENERGY SAVER

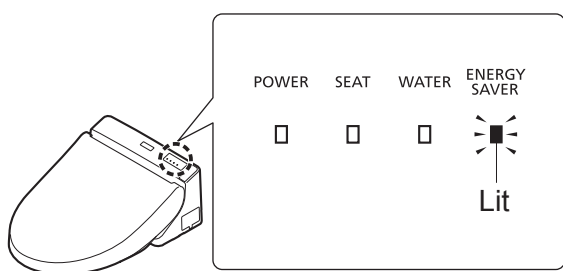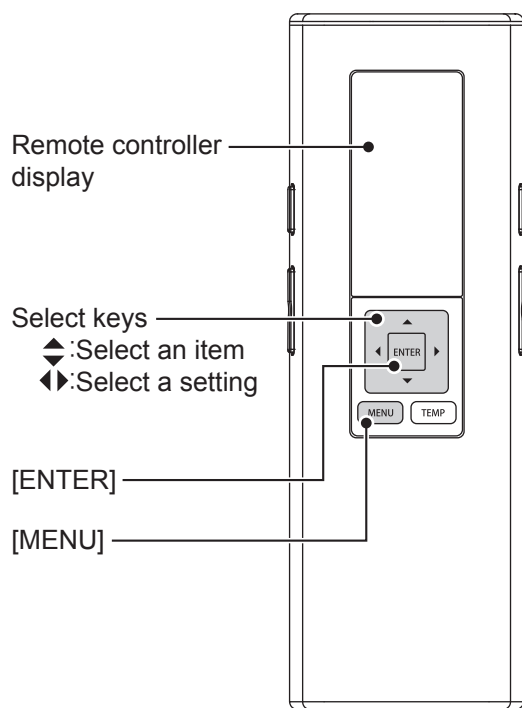


The ENERGY SAVER LED will be lit if the energy saver feature is working.
ENERGY SAVER : Lit (Orange)

3





Use to select "AUTO ENERGY SAVER".

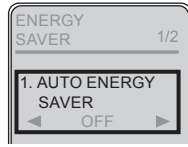

4



Use to select "ON" or "OFF" and then press [ENTER].

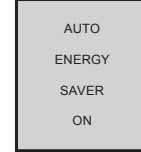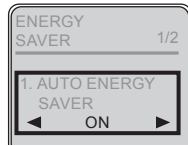

(To return →)

Operation

Maintenance

⚠ WARNING




Always turn off the breaker on the distribution board before cleaning, maintenance or examination.
(Failure to do so may cause electric shock or malfunction, resulting in a breakdown.)

*** For safety, turn off the breaker on the distribution board before cleaning or maintenance.**



Do not use a dry cloth or toilet paper on plastic parts.
(May cause damage.)

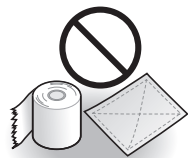


*Except when using "Wand cleaning".

Main Unit (Perform daily)



Soft cloth soaked in water

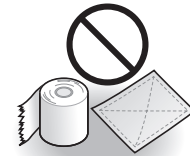

- Toilet paper
- Dry cloth
- Nylon scrubbing pads
(May cause damage.)

1

Switch the breaker on the distribution board to OFF.

2

Wipe with a soft cloth that has been soaked in water and wrung-out thoroughly.

■ For heavy dirt

- Wipe with a soft cloth soaked in diluted, neutral kitchen detergent, and then wipe with a soft cloth soaked in water.



• Neutral kitchen detergent



- Paint thinner
- Benzene
- Powdered cleanser


3

Switch the breaker on the distribution board to ON.

- The POWER LED lights up.


Attention!

- **The Washlet is an electric appliance. Be careful not to let water seep inside or leave detergent in the gap between the main unit and toilet bowl.**
(May damage plastic parts or cause a malfunction.)
- **When using a toilet cleaner to clean the toilet, wash it off within 3 minutes and leave the toilet seat and toilet lid open.**
 - Wipe off any cleaner that remains on the toilet bowl. (If vapor from a toilet bowl cleaner enters the main unit, it may cause a malfunction.)
- **Do not push or pull the covers around the wand with undue force.**
(May cause damage or malfunction.)

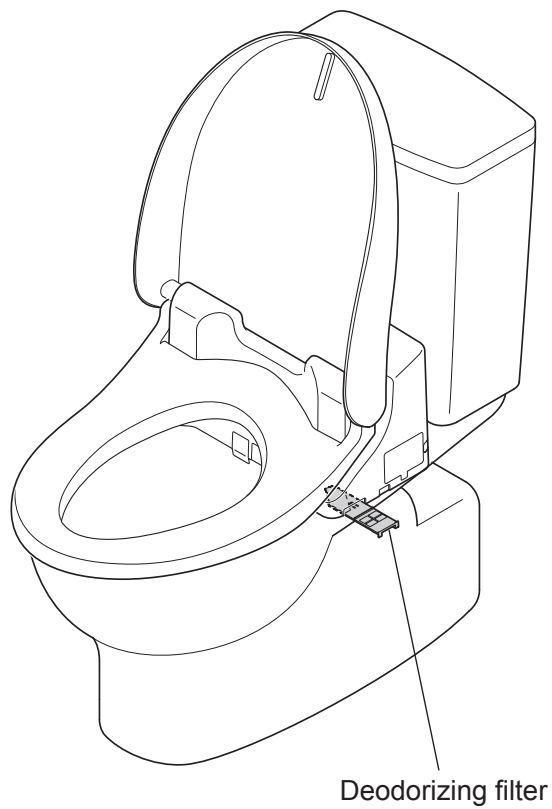


Deodorizing filter (Perform monthly) <If you notice odors>


- 1** Switch the breaker on the distribution board to OFF.
- 2** Remove the deodorizing filter.
 - Hold the knob and pull outward.
 - Do not pull with undue force.
(May cause damage or malfunctions)

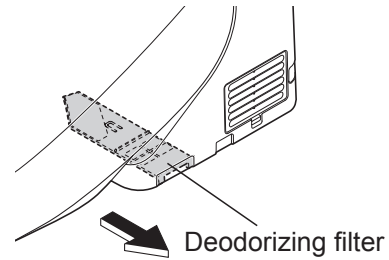

- 3** Clean with a tool such as a toothbrush.
 - When washing with water, dry off all water before mounting.

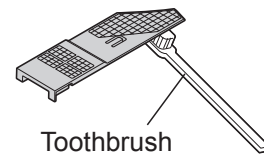

- 4** Mount the deodorizing filter.
 - Push firmly until a click sound is heard.

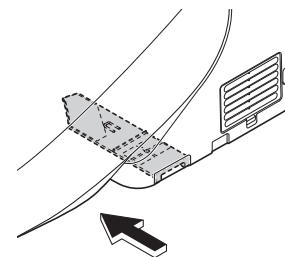

- 5** Switch the breaker on the distribution board to ON.
 - The POWER LED lights up.

Maintenance

Gap between the Main Unit and Toilet Bowl (Perform monthly)

You can remove the main unit to clean the top of the toilet bowl and the bottom of the main unit.



Soft cloth soaked in water




Toilet paper, etc. (May cause damage.)

- 1 Switch the breaker on the distribution board to OFF.

If the breaker on the distribution board is not turned off, the unit may malfunction or cause a failure or electric shock

- 2 Remove the main unit.

- Do not pull the unit with undue force (because the water supply hose and power cord are attached).

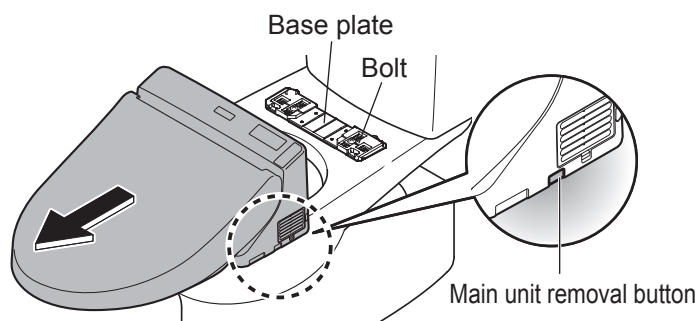


Pull the main unit toward you while pressing the button.

- 3 Clean the gap.

- Wipe with a soft cloth soaked in a diluted, neutral kitchen detergent. Then, wipe it with a soft cloth soaked in water so that no detergent remains.

- 4 Mount the main unit.

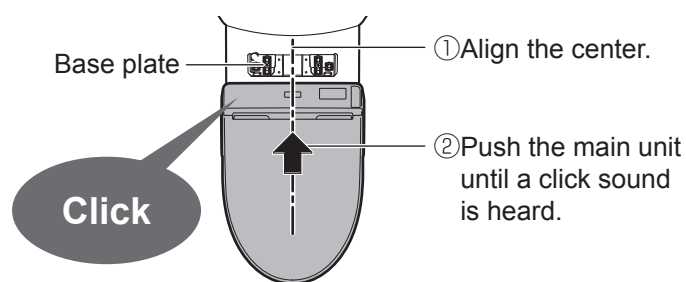

① Align the center.

② Push the main unit until a click sound is heard.

CAUTION

Push the main unit firmly onto the base plate until a click sound is heard.

After mounting, check that the main unit does not detach even when pulled.

- 5 Switch the breaker on the distribution board to ON.


- The POWER LED lights up.

Gap between the Main Unit and the Toilet Lid (Perform monthly)

The toilet lid can be removed for thorough cleaning.



Soft cloth soaked in water

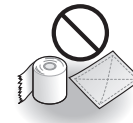

Toilet paper, etc.
(May cause damage.)

1 Switch the breaker on the distribution board to OFF.

2 Remove the toilet lid.

Ⓐ: Pull the left side outward.



Ⓑ: Disconnect the hinge from the recess and pull up.



Ⓒ: Disconnect the right side.

3 Wipe with a soft cloth that has been soaked in water and wrung-out thoroughly.

4 Reinstall the toilet lid.

Ⓓ: Join the pin and the hinge on the right side.



Slightly tilt the toilet lid to the front.

Ⓐ: While pulling out the left side,



Ⓔ: Mount by joining the hinge with the recess.

* Be careful not to pinch your fingers.


5 Open and close the toilet lid to check the mounting, and then mount the main unit.

6 Switch the breaker on the distribution board to ON.


- The POWER LED lights up.

Removing and Reinstalling

Hold with both hands

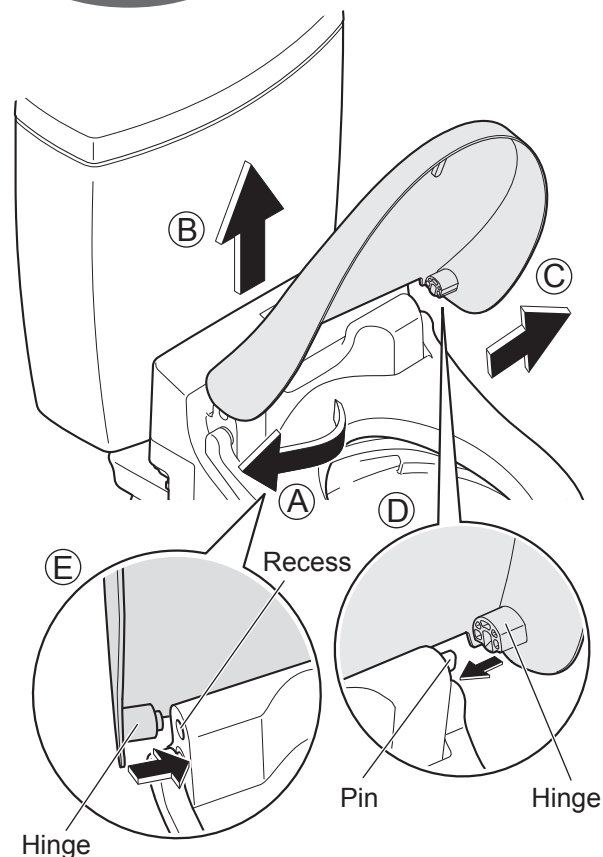

Maintenance

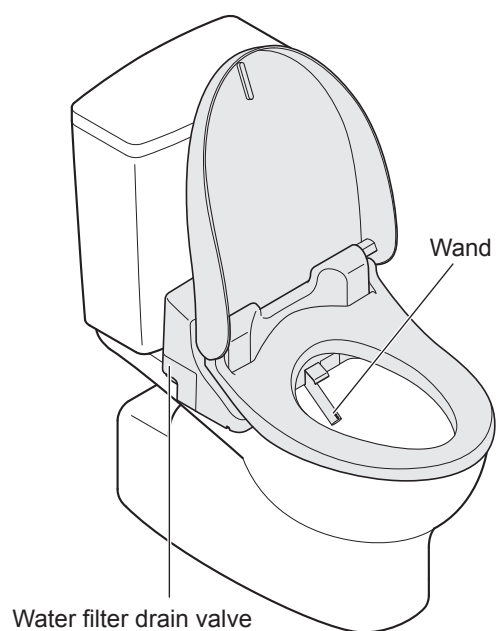


Wand (Perform monthly)

<Wand cleaning> If you notice dirt



Soft cloth soaked in water

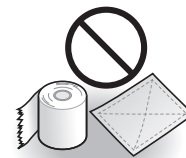


Toilet paper, etc.
(May cause damage.)

1


Extend the wand.

- Operate with the buttons on the back side of the remote control.

(1) Press [MENU].

(2) Use  to select "CLEANING".

Press [ENTER].

(3) Use  to select "WAND CLEANING MODE ON/OFF".


Press [ENTER].

- The wand extends and water sprays out for cleaning.
- The wand automatically retracts after about 5 minutes.

2

Wipe with a soft, wet cloth.


Do not pull, push or press the wand with excessive force. (May cause damage or malfunction.)

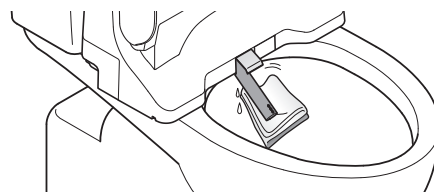

3

Press [STOP] on the front side of the remote control.

- The wand retracts.

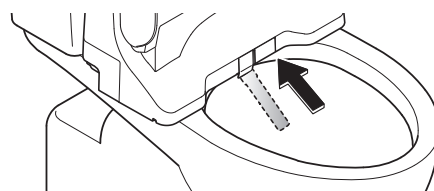

Water filter drain valve (Perform once every 6 months)

<If you think the water pressure has weakened>

1 Close the shutoff valve.

- The water supply stops.



CAUTION



Do not remove the water filter drain valve while the shutoff valve is open.
(Otherwise, water may leak out)

2 Extend the wand.

- Operate with the buttons on the back side of the remote control.

- (1) Press [MENU].
- (2) Use  to select "CLEANING".
Press [ENTER].
- (3) Use  to select "WAND CLEANING MODE ON/OFF".
Press [ENTER] to extend the wand.



Press [ENTER] again to retract the wand.

(Release the pressure from the water supply pipe.)

3 Switch the breaker on the distribution board to OFF.

4 Remove the cover and water filter drain valve.

- Loosen with a flat-head screwdriver and then pull.

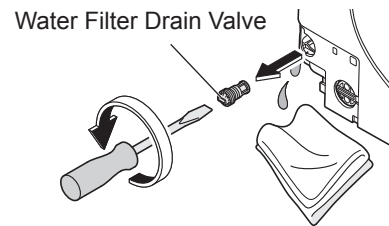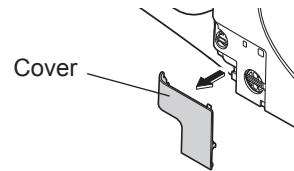


5 Clean with a tool such as a toothbrush.

- Also, remove any dust from inside the hole of the water filter drain valve.

6 Reinstall the water filter drain valve and cover.

- Insert the water filter drain valve and tighten it securely with a flat-head screwdriver.

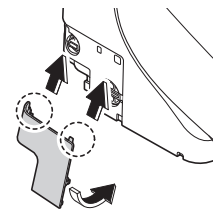


7 Switch the breaker on the distribution board to ON.

- The POWER LED lights up.

8 Open the shutoff valve.

Changing Settings

Setting List

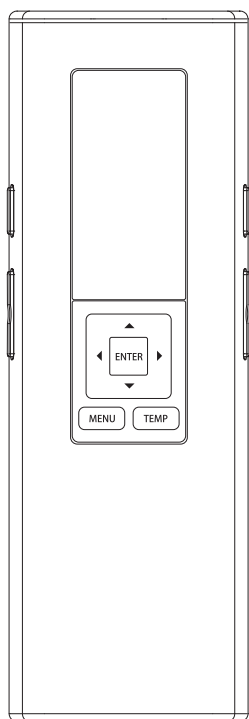


Setting Types		
AUTO FUNCTIONS	CLEANING	PRE-MIST
		DEODORIZER
OTHER SETTINGS	BEEP	
	SETTING LOCK	
	PERSONAL SETTING LOCK	



		Available Settings*	Setting Ref. Page
	<ul style="list-style-type: none"> • Set whether or not to spray mist automatically after sitting on the toilet seat 	ON/OFF	Page 34
	<ul style="list-style-type: none"> • Set whether or not to deodorize automatically after sitting on the toilet seat 	ON/OFF	
	<ul style="list-style-type: none"> • Set whether or not to make a beep sound 	ON/OFF	Page 36
	<ul style="list-style-type: none"> • Set whether or not to use the setting lock 	ON/OFF	
	<ul style="list-style-type: none"> • Set whether or not to use the personal setting lock 	ON/OFF	

*The black text is the initial setting.


Changing Settings

CLEANING

1  Press [MENU].


2  Use  to select "AUTO FUNCTION" and then press [ENTER].

3  Use  to select "CLEANING" and then press [ENTER].

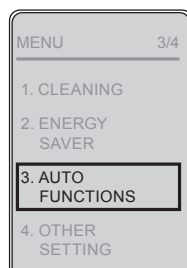


Set whether or not to spray mist automatically after sitting on the toilet seat
PRE-MIST

Set whether or not to deodorize automatically after sitting on the toilet seat
DEODORIZER

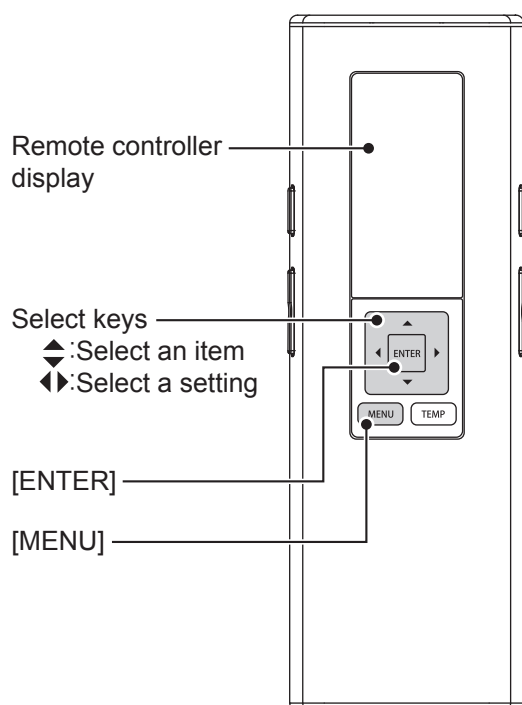


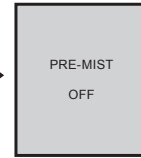
Items set on this display

- 1. PRE-MIST
- 2. DEODORIZER

4 Use  to select "PRE-MIST".




5 Use  to select "ON/OFF" and then press [ENTER].





(To return → )

4 Use  to select "DEODORIZER".




5 Use  to select "ON/OFF" and then press [ENTER].

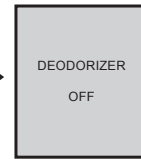




(To return → )

Changing Settings

OTHER SETTINGS

1  Press [MENU].

2  Use  to select "OTHER SETTING" and then press [ENTER].

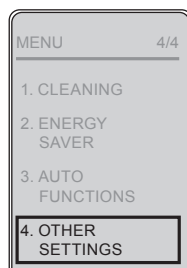


 ENTER

Set whether or not to make a beep sound
BEEP

Set whether or not to use the setting lock
SETTING LOCK


Set whether or not to use the personal setting lock
PERSONAL SETTING LOCK

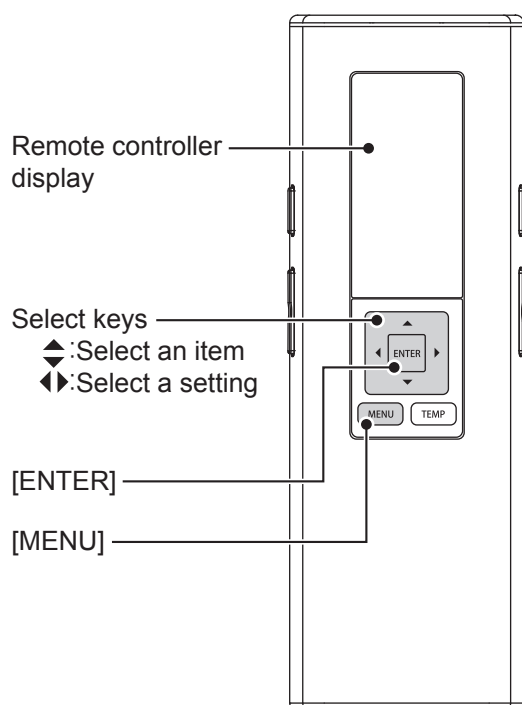


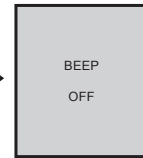
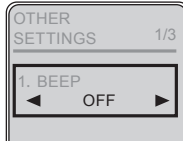
Items set on this display

1. BEEP
2. SETTING LOCK
3. PERSONAL SETTING LOCK

3 Use  to select "BEEP".

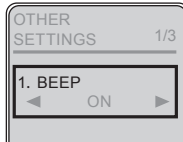


4 Use  to select "ON/OFF" and then press [ENTER].





(To return → )


3 Use  to select "SETTING LOCK".



4 Use  to select "ON/OFF" and then press [ENTER].

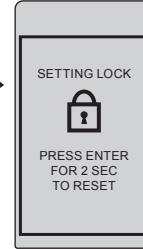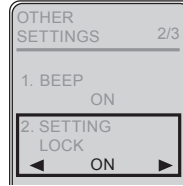

5 Check the displayed screen.

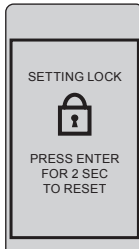



Display screen during setting lock



Cancellation method:
Press [ENTER] for 2 seconds or longer.


*If you want to relock after cancellation, reconfigure the setting.

3 Use  to select "PERSONAL SETTING LOCK".

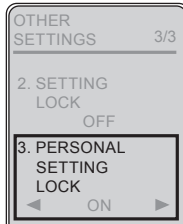

4 Use  to select "ON/OFF" and then press [ENTER].

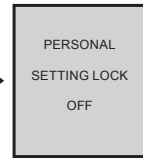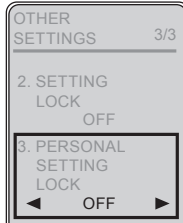

(To return → )


What to Do?

If you cannot operate with the remote control

The batteries may have worn out.
Replace the batteries.

■ Replacing the batteries

- 1** Switch the breaker on the distribution board to OFF.
 - The POWER LED goes off.
- 2** Remove the remote control from the hanger.
(Page12)
- 3** Open the battery cover and replace the AA batteries.
(Page12)
- 4** Mount the remote control in the hanger.
- 5** Switch the breaker on the distribution board to ON.
 - The POWER LED lights up.

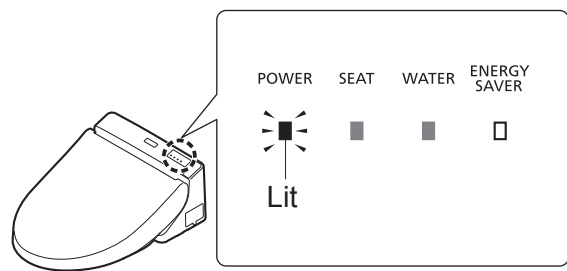

Freeze Damage Prevention

When the ambient temperature is likely to drop to 0°C or lower, take measures to prevent freezing.


Attention!

- When the ambient temperature is likely to drop to 0°C or lower, do not use the energy saver feature. (May damage the product.)
- Warm the bathroom or take measures against freezing so that the ambient temperature does not drop below 0°C.

Freeze damage prevention


■ How to drain the water

- 1** Close the shutoff valve.

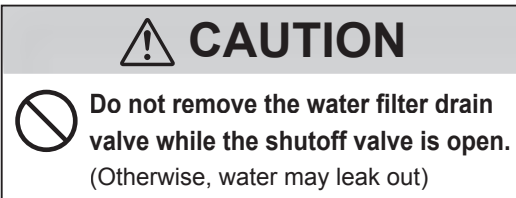

- 2** Drain the water from the toilet tank.


- Turn the flush handle of the toilet tank to the full flush side.
- Turn the lever until water flow stops.

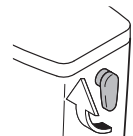


Freeze damage prevention (continued)

3

Drain the pipe.

- (1) Extend the wand.
 - Operate with the buttons on the back side of the remote control.
 1. Press [MENU].
 2. Use  to select "CLEANING".


Press [ENTER].

 3. Use  to select "WAND CLEANING MODE ON/OFF".


Press [ENTER] to extend the wand.

 - Hold the wand in the extended position until no more water comes from around the wand.


Press [ENTER] again to retract the wand. (Release the pressure from the water supply pipe.)
- (2) Switch the breaker on the distribution board to OFF.
- (3) Remove the cover and water filter drain valve.

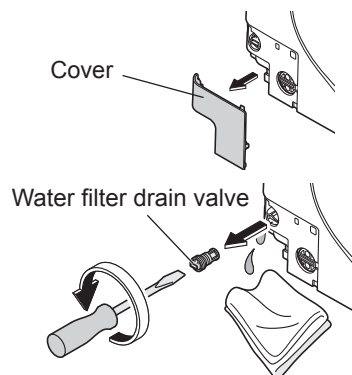

- (4) Drain the water from the water supply hose.

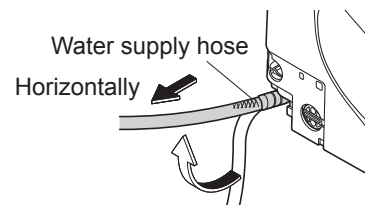

- (5) After draining the water, install the water filter drain valve and cover.
 - Insert the water filter drain valve and use a flat-head screwdriver to tighten it securely.

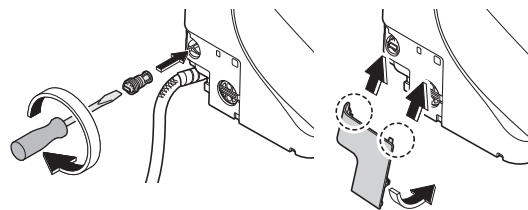

- (6) Switch the breaker on the distribution board to ON.

4

Check that the POWER LED on the main display is lit up.

(Page 13)

5

Set the water and toilet seat temperature to "High". (Page 20)

(To maintain the temperature.)

- When finished, close the toilet seat and toilet lid.

■ To use the Washlet again

- The water needs to be resupplied. (See below)

Resupplying the Water (After draining)

1

Open the shutoff valve.

- Check that water is not leaking from a pipe or the main unit.

2


If the power is not turned ON

Switch the breaker on the distribution board to ON.

3

Discharge water from the wand.

- (1) Pressing down the right side of the toilet seat,
- (2) Press [REAR] on the remote control for about two minutes to discharge water from the wand. (It takes about one minute before water comes out. Catch the water in a paper cup or other receptacle.)

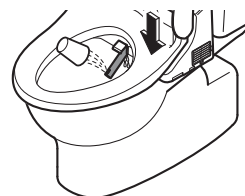

■ If the remaining water has frozen and no water comes out

- Heat the inside of the bathroom, and warm the water supply hose and shutoff valve using a cloth soaked in warm water.

What to Do?

Long Periods of Disuse


If the toilet is in a location you will not visit for a long time, drain the water.
(The water in the tank may become contaminated and cause skin irritation or other problems.)

How to drain the water


- 1** Drain the water from the toilet tank.
(Procedures **1** and **2** in "Freeze damage prevention" on page 38)
- 2** Drain the pipe.
(Step **3** (1) to (5) on Page 39)

*After draining water, keep the cover removed.

- 3** Remove the water drain plug.
 - The water comes out from near the wand for about 90 seconds.

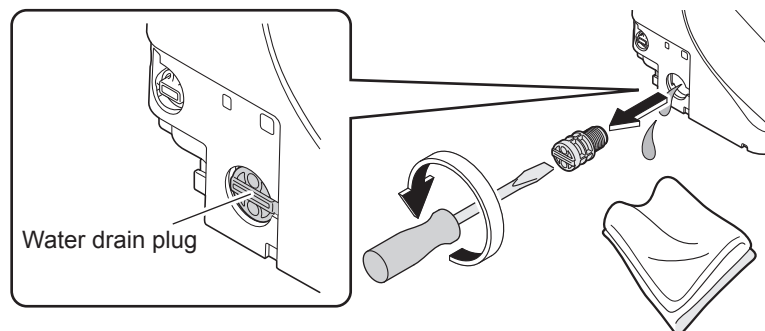

- 4** Reinstall the water drain plug and cover.

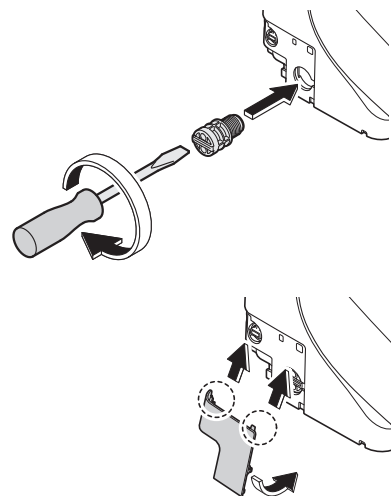

■ If water may get frozen


- Add antifreeze solution in the water in the bowl to prevent freezing.
(The antifreeze solution should not be flushed out. Collect it before using the toilet and dispose of it.)

■ To use the Washlet again

- The water needs to be resupplied. (Page 39)

Troubleshooting


First, try the actions described on pages 41 to 44. If the problem persists, consult the installer, seller or the contact listed on the back cover of this manual.

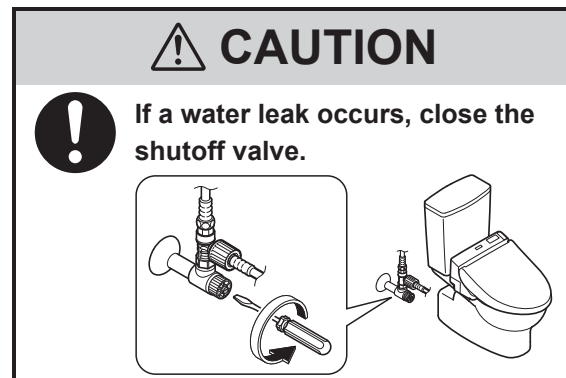

Please check first

Is the POWER LED lit?

- **Is the POWER LED flickering?**
→ The main unit is not mounted properly. Mount the main unit again. (Page 28)
- **Is the breaker on the distribution board turned on?**
→ Check whether there is a power outage or the breaker has turned "OFF".



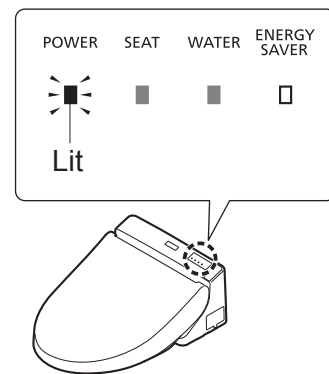


Is the ENERGY SAVER LED lit?

- **While the LED is lit, energy saver (Page 22) is in operation, so the toilet seat temperature may be reduced or the heater may be turned off.**


Is the remote control working?

- **Are the remote control batteries dead?**
→ Replace the batteries. (Page 38)
- **Is the remote control transmitter or the remote control receiver blocked?**
→ Remove obstructions, dirt, water droplets or any other blockages.

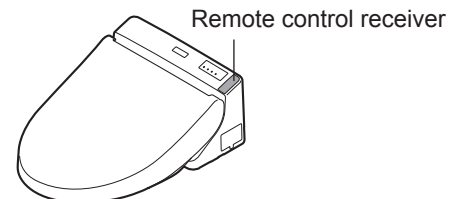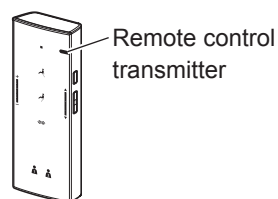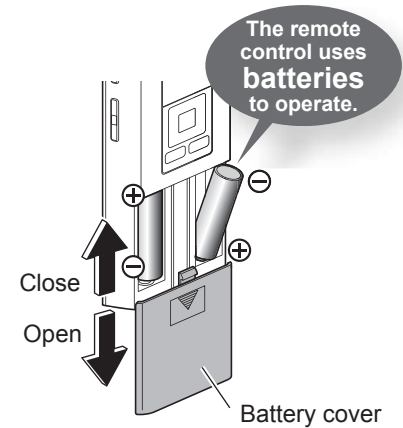

Reference

Troubleshooting

Rear and Rear soft, front cleansing, wand		
Trouble	Please check	Ref. Page
The wand (or cleansing water) does not come out	<ul style="list-style-type: none"> ● When the temperature is low, it takes time for the wand to come out after the remote control button is pressed because the water must be warmed up first. 	-
	<ul style="list-style-type: none"> ● Did you sit on the toilet continuously for 2 hours or longer? (If so, operation is stopped for safety purposes.) → Stand up from the seat and then use again. 	-
	<ul style="list-style-type: none"> ● If the water supply pressure drops significantly, for example if water is used elsewhere or if there is a water failure, the function may stop for safety. → Switch the breaker on the distribution board to OFF and wait about 10 seconds before inserting it again. If the same symptom reappears → There may be a malfunction. Consult with the contact listed on the back cover of this manual. 	-
	<ul style="list-style-type: none"> ● The seat switch may have difficulty detecting some sitting postures. → Sit back on the toilet seat. 	9
	<ul style="list-style-type: none"> ● Are you using a toilet seat cover, a toilet lid cover or a seat for infants? → Remove any covers. When using a seat for infants or a soft highchair, remove after each use. 	9
The wand extends but the cleansing water does not come out / The cleansing water pressure is weak	<ul style="list-style-type: none"> ● Has a water failure occurred? → Press the "STOP" button and wait until water service is restored. 	-
	<ul style="list-style-type: none"> ● Is the shutoff valve closed? 	13
	<ul style="list-style-type: none"> ● Is the water filter drain valve clogged with foreign matter? → Clean the filter. 	31
	<ul style="list-style-type: none"> ● Is the water pressure set to a low level? 	15
	<ul style="list-style-type: none"> ● Is the water drain plug loosened? → Tighten the water drain plug securely. 	40
The cleansing water is cold	<ul style="list-style-type: none"> ● Is the water temperature set to "OFF" or a low level? 	20
	<ul style="list-style-type: none"> ● When the temperature of the water supply or the bathroom is low, the water temperature may be low when first sprayed. 	-
Stops in the middle of use	<ul style="list-style-type: none"> ● Rear, rear soft and front cleansing stop automatically after 5 minutes of continuous use. 	-
	<ul style="list-style-type: none"> ● Does the seat switch have difficulty detecting? → Sit back on the toilet seat. If you get up slightly from the seat, or sit forward on the seat, the seating switch may temporarily stop detecting your presence. 	9
Water comes out unexpectedly from the wand	<ul style="list-style-type: none"> ● Water may sometimes come out from around the wand when it expands in the warm water tank. 	-

Warm air drying

Trouble	Please check	Ref. Page
The dryer temperature is low	<ul style="list-style-type: none"> ● Is the remote control preset temperature set to a low level? 	20
Stops in the middle of use	<ul style="list-style-type: none"> ● The feature stops automatically after 10 minutes of continuous use. ● Does the seat switch have difficulty detecting? → Sit back on the toilet seat. If you get up slightly from the seat, or sit forward on the seat, the seating switch may temporarily stop detecting your presence. 	- 9

Toilet Seat and Toilet Lid


Trouble	Please check	Ref. Page
The toilet seat is cold	<ul style="list-style-type: none"> ● Is the toilet seat temperature set to "OFF" or a low level? 	20
	<ul style="list-style-type: none"> ● Is the ENERGY SAVER LED (orange) lit? <ul style="list-style-type: none"> • When the SEAT LED (green) is also lit. → The toilet seat temperature has been lowered to save energy. When you sit, the toilet seat is temporarily heated. • When the SEAT LED is OFF. → Energy saver is operating and has turned off the toilet seat heater. When you sit on the seat, the toilet seat heater is turned on temporarily and the seat is warmed in about 15 minutes. 	22
	<ul style="list-style-type: none"> ● Have you been seated for a long time? <ul style="list-style-type: none"> • After about 20 minutes of sitting, the temperature starts going down, and after about 1 hour, the toilet seat heater is turned "OFF". → Stand up from the seat and then use again. 	-
	<ul style="list-style-type: none"> ● Did you put anything on the toilet seat or the toilet lid? → Remove the object from the toilet seat or the toilet lid. 	-
	<ul style="list-style-type: none"> ● The seat switch may have difficulty detecting some sitting postures. → Sit back on the toilet seat. 	9
	<ul style="list-style-type: none"> ● Is a toilet lid or seat cover installed? → Remove any covers. 	9

Energy Saver

Trouble	Please check	Ref. Page
The energy saver feature is not working	<ul style="list-style-type: none"> ● Because the function takes several days learning the usage conditions before starting energy saver, the amount of energy saving may be low, depending on the frequency of use. → Check the energy saver feature. 	22

Reference

Troubleshooting

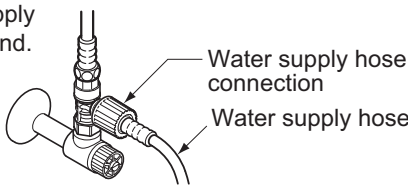Deodorizer		
Trouble	Please check	Ref. Page
The deodorizer seems to be not working	● Is "DEODORIZER" set to "OFF"? → Set to "ON".	34
	● Even after sitting down, you do not hear operation sounds. → Sit back on the toilet seat.	9
	● If you hear an operation sound when you sit on the toilet seat. → Clean the deodorizing filter.	27
A strange odor is emitted	● Are you using an air freshener or deodorizer that you purchased separately? • Doing so may reduce the effectiveness of the Washlet deodorizer or cause strange odors. → Remove the air freshener or deodorizer.	-
Others		
Trouble	Please check	Ref. Page
Water is leaking from the plumbing connections	● If any nuts in a connection are loose, firmly tighten them with a tool such as a monkey wrench. Do not use tools on the water supply hose connection. Tighten it by hand.  → If the water leak does not stop, close the shutoff valve and seek repair.	-
The display on the remote control goes out	● The display goes out when no button on the remote control is pressed for 5 minutes or more.	12
The main unit is unstable	● There is clearance between the toilet seat cushion and the toilet bowl for activating the seat switch. When you sit on the toilet seat, the toilet seat subsides slightly to activate the seat switch.	9
	● Are the bolts that anchor the main unit loose? → Remove the main unit and then firmly tighten the base plate bolts.	28
The main unit makes a sound	<Only when sitting on the toilet seat.> ● You hear operation sounds for preparing the pre-mist or spraying mist in the toilet bowl. → You can turn them "OFF".	18 34
	<When moving away from the toilet bowl after use> ● You may hear the sound of the remaining water being drained.	-
You feel air in the toilet bowl when sitting on the toilet seat	● A mist is sprayed inside the toilet bowl to make it more difficult for dirt to adhere when sitting on the toilet seat. You may feel air when a mist is sprayed. → You can turn it "OFF".	18 34

Specifications

Item		TCF6531***	TCF6530***	
Rated power supply		AC 220-240 V 50 Hz / 60 Hz		
Rated power consumption		264-309 W		
Type of water heater		Tank type		
Power cord length		1.2 m		
Water protection level		IPX4		
Functions	Cleansing	Spray volume	Rear cleansing	Approx. 0.27 to 0.43 L/min. <at 0.20 MPa water pressure>
			Rear soft cleansing	Approx. 0.27 to 0.43 L/min. <at 0.20 MPa water pressure>
			Front cleansing	Approx. 0.29 to 0.43 L/min. <at 0.20 MPa water pressure>
		Water temperature	Adjustable temperature range: OFF, about 30°C to 40°C	
		Toilet tank capacity	0.64 L	
		Heater capacity	195-232 W	
		Safety device	Temperature fuse, overheat shutoff switch (bimetal automatic return type), anti-idling float switch	
	Backflow prevention device	Vacuum breaker		
	Warm air dryer	Warm air temperature	Adjustable temperature range : about 30°C to 55°C	
		Airflow volume	Approx. 0.27 m ³ /min	
		Heater capacity	185-220 W	
		Safety device	Temperature fuse	
	Heated seat	Surface temperature	Adjustable temperature range: OFF, about 28°C to 36°C <About 26°C when energy saver is in operation>	
		Heater capacity	45-54 W	
		Safety device	Temperature fuse	
	Deodorizer	Method	O ₂ deodorization	
		Airflow volume	Approx. 0.16 m ³ /min	
		Power consumption	Approx. 5.3 W	
	Water supply pressure		Minimum required water pressure: 0.05 MPa (dynamic, 10 L/m or more), Maximum required water pressure: 0.75 MPa (static)	
	Water supply temperature		0°C to 35°C	
Working ambient temperature		0°C to 40°C		
Dimensions		W 391 mm × D 531 mm × H 188 mm	W 391 mm × D 480 mm × H 188 mm	
Weight		About 5 kg		

* Temperature around the warm air outlet measured by TOTO.

Limited Warranty

 
 
LIMITED ONE YEAR WARRANTY

1. TOTO warrants its products to be free from manufacturing defects under normal use and service for a period of one (1) year from the date of purchase. This warranty is extended only to the ORIGINAL PURCHASER.
2. TOTO's obligations under this warranty are limited to repair or replacement, at TOTO's option, of products or parts found to be defective, provided that such products were properly installed and used in accordance with this OWNER'S MANUAL. TOTO reserves the right to make such inspections as may be necessary to determine the cause of the defect. TOTO will not charge for labor or parts in connection with warranty repairs or replacements. **TOTO is not responsible for the cost of removal, return and/or reinstallation of products.**
3. This warranty does not apply to the following items:
 - a) Damage or loss sustained in a natural calamity such as fire, earthquake, flood, thunder, electrical storm, etc.
 - b) Damage or loss resulting from any unreasonable use, misuse, abuse, negligence, or improper maintenance of the product.
 - c) Damage or loss resulting from removal, improper repair, or modification of the product.
 - d) Damage or loss resulting from sediments or foreign matter contained in a water system.
 - e) Damage or loss resulting from the quality of water in the region where the product is used.
 - f) Damage or loss resulting from improper installation or from installation of a unit in a harsh and/or hazardous environment.
 - g) Damage or loss resulting from electrical surges or lightning strikes or other acts which are not the fault of TOTO or which the product is not specified to tolerate.
 - h) Damage or loss resulting from normal and customary wear and tear, such as gloss reduction, scratching or fading over time due to use, cleaning practices or water or atmospheric conditions.
4. This warranty gives you specific legal rights. You may have other rights which vary from country to country.
5. To obtain warranty repair service under this warranty, you must take the product or deliver it prepaid to a TOTO service facility, together with a letter stating the problem, or contact a TOTO distributor or product service contractor, or directly to TOTO sales office. If, because of the size of the product or nature of the defect, the product can not be returned to TOTO, receipt by TOTO of written notice of the defect shall constitute delivery. In such case, TOTO may choose to repair the product at the purchaser's location or pay to transport the product to a service facility.



WARNING! TOTO shall not be responsible or liable for any failure of, or damage to, this Product caused by either chloramines in the treatment of public water supply or cleaners containing chlorine (calcium hypochlorite).

NOTE: The use of a high concentrate chlorine or chlorine related product's can seriously damage the fittings. This damage can cause leakage and serious property damage.

THIS WRITTEN WARRANTY IS THE ONLY WARRANTY MADE BY TOTO. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY SHALL BE THE EXCLUSIVE REMEDY AVAILABLE TO THE PURCHASER. TOTO SHALL NOT BE RESPONSIBLE FOR LOSS OF USE OF THE PRODUCT OR FOR OTHER INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE OR EXPENSES INCURRED BY PURCHASER, OR FOR LABOR OR OTHER COSTS DUE TO INSTALLATION OR REMOVAL, OR COSTS OF REPAIRS BY OTHERS, OR FOR ANY OTHER EXPENSE NOT SPECIFICALLY STATED ABOVE. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR USE, ARE EXPRESSLY LIMITED TO THE DURATION OF THIS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THE ABOVE LIMITATION AND EXCLUSION MAY NOT APPLY TO YOU.



Reference

  

TOTO

**TOTO ASIA OCEANIA
PTE. LTD.**

10, Eunos Road 8, #12-07, Singapore Post Centre. Singapore 408600.
Phone : +65-6744-6955 Fax : +65-6841-0819 <http://asia.toto.com/>

**TOTO ASIA OCEANIA
PTE. LTD.**

Middle East Branch LOB19-1701-1702, Jebel Ali Free Zone, P.O. box 261804, Dubai U.A.E.
Phone : +971-4-886-5983 Fax : +971-4-886-5986 <http://asia.toto.com/>

**TOTO ASIA OCEANIA
PTE. LTD.**

Manila Representative Office. Unit 1010, 10th Floor Rufino Building, Ayala Avenue cor.V.A.
Rufina Street, Makati City, 1226 Philippines.
Phone : +63-2-887-6643 Fax : +63-2-887-4084 <http://asia.toto.com/>

**TOTO Manufacturing
(Thailand) LTD.**

598 Q HOUSE Ploenjit BLD., G Floor, Ploenchit Rd., Lumpini, Pathumwan,
Bangkok 10330, Thailand
Phone : +66-2-650-9925 Fax : +66-2-650-9923 <http://www.toto.co.th/>

**TOTO INDIA INDUSTRIES
PVT. LTD**

101, Kamla Executive Park, Opp. Vazir Glass Works,
Off. Andheri Kurla Road, Andheri (East), Mumbai 400 059, India.
Phone : +91-22-4022-3717 / 3718 Fax : +91-22-4022-3719 <http://asia.toto.com/>

**TOTO VIETNAM
Co., Ltd.**

R. 810, Daeha Business Centre, 360 Kim Ma St., Ba Dinh Dist., Ha Noi City
Phone : +84-4-37714354 Fax : +84-4-37714355 <http://toto.com.vn/>

TOTO (H.K.)LTD.

RM.1101, 11/F No.3 Lockhart Rd. Wanchai, Hong Kong
Phone : 852-2861-3177 / Fax : 852-2861-3563

- You are advised to record the following information to allow quick service.

Date of purchase :	Name of shop :
Date : year month day	Tel : ()

2014.10.21
D08890