

# TOTO

<b>TOTO ASIA OCEANIA PTE. LTD.</b>	10, Eunos Road 8, #12-07, Singapore Post Centre. Singapore 408600. Phone : +65-6744-6955 Fax : +65-6841-0819 <a href="http://asia.toto.com/">http://asia.toto.com/</a>
<b>TOTO ASIA OCEANIA PTE. LTD.</b>	Middle East Branch LOB19-1701-1702, Jebel Ali Free Zone, P.O. box 261804, Dubai U.A.E. Phone : +971-4-886-5983 Fax : +971-4-886-5986 <a href="http://asia.toto.com/">http://asia.toto.com/</a>
<b>TOTO ASIA OCEANIA PTE. LTD.</b>	Manila Representative Office. Unit 1010, 10th Floor Rufino Building, Ayala Avenue cor.V.A. Rufina Street, Makati City,1226 Philippines. Phone : +63-2-887-6643 Fax : +63-2-887-4084 <a href="http://asia.toto.com/">http://asia.toto.com/</a>
<b>Yangon Branch</b>	#303, Prime Hill Business Square, No.60, Shwe Dagon Pagoda Road, Dagon Township, Yangon, Myanmar Phone : +95-1-382710, +95-1-382720 Fax : +95-1-382638
<b>TOTO (THAILAND) LTD. Spare Part and After Service Center</b>	77 Moo 5 HSIL Industrial Zone T.Nong -Plamor A.Nong-Khae Saraburi 18140 Thailand Phone : +66-92-246-5880, +66-92-246-6612, +66-36-382-760 Fax : +66-2-650-9923 <a href="http://th.toto.com/en/index.php">http://th.toto.com/en/index.php</a>
<b>TOTO INDIA INDUSTRIES PVT. LTD</b>	101, Kamla Executive Park, Opp. Vazir Glass Works, Off. Andheri Kurla Road, Andheri (East), Mumbai 400 059, India. Phone : +91-22-4022-3717 / 3718 Fax : +91-22-4022-3719 <a href="http://asia.toto.com/">http://asia.toto.com/</a>
<b>TOTO VIETNAM Co., Ltd.</b>	R. 810, Daeha Business Centre, 360 Kim Ma St., Ba Dinh Dist., Ha Noi City Phone : +84-4-37714354 Fax : +84-4-37714355 <a href="http://toto.com.vn/">http://toto.com.vn/</a>
<b>TOTO (H.K.)LTD.</b>	RM.1101, 11/F No.3 Lockhart Rd. Wanchai, Hong Kong Phone : 852-2861-3177 / Fax : 852-2861-3563

 
- You are advised to record the following information to allow quick service.

Date of purchase :	Name of shop :
Date : year month day	Tel : (      )

# TOTO


Instruction Manual

## NEOREST DH




## NEOREST

DH TCF9575\*\*\*

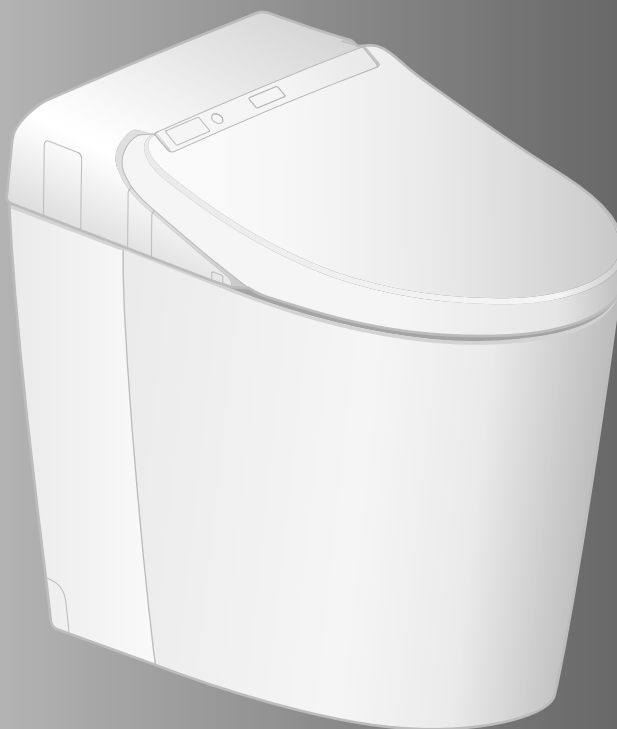


- Thank you for your recent purchase of the product.  
Please read the enclosed information to ensure the safe use of your product.
- Be sure to read this Instruction Manual before using your product and keep it in a safe place for future reference.

# What functions are available on your product?

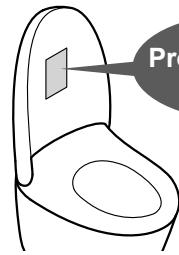

Product name,  
Part No.

■Part number system

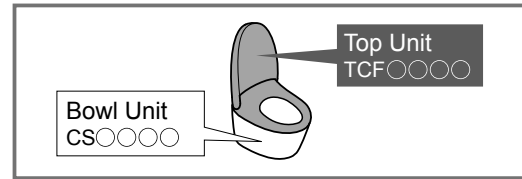

Functions			Product name (Model)		Ref. Page
			Part No.		
			NEOREST		
			DH		
			TCF9575***		
Basic Functions	Cleansing	Rear cleansing			16-17
		Rear soft cleansing	●		
		Front cleansing			
	Changing the cleansing method	Wand position adjustment			
		Water pressure adjustment			
		Oscillating cleansing	●		
		Pulsating cleansing			
	Drying	Warm air drying	●		
Changing the temperature		Temperature adjustment	●	24-25	
Sanitary Functions	Removing odors	Deodorizer	●		20-21
	"ewater+" sanitizing	Auto wand CLEAN	●		
	Bowl pre-cleaning	Pre-mist	●		
Convenience Functions	Flushing	Remote control flushing	●	16	
		Auto flushing		22-23	
	Opening and closing	Opening and closing the toilet seat with remote control	●	16	
		Auto open / close		22-23	
	Heating the toilet seat	Heated seat	●	-	
	Save energy by lowering the toilet seat temperature	Auto energy saver			26-27
Auto energy saver+		●			
Timer energy saver					
Maintenance	Cleaning lift			32	
	Removable toilet lid	●		33	
	Wand cleaning			34	

# Keep It Clean

## Sanitary Toilet



The self-cleaning functions operate automatically.  
(See pages 20 and 21 for details.)

	As you sit	As you stand up
Removing odors inside the bowl unit.	Deodorizer	Auto power deodorizer
Bowl pre-cleaning	Pre-mist	
Sanitize the wand with "ewater+"		Auto wand CLEAN



## Table of Contents

Safety Precautions.....	4	Introduction
Operational Precautions .....	11	
Parts Names .....	12	
Preparation .....	14	
Basic Operations.....	16	Operation
Automatic Functions (Cleaning Features).....	20	
Deodorizer, Auto wand CLEAN, Pre-mist		
Automatic Functions (Convenience Features) .....	22	
Auto flushing, Auto open/close		
Temperature Adjustment (Toilet Seat, Warm Water, Drying)...	24	
Energy Saver Features .....	26	
Maintenance .....	30	Maintenance
● Top Unit.....	30	
● Bowl Unit.....	31	
● Gap between the Top Unit and Bowl Unit.....	32	
● Gap between the Top Unit and the Toilet Lid.....	33	
● Wand .....	34	
Wand cleaning		
● Deodorizing Filter.....	35	
● Water Filter Drain Valve.....	36	
● Water Filter (Bowl Unit).....	37	
Changing Settings .....	38	Reference
What to Do?.....	56	
● If the water does not flow due to a power outage .....	56	
● If the water does not flow due to a water service interruption.....	58	
● If you cannot operate with the remote control.....	58	
● Freeze Damage Prevention.....	59	
● Long Periods of Disuse.....	60	
● Removal of Operation guide .....	62	
Troubleshooting.....	63	
Specifications .....	71	
Safety Guidelines .....	72	
Warranty.....	73	



# Safety Precautions

These precautions are important for safe usage. Be sure to follow them and use the product correctly.



## Symbols and Meanings

	<b>WARNING</b>	May result in death or serious injury.
	<b>CAUTION</b>	May result in injury or property damage.

The following symbols are used to indicate important safety instructions for the use of the product.

Symbol	Meaning
	This symbol indicates a prohibited use of the product.
	This symbol is used to indicate a required step in the use of this product.

- This product is classified as Class 1 Equipment and must be grounded.
- Install this equipment where the electrical outlet is accessible.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Use the new hose set included with this equipment. Do not reuse an old hose set.

 <b>WARNING</b>	
	<b>Do not touch the power plug or connection of power cord with wet hands.</b> • Doing so may cause electrical shock.
	<b>Do not get any water or cleaning solution on the top unit or power plug or connection of power cord.</b> • Doing so may cause fire, electrical shock, heat or short circuit. • Doing so may cause the product to crack resulting in injury or water damage.
	<b>Never disassemble, repair or alter.</b>
	<b>Do not use tools in places other than designated.</b> • Doing so may cause fire, electrical shock, overheating, short circuit or breakdown.
	<b>Do not install the product on moving vehicles such as wheeled vehicles or boats.</b> • Doing so may cause fire, electric shock, short circuit or malfunction. • The toilet seat, toilet lid, top unit or other parts may come loose and fall off, resulting in injury.

# WARNING

## **Do not use the product if a malfunction occurs.**

- In case of breakdown or other problem, be sure to cut off power by means such as unplugging the power plug or switching the breaker in the distribution board to OFF.

Close the water shutoff valve to stop water supply.

Possible malfunctions:

- Water is leaking from a pipe or the top unit.
- The product is cracked or broken.
- The product makes a strange noise or emits a strange odor.
- The product emits smoke.
- The product is abnormally hot.
- The bowl unit is clogged.
- The toilet seat cushion is out of place.
- Continued use after malfunction could cause a fire, electric shock, heat, short circuit, injury or water damage.

## **Only use tap water or potable well water (underground water).**

### **Do not use seawater.**

- Doing so may cause irritation to the skin and malfunction.

## **Do not touch the power plug or connection of power cord during thunderstorms.**

- Doing so may cause electrical shock.



## **Do not allow the water supply hose to touch the power plug, outlet or connection of power cord.**

- Doing so may cause condensation resulting in a fire, electrical shock, heat or a short.

## **Do not do anything that may damage the power cord, power plug.**

**Do not strike, yank, twist, excessively bend, damage, alter, or heat the power cords. Also, do not place anything heavy on, bind or pinch the power cords.**

- Using a damaged power cord may result in a fire, electrical shock, heat or short.

## **Do not use a loose or faulty electrical outlet.**

- Doing so may cause fire or short circuit.

## **Do not use any outlet or wiring equipment beyond its specified rating.**

- Plugging too many plugs into the same outlet, for example using outlet splitters, can cause fire due to heat.

## **Do not use any power supply other than the one specified.**

**AC 220 - 240 V, 50 Hz/60 Hz (For Hong Kong, AC 220 V, 50 Hz)**

- Doing so may cause fire or excessive heat.

## **Do not stick a finger or anything else into the warm air outlet.**

**Do not place anything on the warm air outlet or drape clothes over it.**

- Doing so may cause burns, electrical shock or malfunction.

## **Keep cigarettes and other open flames away from the product.**

- Failure to do so may cause fire.

# Safety Precautions (Continued)

## **WARNING**

### **Refrain from sitting on the seat for long periods.**

- It may cause low-temperature burns.

To prevent the following persons from getting a moderate temperature burn during use, other person should turn off the toilet seat heater and set the dryer temperature to "Low".

- Young children, the aged and other users unable to set the temperature appropriately themselves.
- The ill, physically disabled and others who do not have freedom of movement.
- Those using any medicines that cause drowsiness (sleeping or cold medicine), those who have been drinking heavily, anyone severely fatigued and anyone else liable to fall asleep.

**This is an electrical product. Do not install it anywhere water is likely to get on the product or anywhere with humidity high enough that water is likely to form on the surface of this product. When using the product in a bathroom, install a fan or ventilation port and ensure good air flow through the bathroom.**

- Failure to do so may cause fire or electrical shock.

### **Always connect the product to the cold water supply.**

- Connecting to hot water supply may result in burns and equipment damage.

### **Check that an appropriate ground is installed.**

- If the ground is not installed, if there is a breakdown or electrical current leak, the lack of a ground could cause electrical shock.

For the ground, use copper wire with a ground resistance of 100  $\Omega$  max. and a diameter of 1.6 mm min.

- If there is no ground installed, ask the contractor who did the installation to install the ground.

### **Make sure that a properly grounded (3 prong) outlet has been installed.**

- Failure to install a grounded outlet could cause electrical shock in the event of a malfunction or short circuit.

### **Insert the power plug securely into the outlet.**

- Failure to do so may cause fire, heat or short circuit.

### **Check that the power plug is waterproofed with silicone rubber.**

- A power plug that is not water-proofed may cause fire and electrical shock.
- If the power plug is not water-proofed, ask the contractor who did the installation to water-proof it.

### **To unplug, hold the power plug, not the power cord.**

#### **Do not unplug by pulling the power cord.**

- Pulling on the power cord may cause damage and result in fire or heat.

**If the electric cord is damaged, avoid danger by having the manufacturer's repair department or equivalent specialist replace it.**

### **Always switch the breaker on the distribution board to OFF before cleaning or maintenance.**

- Failure to do so may cause electrical shock or malfunction.





## WARNING



**When leaking battery fluid adheres to your body or clothes, wash it away with clean water.**

- The fluid may damage your eyes or skin.

**Preliminary studies in females suggest that overuse of continuous spraying can increase the possibility of vaginal mucosa drying and potential reduction in desirable microbial organisms.**

**Although these studies have not been validated, please consult your healthcare provider for concerns regarding whether these circumstances may apply to you.**

**More importantly, if you are an individual suffering from any immune deficiency as a result of disease, chemotherapy, or other medical condition compromising the immune system you should consult your healthcare provider before use of this product.**



# Safety Precautions (Continued)

## CAUTION



**Do not use the product if the top unit is unstable.**

- Doing so may cause the top unit to come loose and fall, resulting in injury.

**If the product is damaged, do not touch the damaged section.**

- Doing so may cause electrical shock or injury. Replace it immediately.

**Do not apply strong force, mechanical shock, step on or stand on the toilet seat, toilet lid or top unit. Also do not place any heavy object on the toilet seat, toilet lid or top unit.**

- Doing so may cause cracking or cause the top unit to come loose and fall, resulting in injury.
- Doing so may damage the product and cause injury or water damage.

**Do not lift up this product by the toilet seat or lid.**

**Do not raise the toilet seat or lid while objects are resting on top of the unit.**

- Doing so may cause the top unit to come loose and fall, resulting in injury.

**When cleaning or maintaining the plastic parts (top unit etc.) or the water supply hose, use a kitchen cleaner diluted with water. Do not use any of the following.**

**Toilet cleaner, household cleaner, benzene, paint thinner, powdered cleanser or nylon scrubbing brush.**

- These items may damage or crack the plastic and cause injury or malfunction.
- These items could damage the water supply hose and cause a water leak.

**To prevent a sudden water leak, do not remove the water filter drain valve when the shutoff valve is open.**

- Doing so will cause water to spurt out.  
(Refer to Page 36 for instructions on cleaning the water filter drain valve.)



**Do not fold or crush the water supply hose; do not damage by cutting with a sharp object.**

- Doing so may cause water leaks.

**Do not pour hot water into the toilet.**

- Doing so may result in damage to the toilet, injury or water damage.

## CAUTION

	<p><b>Do not flush anything other than bodily waste and toilet paper. Also, do not flush too much toilet paper.</b></p> <p><b>Do not flush the bowl unit if it is clogged.</b></p> <ul style="list-style-type: none"> <li>• Doing so may clog the toilet, causing waste water overflow, and water damage.</li> </ul> <p><b>Keep the bowl filled with water.</b></p> <ul style="list-style-type: none"> <li>• Failure to do so may cause sewer gas, chlorine gas, or hydrogen sulfide to corrode facilities and equipment.</li> </ul> <p><b>Do not use the product while the top unit is lifted up by the cleaning lift.</b></p> <p><b>When lowering the top unit by the cleaning lift, do not insert your fingers into the gap between the top unit and the bowl unit.</b></p>
	<p><b>If a water leak should occur, always close the shutoff valve.</b></p> <p><b>When the ambient temperature is likely to drop to 0°C or lower, prevent damage to the pipes and hoses due to freezing.</b></p> <ul style="list-style-type: none"> <li>• Frozen water pipes could cause the top unit and the pipes to break, resulting in a water leak.</li> <li>• Regulate the room temperature to prevent the pipes and hoses from freezing during cold months.</li> </ul> <p><b>When not using the product for a long time, close the shutoff valve, drain the water from the top unit and water supply hose, and then turn off the breaker on the distribution board.</b></p> <ul style="list-style-type: none"> <li>• When using the product again, allow the product to refill with water first. Otherwise, the water in the tank might become contaminated and cause skin inflammation or other problems. (Refer to Page 61 for instructions on replenishing the water.)</li> <li>• Leaving the power on may cause fire or heat.</li> </ul> <p><b>When installing the water filter drain valve, make sure that it is securely tightened in its proper position.</b></p> <ul style="list-style-type: none"> <li>• Failure to securely tighten it may cause a water leak.</li> </ul> <p><b>If the bowl unit is clogged, switch the breaker on the distribution board to OFF and remove the clog.</b></p> <ul style="list-style-type: none"> <li>• If the auto flush were allowed to function, it would make the wastewater in the bowl unit overflow and may result in water damage.</li> <li>• Use commercially available tools that are made for unclogging the bowl unit to remove the clogging.</li> </ul>

# Safety Precautions (Continued)



## CAUTION



**Always flush, even after just urinating.**

- Failure to do so may clog the toilet, causing waste water overflow and water damage or inadequate flushing of the bowl unit.

**Wipe any urine, condensation, cleaner, water, etc. that has gotten on the floor with a well-wrung mop or cloth.**

- Failure to do so may cause staining and corrosion of the floor.

**Make sure of the plus and minus signs on the batteries before inserting them. Remove depleted batteries immediately.**

**When replacing the batteries:**

Replace both batteries with new ones.

Use the same brand for both new batteries (any brand available).

- Failure to do so may cause the batteries to leak fluid, generate heat, rupture, or ignite.

**When the product is supposed not to be used for long time, remove the batteries from the remote control and battery box.**

- Failure to do so may cause the batteries to leak fluid.

# Operational Precautions

## ■ For prevention of malfunctions

- Do not block the body sensor or the remote control transmitter or receiver.

### < About the body sensors >

Two types of body sensors are used.

- Body sensor A detects changes in heat.
  - Detection may be difficult when the room temperature exceeds 30°C, such as in the summertime.
  - When sunlight is directly on the sensor area or a heater is used in the bathroom, the sensor may detect incorrectly due to the heat, resulting in the automatic operation of functions such as auto lid opening and closing.
  - When the bathroom door is open, the sensor may detect people who pass to the front or side of the toilet.
- Body sensor B detects when someone stands in front of the bowl unit.
- Body sensor B emits an infrared beam as shown in the figure. When someone moves into the line of this infrared beam, the sensor detects the person.
  - Detection by the sensor may be difficult when the toilet is used by someone small, such as a child.

Body sensor A  
(Detects changes in heat)




Body sensor B (Detects a person standing in front of the bowl unit.)



### < About the seat switch >

- When you sit on the toilet seat, the seat switch turns ON, enabling you to use various features. (A click sound is heard when the seat switch is ACTIVATED.)

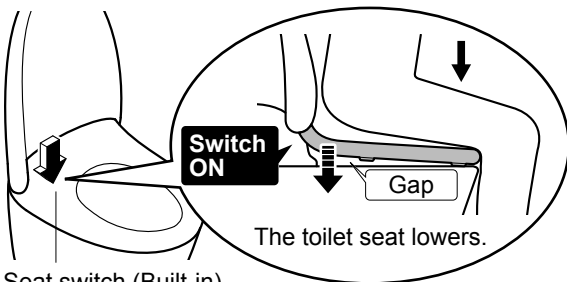

Seat switch (Built-in)

- Sit back on the toilet seat.
  - The seat switch will not turn on unless you sit on the seat properly.




#### Note

- When a child uses the product, the seat switch may not be ACTIVATED by their light body weight.
- Since the toilet seat is designed to move up and down, a clearance is provided between the toilet seat cushion and the bowl unit.


## ■ For prevention of damage

- Wipe plastic areas such as the top unit and remote control with a soft cloth tightly wrung out with water.

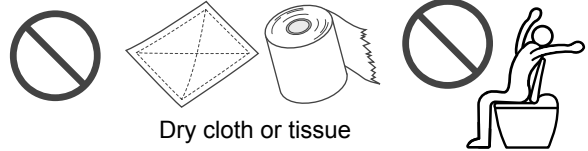


- Do not lean against the toilet lid.

## ■ For prevention of malfunctions and failures



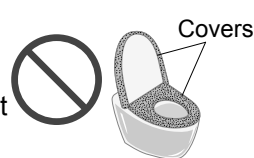
- Switch the breaker on the distribution board to OFF if there is a risk of lightning.
  - A toilet seat cover or a toilet lid cover cannot be used. (Using them may cause an incorrect detection by the body sensors and seat switch or result in toilet seat and toilet lid opening or closing in a wrong manner.)
- 
- Do not urinate on the top unit, toilet seat or wand. (Doing so may cause a failure or discoloration.)
  - Do not apply strong forces to the control panel of the remote control.
  - When using a toilet cleaner to clean the toilet, wash it off within 3 minutes and leave the toilet seat and toilet lid open.
    - Wipe off any cleaner that remains on the bowl unit. (If vapor from a toilet cleaner enters the top unit, it may cause a malfunction.)
  - Do not use the product with the toilet lid removed.
  - Do not expose to direct sunlight. (Doing so may cause changes in color, irregular heated seat temperature, remote control malfunction or product malfunction due to the change in temperature.)
  - Use radios, etc. away from the product. (The product could cause interference with the radio signal.)
  - If you use a booster seat for infants or a soft highchair, remove it after use. (Keeping it installed may prevent some of the functions from being used.)
  - Do not apply force to the remote control. (May cause malfunctions.)  
To prevent the remote control from being dropped, set it in the hanger when you are not using it. Be careful not to expose it to water.
  - Do not place anything on the toilet seat and lid, and do not press them with hands. (Failure to do so may turn on the seat switch, causing the floor to get wet if buttons on the remote control are touched and warm water comes out from the wand.)




### Left side of top unit

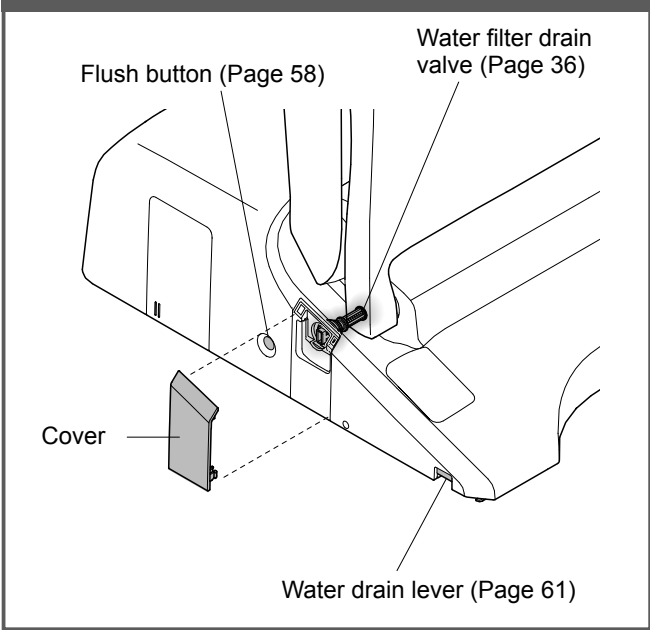


### Toilet lid and toilet seat underside

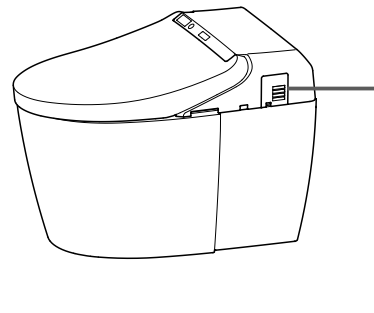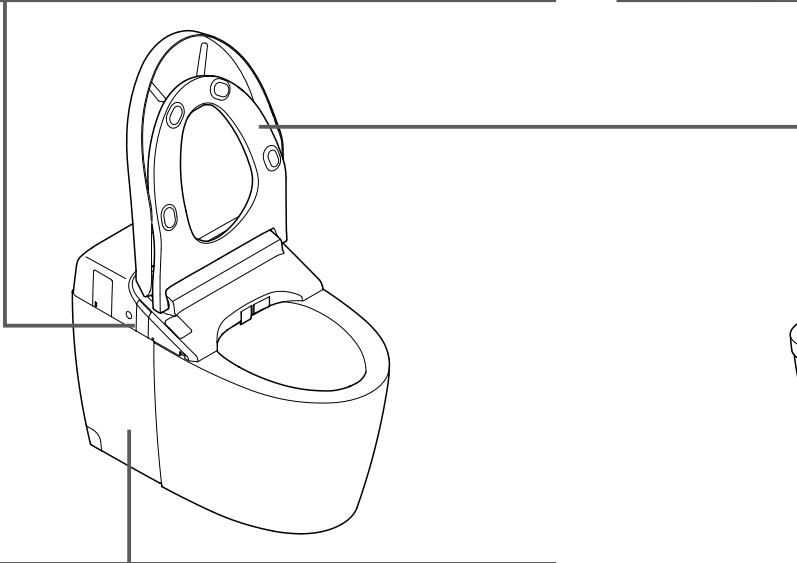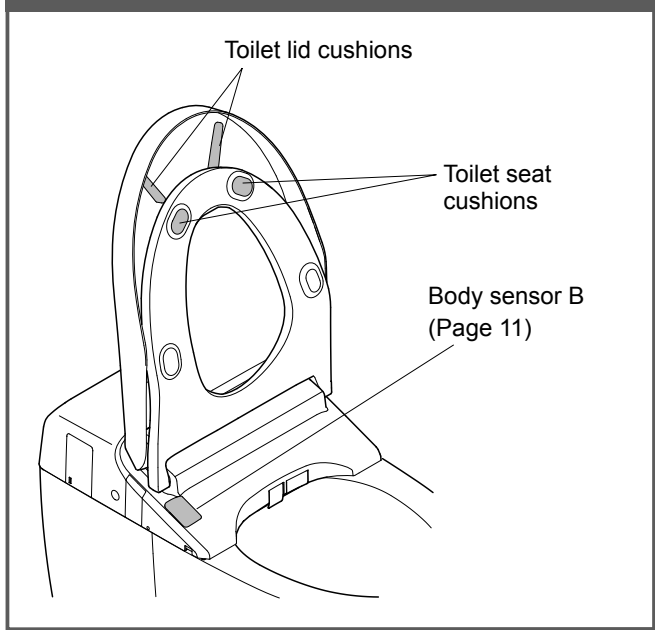

### Left side of bowl unit

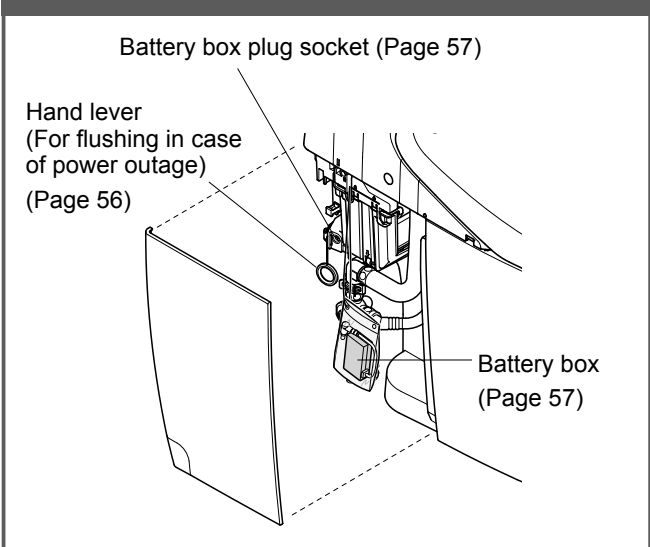

### Right side of top unit

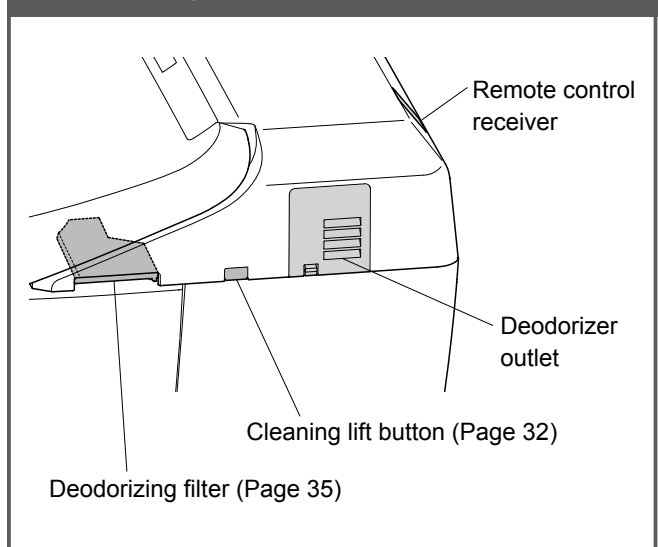


# Preparation


## Using the Product for the First Time

### 1. Insert the battery

- 1 Remove the remote control from the hanger.

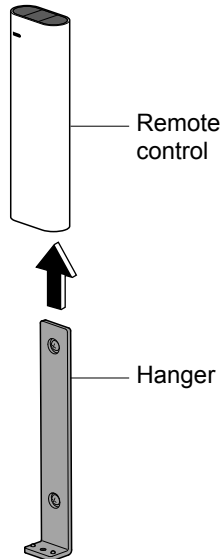

- 2 Open the battery cover and insert two AA batteries.

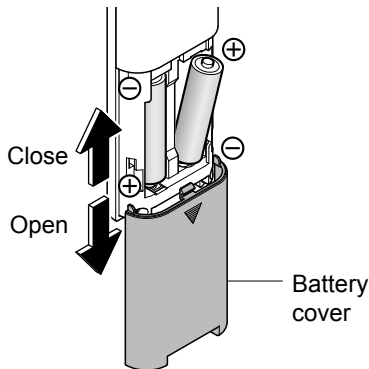

- When batteries are properly inserted, temperature levels appear on the display of the remote control (back side).  
→ When the temperature levels are not displayed, perform step 3 of "Language Settings" in page 50.
- The display goes out when no button on the remote control is pressed for about 60 seconds or more.


- 3 Mount the remote control in the hanger.

#### ■ About the batteries

- Use dry cell, alkaline batteries.
- Be sure to follow "Safety Precautions" to prevent the batteries from rupturing or leaking fluid, etc. (Pages 7, 10)

### If the remote control is secured (for anti theft)

- 1 Remove the screw from the remote control fixture.

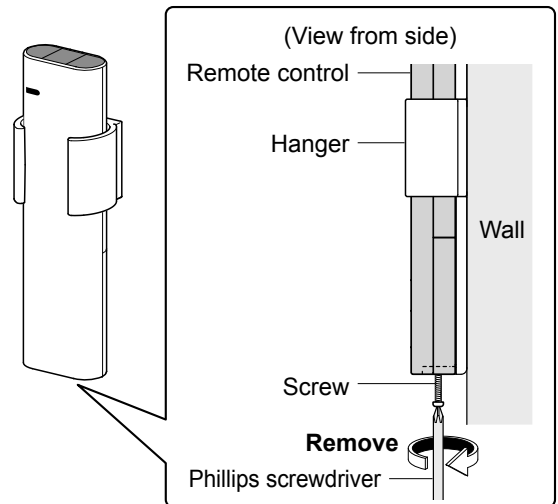

- 2 Remove the remote control from the hanger.

#### ■ To secure the remote control again

Tighten and fix the screw.  
(Overtightening may cause damage to parts such as the hanger.)


## 2. Turn on the power

- 1** Switch the breaker on the distribution board to ON.
- The wand extends and then retracts.

- 2** Check that the "Power" LED is lit up.


- When it is off, switch the "Power" to "ON".


### To operate from the back of remote control

-  Press "Power ON/OFF" button about 3 seconds or longer.

### To operate from the front of remote control

- Recommended if the remote control is locked to prevent theft.

-  Press "Oscillating cleansing" / "Pulsating cleansing" button about 10 seconds or longer.

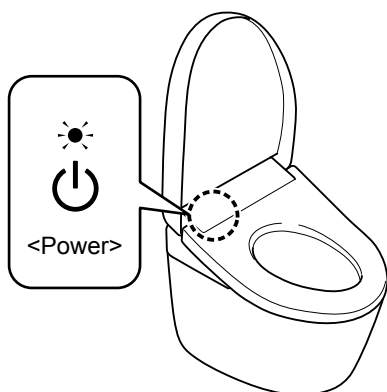


## To turn the power "OFF"

Perform the same operation as step 2 above


- The "Power" LED goes off.

## 3. Open the shutoff valve

- 1** Remove the side panel (left).

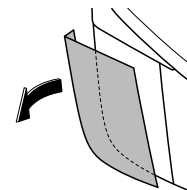


- 2** Fully open the shutoff valve.

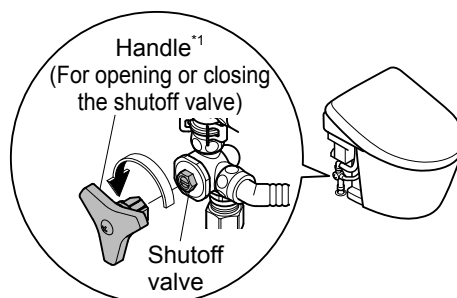

- \*1 Installed on the back of the side panel (on the left)

- 3** Reinstall the side panel.

- Fit the side panel to the top and side of the bowl unit without a gap.

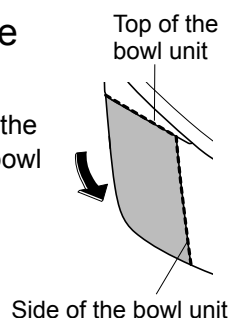



# Basic Operations

Operate the controls on the remote control; a beep sounds when the top unit receives the signal.

**●Functions that operate when a button is pressed during "Rear cleansing", "Rear soft cleansing" or "Front cleansing".**

**Note**

- Sitting back on the toilet seat makes it easier to adjust the wand position and to reduce splashing.

**"Oscillating cleansing"**  
The wand moves back and forth to cleanse your rear thoroughly.  
●The setting changes between "ON" and "OFF" each time the button is pressed.

**"Pulsating cleansing"**  
Cleanses with the water pressure pulsating between soft and strong.  
●The setting changes between "ON" and "OFF" each time the button is pressed.

**"Wand CLEAN"**  
Cleans the wand with ewater+  
●The wand can be automatically cleaned when you use the cleansing functions (Rear cleansing, Front cleansing, etc.). (Page 20)

**Flushing**

- "Full flush"**  
Performs a full flush.  
●Up to 10m of toilet paper (single)
- "Light flush"**  
Performs a light flush.  
●Up to 3m of toilet paper (single)

**Opening and closing**

- "Opening and closing the toilet seat"**  
Opens and closes the toilet seat.

**Stopping**

- "Stopping"**  
Stops the operation.

**Cleansing**

- "Rear cleansing"**  
Cleanses your rear.
- "Rear soft cleansing"**  
Cleanses your rear with mild water pressure.  
●The setting changes between [soft icon] and [strong icon] each time the [strong icon] is pressed.
- "Front cleansing"**  
Serves as a bidet for ladies.

**Drying**

- "Drying"**  
Dries your rear.




# Basic Operations

## About the Menu Screen

This section is an overview of the settings that can be configured with the remote control.

● See the corresponding pages for the detailed descriptions.

### Remote control back side

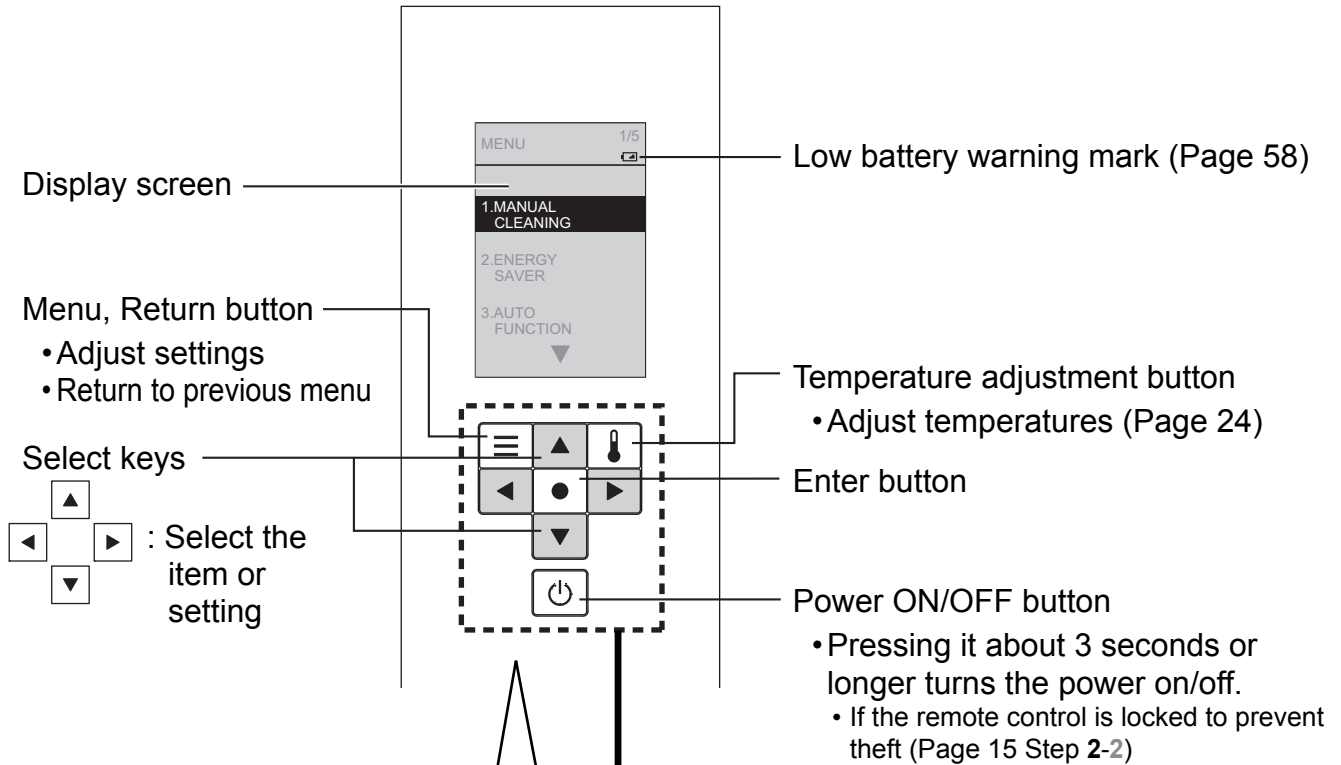

**1** Press.

- The display screen changes.

**2** Set the item from the display screen.

You can move the buttons (Up/Down) to select the item or setting.

- The letters of the selected item will be highlighted.

When [MANUAL CLEANING] is not chosen	→	When [MANUAL CLEANING] is chosen

When you press the button, the item is entered.

### Setting lock

You can lock the settings so that you do not mistakenly operate the rear buttons while using the remote control.


**How to Set (Page 52)**

Display screen during setting lock

You can set as desired

If you want to return to the previous item, press the  button.

**Level 1                      Level 2                      Level 3**

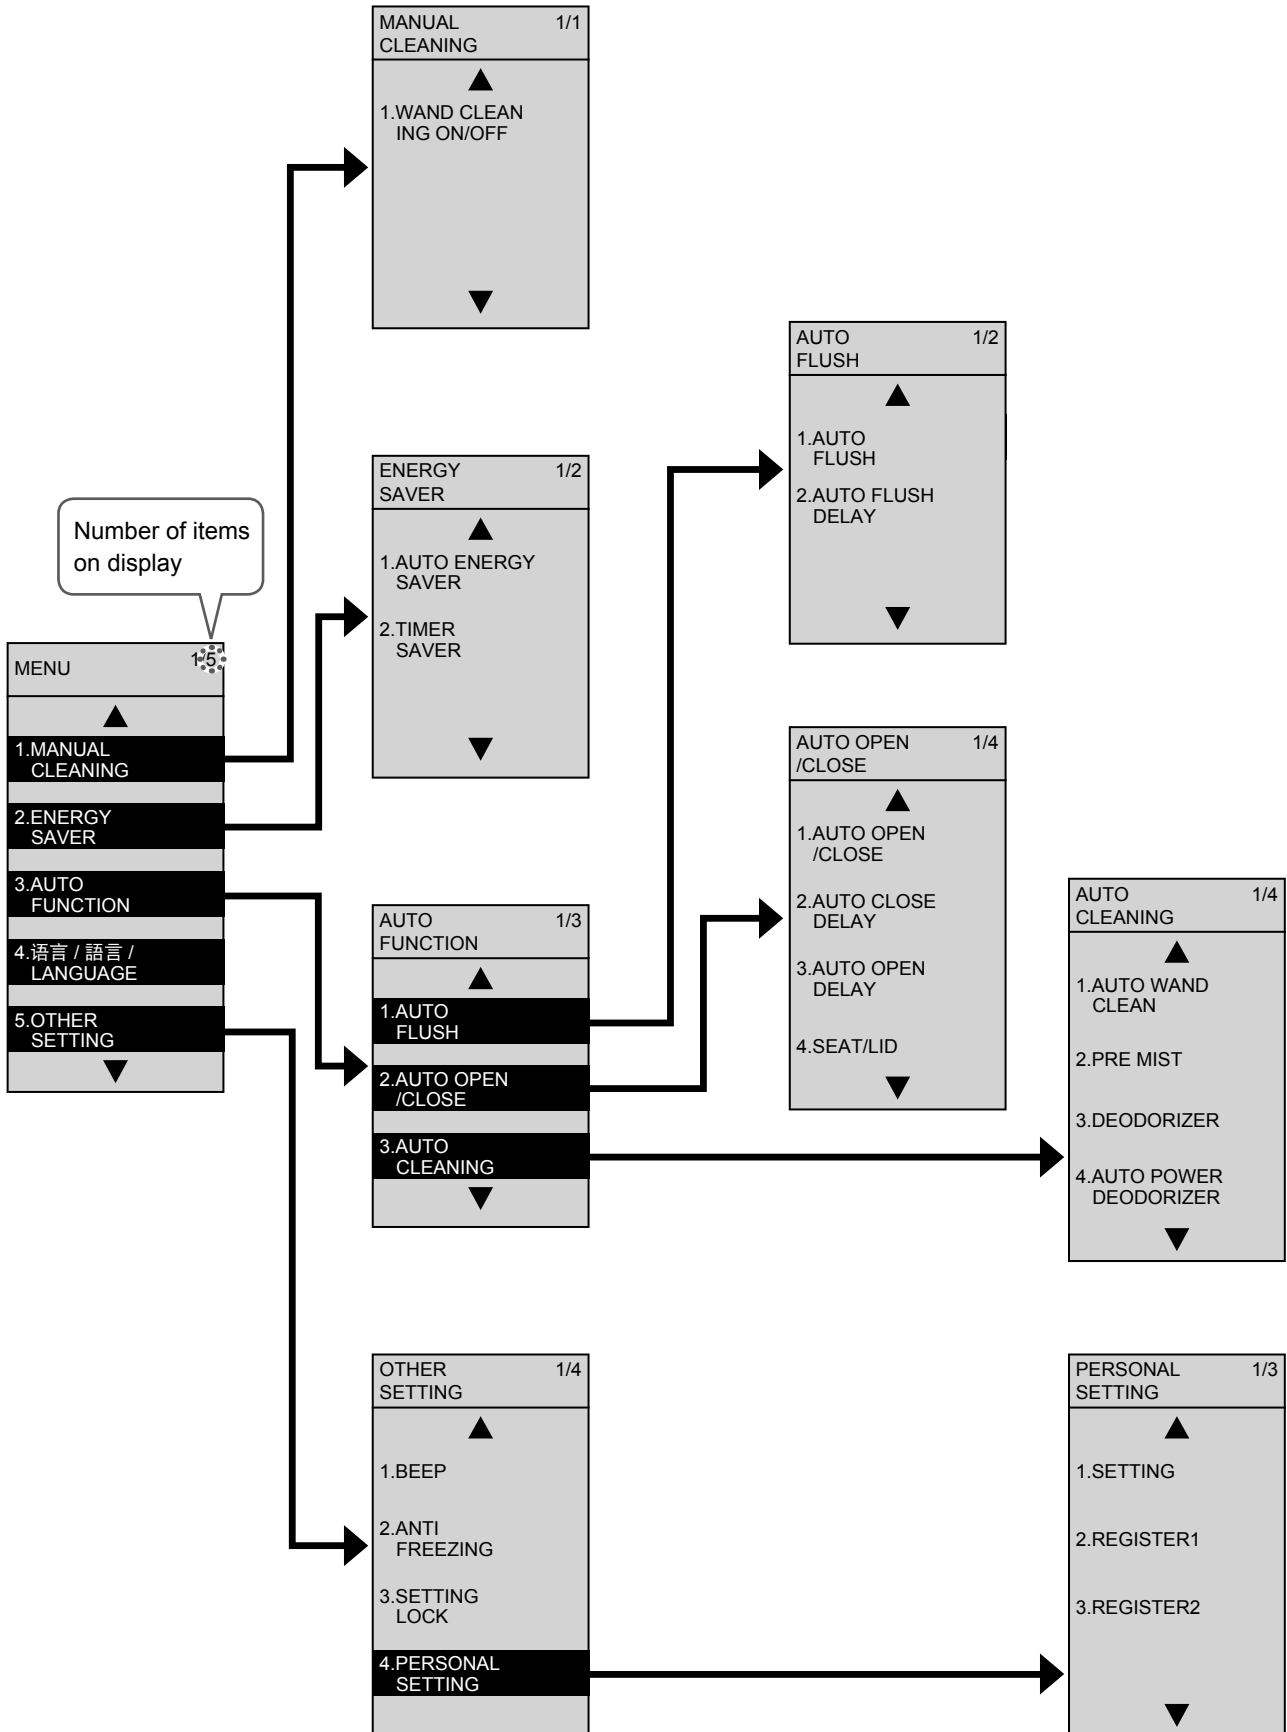

Operation


# Automatic Functions

## Cleaning Features

"ewater+"<sup>\*1</sup> is used automatically to clean the wand and bowl unit.

- Operation under the initial settings is described below.

**As you approach**

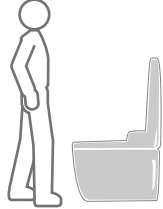

**As you sit<sup>\*2</sup>**



**As you stand up**



Removing odors inside the bowl unit

### Deodorizer



**Starts the deodorizer**




**Starts the auto power deodorizer**

(After about 10 seconds)

→It stops after about 60 seconds

Sanitize the wand with "ewater+"<sup>\*1</sup>

### Auto wand CLEAN

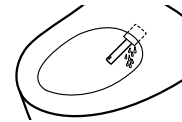


**Cleans the wand automatically**

(After about 25 seconds)

- Only when the cleansing functions are used.
- The wand extends and "ewater+"<sup>\*1</sup> comes out from the base of the wand.

A mist is sprayed inside the bowl unit to make it more difficult for dirt to adhere

### Pre-mist

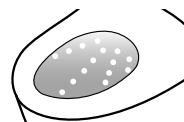



**Pre-mist**


→A mist is sprayed inside the toilet bowl.

Lights to show that the "CLEAN" functions are operating.

**■ "Auto wand CLEAN" LED**  
 Lights to show that the "Auto wand CLEAN" functions are operating.

During "Auto wand CLEAN" : Flashes

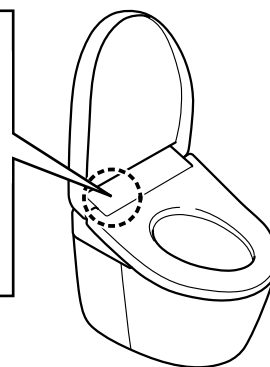

## ■ Changing settings

 
 
### ■ Note

<ul style="list-style-type: none"> <li>• Deodorizing filter needs regular maintenance. (Page 35)</li> </ul>	<ul style="list-style-type: none"> <li>• "Deodorizer" ON/OFF</li> <li>• "Auto power deodorizer" ON/OFF</li> </ul> <p>(Page 48 for all)</p>
---	--

<ul style="list-style-type: none"> <li>• When the cleansing functions (Rear cleansing and Front cleansing etc.) have not been used in 8 hours, the wand is cleaned automatically. (Water comes out from around the wand.)</li> </ul>	<ul style="list-style-type: none"> <li>• "Auto wand CLEAN" ON/OFF</li> </ul> <p>(Page 46)</p>
--	---

<ul style="list-style-type: none"> <li>• The pre-mist will not spray for about 90 seconds after you stand up from the toilet seat.</li> </ul>	<ul style="list-style-type: none"> <li>• "Pre-mist" ON/OFF</li> </ul> <p>(Page 46)</p>
---	--

"ewater+" can also be used by pressing the remote control button



(After wand cleaning, water comes out from around the wand.)

- To clean the wand with it extended. → "Wand cleaning" (Page 34)

### \*1 What is meant by "ewater+" ?

This water containing hypochlorous acid generated from chloride ions in tap water, is widely used for cleaning and disinfecting items such as food, utensils and baby bottles.

- Well water may not deliver the required effect. (Because the level of chloride ions is low.)
- "ewater+" helps to minimize dirty surfaces, but does not make cleaning unnecessary.
- The effect and duration vary depending on the usage environment and conditions.

\*2 Water comes out from the area around the wand for several seconds while water is warmed up.


# Automatic Functions

## Convenience Features

Various automatic functions are available.

- Operation under the initial settings is described below.


### As you approach

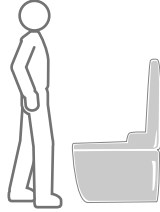

### As you sit



### As you stand up

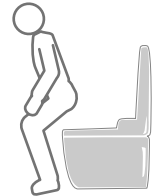

Flush automatically  
**Auto flushing**

When using the toilet seat




**The toilet flushes**  
(After about 10 seconds)


When standing and using

Opening the toilet lid automatically  
**Auto open/close**

When using the toilet seat

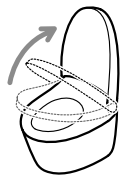


**The toilet lid opens**

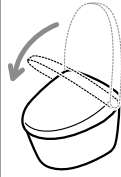

**The toilet lid closes**  
(After about 90 seconds)

When standing and using

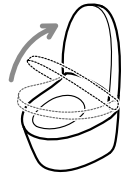


**The toilet lid opens**



Open the toilet seat with the remote control.

## As you move away

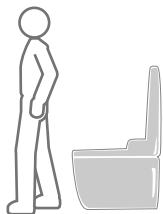

### ■ Note

### ■ Changing settings

- Auto flush is not available in the following cases.
  - · About 60 seconds after the toilet is flushed. (After 60 seconds have passed, flush using the remote control.)
  - When the time spent sitting on the toilet seat or standing in front of the bowl unit is less than about 6 seconds. (Flush with the remote control.)
- The flushing varies depending on how long you sit on the toilet seat.
  - Around 6 to 30 seconds: "Light flush"
  - Around 30 seconds or more: "Full flush"
- When the tank is filling and an LED will flash on the main display, you cannot flush the toilet.

- "Auto flush" ON/OFF
- "Auto flush delay" (5 seconds, 10 seconds or 15 seconds)
- (Page 40 for all)




#### The toilet flushes

(Performs a "Light flush" about 3 seconds after the user has moved about 30 cm away from the bowl unit.)

- Detection by the body sensor may be difficult when the room temperature exceeds 30°C. (Open and close by hand.)
- When the toilet lid is closed by hand, it cannot open automatically for about 15 seconds. (Open and close by hand.)
- When you do not sit on the toilet seat, or when you sit on it or stand in front of the bowl unit briefly, it takes about 5 minutes before the lid closes automatically.

- "Auto open/close" ON/OFF
- "Auto close delay" (25 seconds or 90 seconds)
- (Page 42)
- "Auto open delay" (15 seconds, 30 seconds or 90 seconds)
- "Seat/lid" (Lid/Seat · Lid)
- (Page 44)

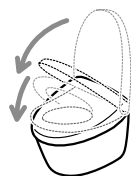

#### The toilet lid and toilet seat close




(About 90 seconds after moving away from the bowl unit by about 30 cm or more.)





# Temperature Adjustment

Warm Water, Toilet Seat, Drying


Five different temperature levels from high to low and "OFF" can be set.


- 1 Remove the remote control from the hanger.
  - If the remote control is locked to prevent theft (Page 14)
- 2  Press.
- 3   Select the item you want to set.

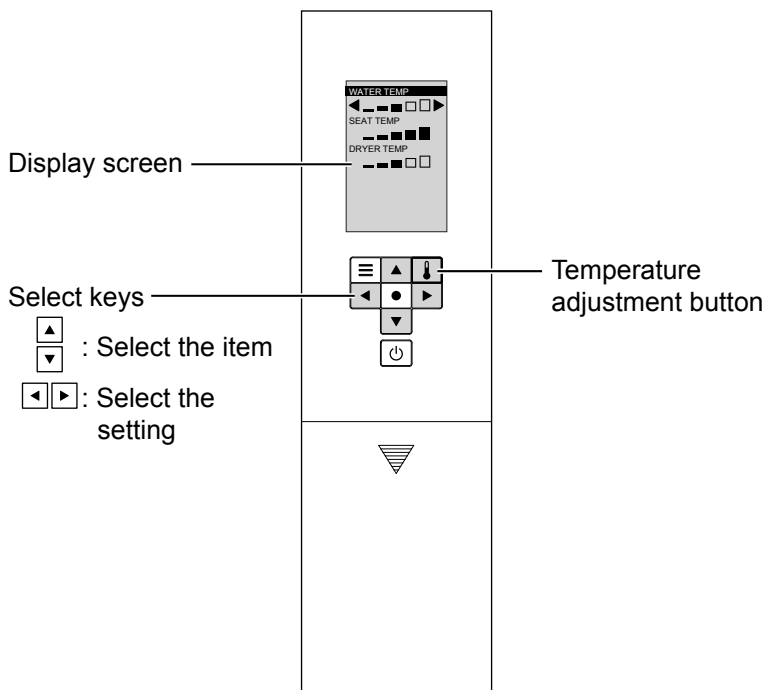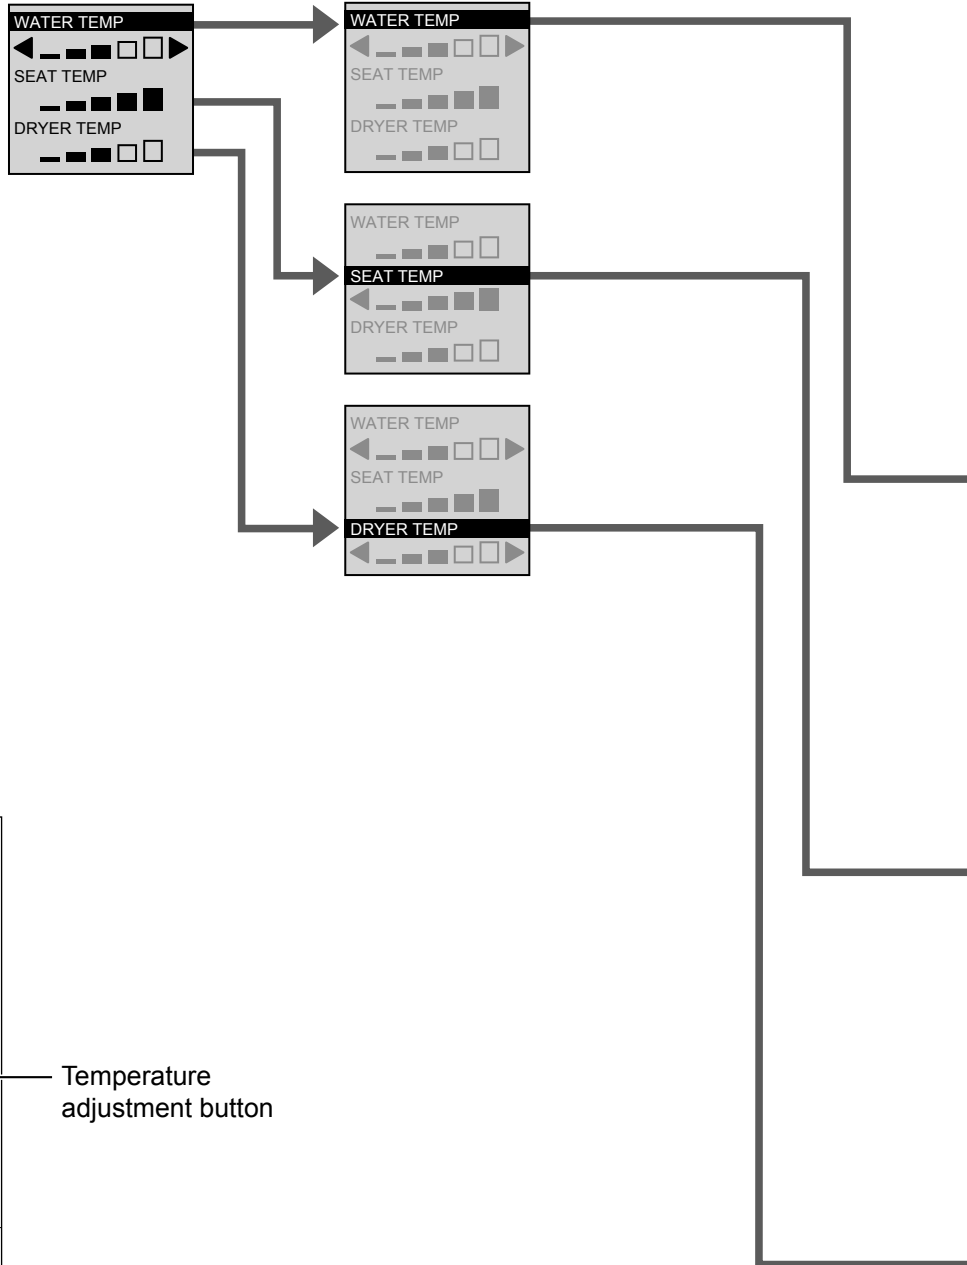

## CAUTION





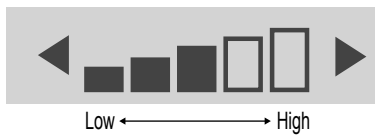
- During setting, the display goes out when no button is pressed within about 60 seconds. If you fail to complete the setting, redo from the step 2.

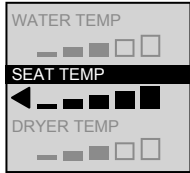**4**  Select the temperature level. <Settings complete>



**5** Mount the remote control in the hanger.

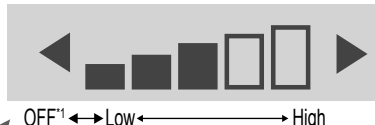- If the remote control is locked to prevent theft (Page 14)

<p><b>Warm water temperature</b></p>	 <p>OFF* ← Low → High</p> <p>Press  until [OFF] appears.</p>
<p><b>Toilet seat temperature</b></p>	 <p>OFF ← Low → High</p> <p>Press  until [OFF] appears.</p> <ul style="list-style-type: none"> <li>• When "OFF" is set, the "Seat" LED on the main display will go off.</li> </ul>
<p><b>Drying air temperature</b></p>	 <p>Low ← High</p> <ul style="list-style-type: none"> <li>• The "Drying" cannot be turned "OFF".</li> </ul>

\*1 To prevent condensation, the water temperature does not drop below 20°C even when set to "OFF".

● If adjusting the temperature does not warm up the toilet seat → Is "Energy saver" set to "ON"? (Page 26)

# Energy Saver Features

Type


"Auto energy saver", "Auto energy saver+" or "Timer energy saver" can be selected. To save energy, the temperature of the toilet seat becomes low (or "OFF").

● "Auto energy saver" takes about 10 days to detect time periods in which the toilet seat is never or infrequently used.

Type	Situation	Energy saver is on	
		Main display	
<b>Auto energy saver</b>	<p><b>You want the product to save energy automatically.</b></p> <p>The product detects time periods with infrequent use and lowers the toilet seat temperature automatically.</p>		→
<b>Auto energy saver+</b>	<p><b>You want to save more energy</b></p> <p>In addition to the auto energy saver feature, it automatically turns off the toilet seat heater during time periods when the toilet is never used.</p>		→
<b>Timer energy saver</b>	<p><b>You want to save energy only for the preset duration of time.</b> <b>(6 hours , 9 hours)</b></p> <p>Once the time is set, the toilet seat heater turn off automatically during the set time period every day.</p>		→
<b>Timer energy saver + Auto energy saver+</b>	<p><b>You want to save a lot of energy with auto energy saver and timer energy saver.</b></p> <p>When <b>both</b> "Timer energy saver" and "Auto energy saver / Auto energy saver+" are set, Auto energy saver / Auto energy saver+ operates when "Timer energy saver" is not operating.</p>		<p><b>Energy saver is off</b></p>

● Even if the energy saver feature is on (i.e., the toilet seat heater is set to "Low" or "OFF"), the toilet seat is heated to the set temperature in about 15 minutes.

(The LED indication on the main display returns to the state for when the energy saver is on.)

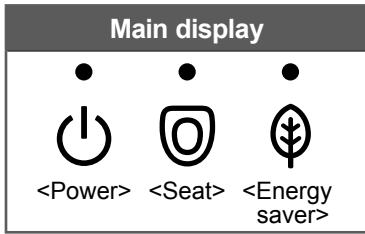

When energy saver is in operation		AM				PM			
Toilet seat heater		0	4	6	8	5	9	0	
<p>Lit (Orange)</p> <p>OFF Lit</p>	Low	<p>Example: Used infrequently from 9 pm to 6 am</p>							
<p>Lit (Orange)</p> <p>OFF</p>	Low OFF	<p>Example: Not used from 0 am to 4 am</p>							
<p>OFF</p> <p>Lit (Green)</p>	OFF	<p>Example: Set from 8 am to 5 pm</p>							
<ul style="list-style-type: none"> <li>● During "Auto energy saver / Auto energy saver+": Same LED indication as "Auto energy saver / Auto energy saver+" (see above)</li> <li>● During "Timer energy saver": Same LED indication as "Timer energy saver" (see above)</li> </ul>	Low OFF	<p>Example: When "Timer energy saver" and "Auto energy saver+" are used together</p>							

\*1 The toilet seat temperature set on page 24.

\*2 The time period when the toilet seat heater is set to a "Low".

\*3 The time period when the toilet seat heater is set to a "OFF"


# Energy Saver Features

## How to Set

Set the "Timer energy saver" at the time you want to start it.

1  Press.

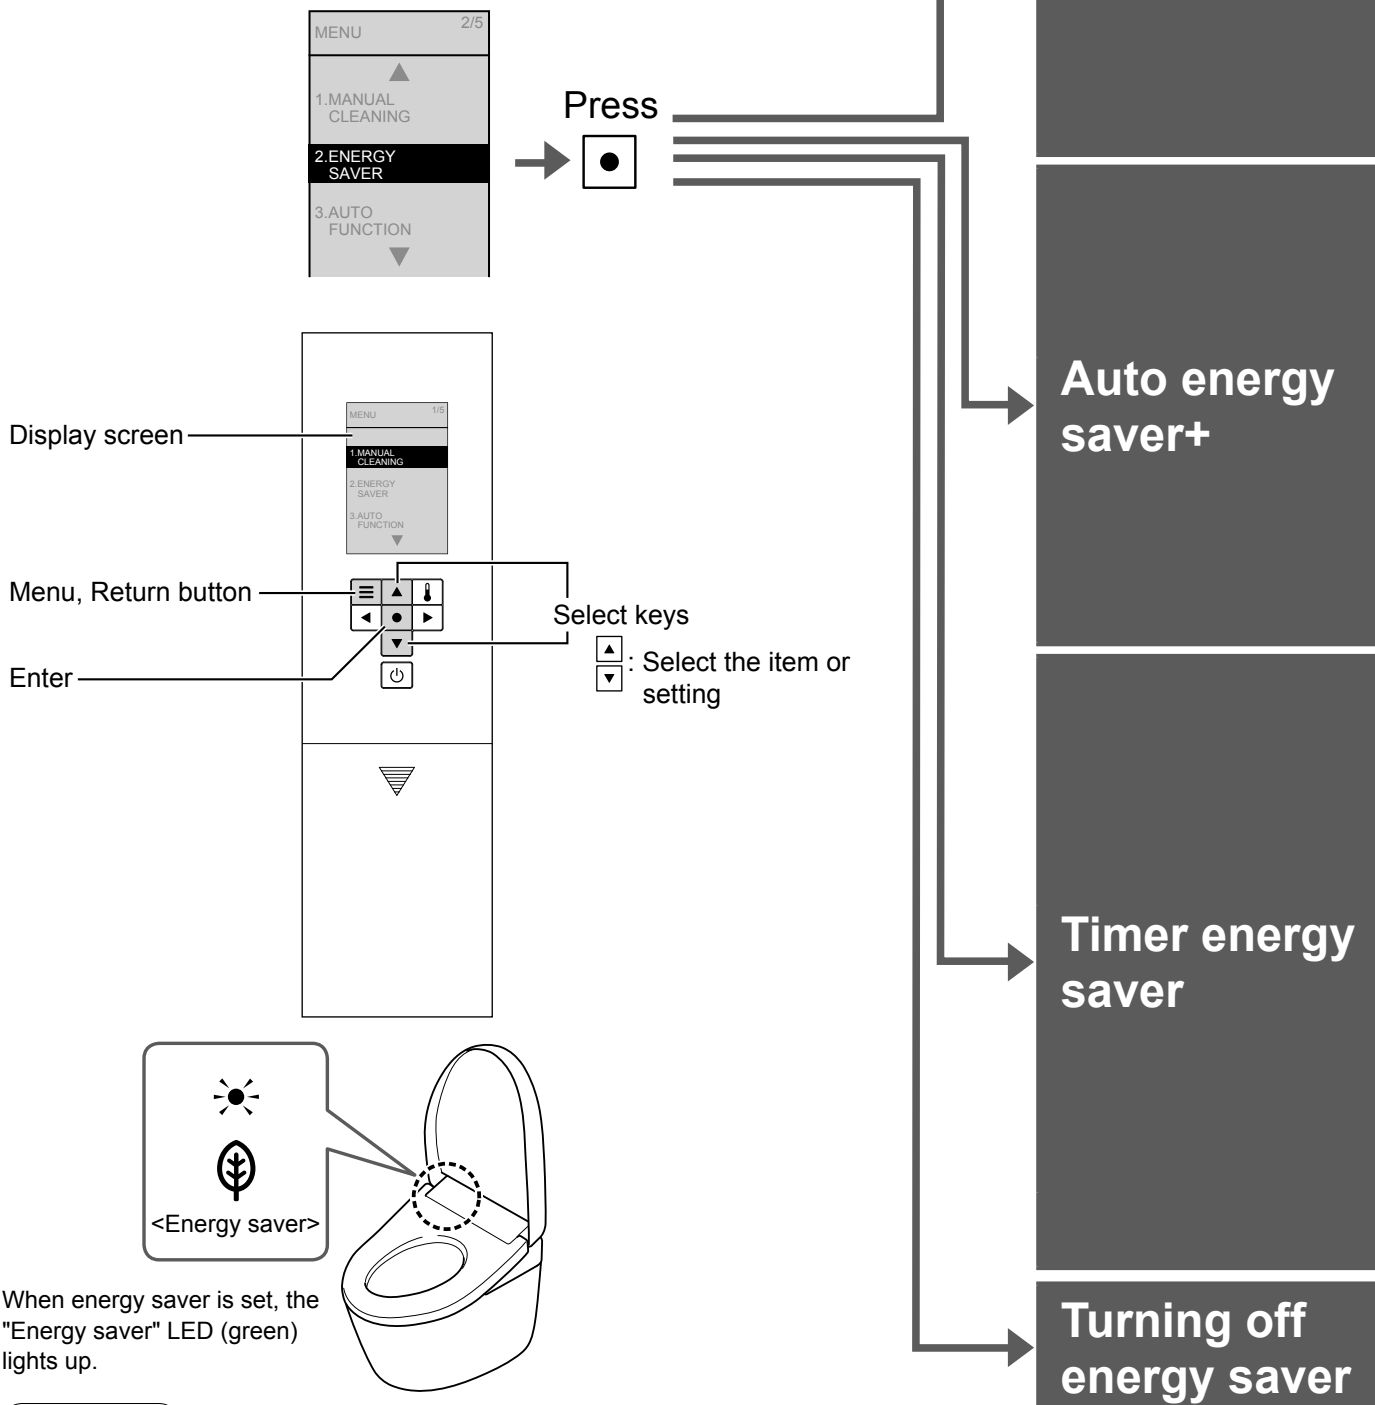

2   Select [ENERGY SAVER].





When energy saver is set, the "Energy saver" LED (green) lights up.



### CAUTION


- During setting, the display goes out when no button is pressed within about 60 seconds. If you fail to complete the setting, redo from the step 1.

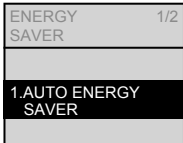
**3**   Select  
[AUTO ENERGY SAVER].





Press 

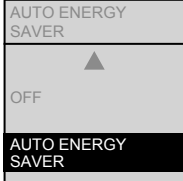

**4**   Select  
[AUTO ENERGY SAVER].





Press 






(To return → )

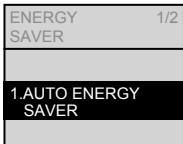
**3**   Select  
[AUTO ENERGY SAVER].





Press 

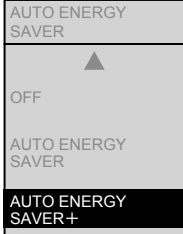

**4**   Select  
[AUTO ENERGY SAVER+].





Press 






(To return → )

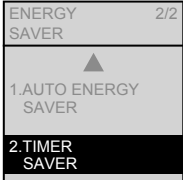
**3**   Select [TIMER SAVER].





Press 

**4**   Select  
[6H], [9H], or [OFF].



Press 



(To return → )

■ To change the timer energy saver time → Set the timer energy saver again at the time you want to start it.

Select [OFF] in step 4 in each procedure above and then press  .


# Maintenance

## Top Unit

**⚠ WARNING**

**!** Always switch the breaker on the distribution board to OFF before cleaning or maintenance.  
(Failure to do so may cause electric shock or malfunction, resulting in a breakdown.)

**For safety, turn off the breaker on the distribution board before cleaning or maintenance.\*1**

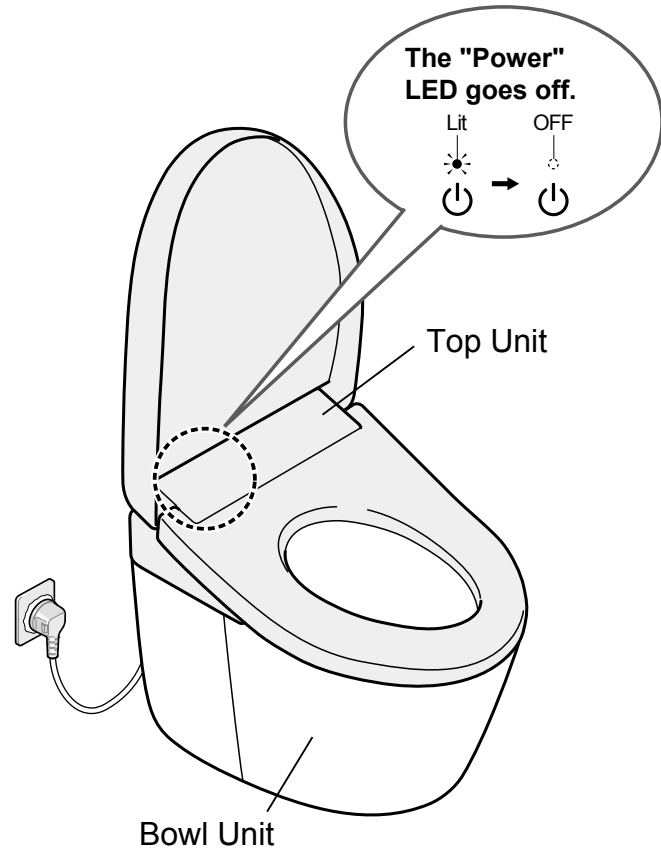

**Do not use a dry cloth or toilet paper on plastic parts.**  
(May cause damage.)

\*1 Except when using "Wand cleaning".  
\*1 After the distribution board breaker is switched to ON, the toilet lid does not open automatically for about 10 to 60 seconds. (Because it is preparing for operation.) Open and close by hand.

## Top Unit (Approximately daily)

Soft cloth soaked in water

- Toilet paper
- Dry cloth
- Nylon scrubbing brush (May cause damage.)

- 1 Switch the breaker on the distribution board to OFF.
- 2 Wipe with a soft cloth that has been soaked in water and wrung-out thoroughly.

**■ For heavy dirt**

- Wipe with a soft cloth soaked in diluted, neutral kitchen detergent, and then wipe with a soft cloth soaked in water.

- Neutral kitchen detergent
- Paint thinner
- Benzene
- Powdered cleanser

- 3 Switch the breaker on the distribution board to ON.  
• The "Power" LED lights up.

**Attention!**

- The product is an electric appliance. Be careful not to let water seep inside or leave detergent in the gap between the top unit and bowl unit. (May damage plastic parts or cause a malfunction.)
- When using a toilet cleaner to clean the toilet, rinse it off within 3 minutes and leave the toilet seat and toilet lid open.
  - Wipe off any cleaner that remains on the bowl unit. (If vapor from a toilet cleaner enters the top unit, it may cause a malfunction.)

Do not push or pull the covers around the wand with undue force. (May cause damage or malfunction.)

- Wipe the back surface of the toilet seat and the toilet seat cushions with a soft cloth tightly wrung out with water. (Otherwise adhesion of dirt may result in discoloration.)

# Bowl Unit

## Bowl Unit (Approximately daily)



- Toilet brush
- Neutral toilet detergent



- Strongly acidic cleaners or strong alkaline cleaners
- Cleaners containing abrasive compounds
- Fluoride-based detergent (containing hydrogen fluoride or ammonium fluoride)
- Wire brush
- Abrasive nylon scrubbing brush

1


Switch the breaker on the distribution board to OFF.

2

Clean with a toilet brush or a similar tool.

### ■ If the bowl unit is clogged

- Using plunger or similar, provide 10 cm or more clearance between the top of the bowl unit and the water surface. Use commercially available tools that are made for unclogging the bowl unit. (May cause overflow of dirty water and water damage.)

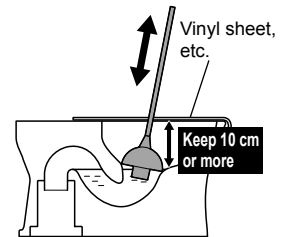

### ■ If the floor is dirty

- Clean it with a well wrung cloth. (Not cleaning the floor may cause stains or corrosion.)
- Sitting is recommended to reduce splashing caused by standing and urinating.

3

Switch the breaker on the distribution board to ON.

- The "Power" LED lights up.

### Attention!

- Be careful not to expose the top unit or the gap between it and the bowl unit to water. (May cause water overflow into the room.)
- Do not use any water repellent, stain-proofing cleaner or surface coating agent. These products would not damage the porcelain surface, but they may cover the porcelain surface and reduce the effect of the built-in stain prevention technology.




### Gap between the Top Unit and Bowl Unit (Approximately once a month)

You can lift up the top unit with the cleaning lift button and clean the gap between it and the bowl unit.



Soft cloth soaked in water

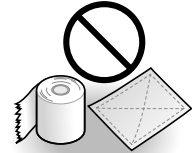

Toilet paper, etc.  
(May cause damage.)

1


Switch the breaker on the distribution board to OFF.

2

Open the toilet seat and lid.

3

Press the cleaning lift button.  
• This raises the front side of the top unit.

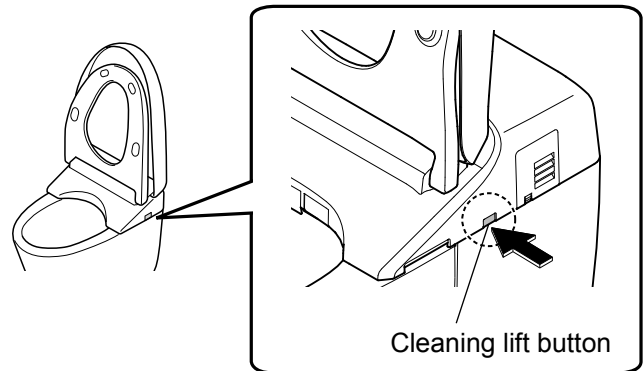


Cleaning lift button

4

Clean the gap.

- Wipe with a soft cloth soaked in a diluted, neutral kitchen detergent. Then, wipe it with a soft cloth soaked in water so that no detergent remains.

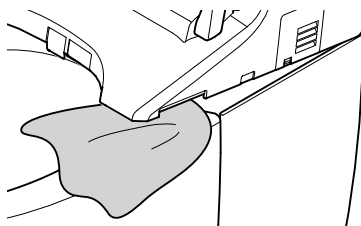

5

Close the toilet seat and push it firmly until a click sound is heard.

6

Switch the breaker on the distribution board to ON.  
• The "Power" LED lights up.


### CAUTION



- Do not use the product while the top unit is lifted up by the cleaning lift.
- When lowering the top unit by the cleaning lift, do not insert your fingers into the gap between the top unit and the bowl unit.

### Attention!

- Do not directly spray cleaner and water.
- Do not force the toilet seat or lid to move while the top unit is raised up.

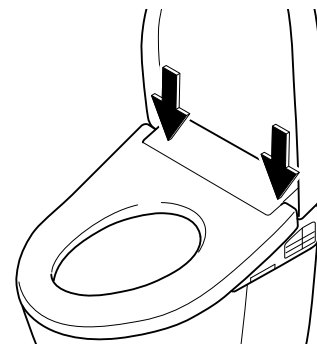


# Gap between the Top Unit and the Toilet Lid

## Gap between the Top Unit and the Toilet Lid (Approximately once a month)

The toilet lid can be removed for thorough cleaning.



Soft cloth soaked in water

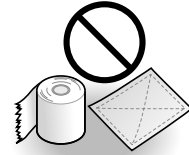

Toilet paper, etc.  
(May cause damage.)

**1** Switch the breaker on the distribution board to OFF.

**2** Remove the toilet lid.  
Slightly tilt the toilet lid to the front.

Ⓐ : Pull the left side outward.

Ⓑ : Disconnect the hinge from the tab and pull up.

Ⓒ : Disconnect the right side.

**3** Wipe with a soft cloth that has been soaked in water and wrung-out thoroughly.

**4** Reinstall the toilet lid.

Ⓓ : Join the pin and the hinge on the right side.

Slightly tilt the toilet lid to the front.

Ⓐ : Pull the left side outward.


Ⓔ : Mount by joining the hinge with the tab.  
• Be careful not to pinch your fingers.

**5** Switch the breaker on the distribution board to ON.  
• The "Power" LED lights up.

**6** Open and close the toilet lid to check the reinstallation.

### Removing and Reinstalling


Hold with both hands

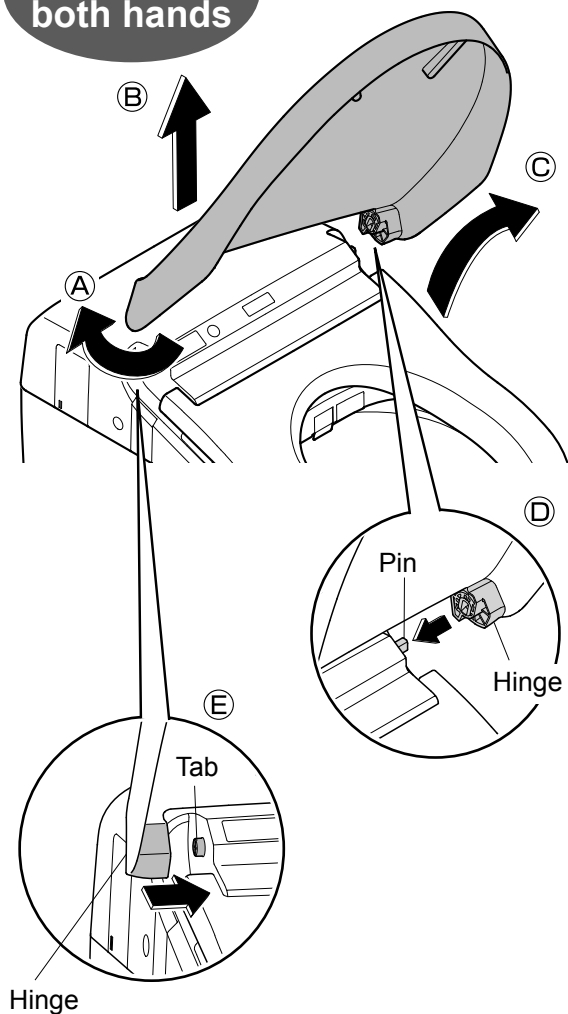

### Wand (Approximately once a month) < If you notice dirt (Wand cleaning)>





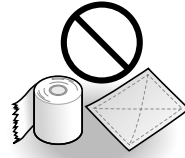


Soft cloth



Toilet paper, etc. (May cause damage.)



## 1 Extend the wand.

### To operate from the back of remote control

- (1)  Press.
- (2)  Select [MANUAL CLEANING]. →  Press.
- (3)  Select [WAND CLEANING ON/OFF]. →  Press.

### To operate from the front of remote control


- Recommended if the remote control is locked to prevent theft.

- (1)  Press "Stopping" button about 10 seconds or longer.  
(The main unit makes a beep sound.)
- (2)  Press "Front cleansing" button about 3 seconds or longer.

- The wand extends and water sprays out for cleaning.
- The wand automatically retracts after about 5 minutes.


## 2 Wipe with a soft, wet cloth.

- Do not pull, push or press the wand with excessive force.  
(May cause malfunctions or damage.)

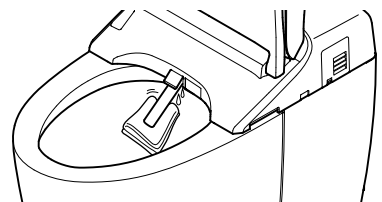

## 3 Press "Stopping" button on the front side of the remote control.

- The wand retracts.

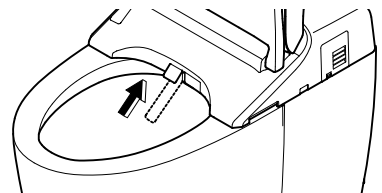


# Deodorizing Filter

## Deodorizing Filter (Approximately once a month)

**1** Switch the breaker on the distribution board to OFF.


**2** Remove the deodorizing filter.

- Hold the knob and pull outward.
- Do not pull with undue force.  
(May cause damage or malfunction.)

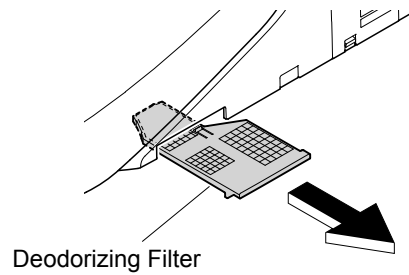


**3** Clean with a tool such as a toothbrush.

- When washing with water, dry off all water before mounting.

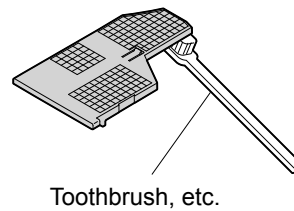


**4** Mount the deodorizing filter.

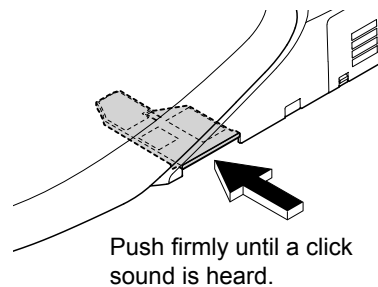

**5** Switch the breaker on the distribution board to ON.

- The "Power" LED lights up.

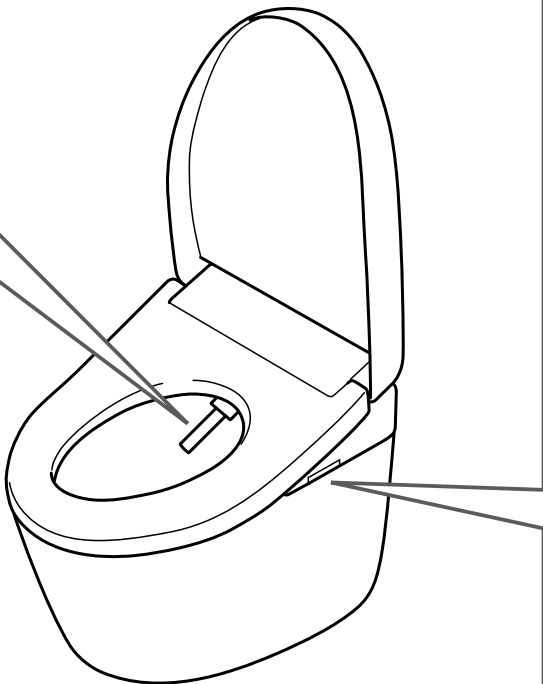

### Water Filter Drain Valve (Approximately once every 6 months) <If you think the water pressure has weakened>

1

Close the shutoff valve.  
(Page 63)

- The water supply stops.

#### CAUTION



Do not remove the water filter drain valve while the shutoff valve is open.

(Otherwise, water may leak out.)

2



Press

"Wand CLEAN" button.

(Release the pressure from the water supply pipe.)


3

Switch the breaker on the distribution board to OFF.

4

Remove the cover and water filter drain valve.

- Loosen the water filter drain valve with a flat-head screwdriver and then pull it.

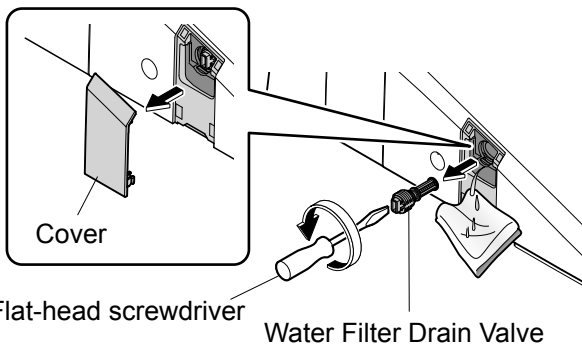

5


Clean with a tool such as a toothbrush.

- Also, remove any dust from inside the hole of the water filter drain valve.

6

Reinstall the water filter drain valve and cover.

- Insert the water filter drain valve and use a flat-head screwdriver to tighten it securely.

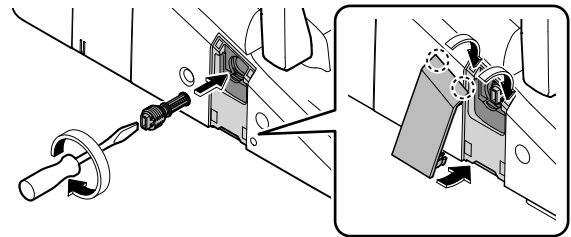

7


Switch the breaker on the distribution board to ON.

- The "Power" LED lights up.

8

Open the shutoff valve.

(Page 15)

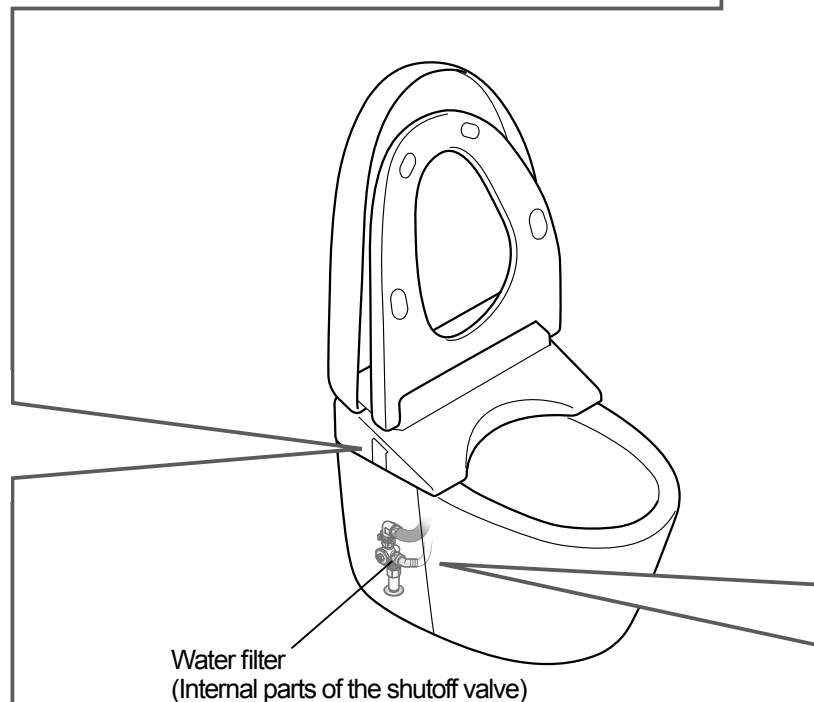


# Water Filter (Bowl Unit)

## Water Filter (Bowl Unit) (Approximately once every 6 months)

1

Remove the side panel (left).

There is an opening/closing tool (accessory) on the rear surface.

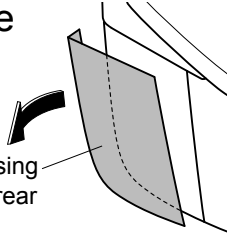

2

Close the shutoff valve.  
(Page 63)

- The water supply stops.

### CAUTION



Do not remove the water filter while the shutoff valve is open.

(Otherwise, water may leak out.)

3

 Press

"Wand CLEAN" button.

(Release the pressure from the water supply pipe.)


4

Switch the breaker on the distribution board to OFF.

5

Loosen the cap of the water filter to remove the water filter.

- Use the opening/closing tool (accessory).

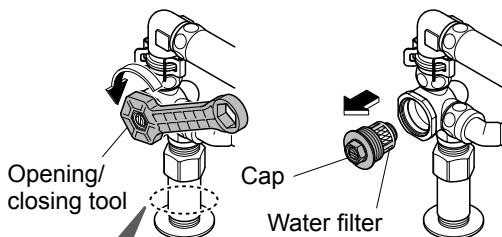


Hold the pipe with hands while loosening the cap.

6


Remove the water filter from the cap and clean it with a toothbrush or similar instrument.

- Do not use detergent.
- Do not apply excessive force to the water filter. (May cause deformation)

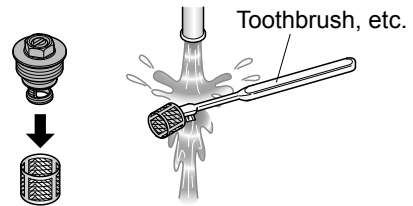

7

Install the water filter to the cap, then tighten the cap with the opening/closing tool.

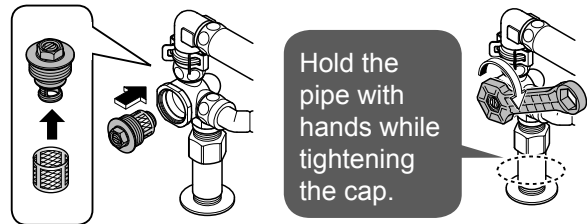

Hold the pipe with hands while tightening the cap.

8


Open the shutoff valve. (Page 15)

- Check that there are no leaks in the shutoff valve or plumbing connections.

9

Mount the opening/closing tool to its original position and reinstall the side panel.

- Fit the side panel to the top and side of the bowl unit without a gap.

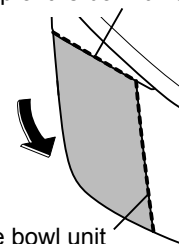


10

Switch the breaker on the distribution board to ON.

- The "Power" LED lights up.

# Changing Settings

## Setting List

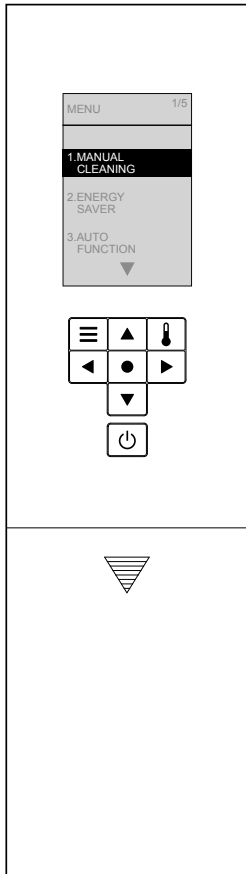

		Setting Types
Auto functions	Auto flushing	Auto flushing
		Auto flush delay
	Auto open/close	Auto open/close
		Auto close delay
		Auto open delay
		Seat/lid
	Auto cleaning	Auto wand CLEAN
		Pre-mist
		Deodorizer
		Auto power deodorizer
Language settings		
Other settings	Beep sound	
	Anti freezing	
	Setting lock	
	Personal setting	Setting
Register1 Register2		

### CAUTION

- During setting, the display goes out when no button is pressed within about 60 seconds. If you fail to complete the setting, redo from the step 1.

		<b>Available Settings</b> •Bold: "Initial settings"	<b>Setting Ref. Page</b>
	• Set whether or not to <b>clean the bowl unit automatically</b>	<b>ON/OFF</b>	Page 40
	• Change the amount of time before the <b>toilet flushes automatically</b>	5seconds/ <b>10seconds</b> / 15seconds	
	• Set whether or not to <b>open and close the toilet lid automatically</b>	<b>ON/OFF</b>	Page 42
	• Change the amount of time before the lid/ seat closes automatically	25seconds/ <b>90seconds</b>	
	• Change the amount of time after which the lid/seat opens automatically upon closing it with hands	<b>15seconds</b> / 30seconds/ 90seconds	Page 44
	• Automatically open and close the <b>toilet lid only</b> / Automatically open and close the <b>toilet seat and toilet lid</b>	<b>LID/Seat</b> · Lid	
	• Set whether or not to <b>clean the wand automatically</b>	<b>ON/OFF</b>	Page 46
	• Set whether or not to <b>spray mist in the bowl unit automatically</b>	<b>ON/OFF</b>	
	• Set whether or not to <b>deodorize automatically after sitting on the toilet seat</b>	<b>ON/OFF</b>	Page 48
	• Set whether or not to <b>power deodorize automatically after standing up</b>	<b>ON/OFF</b>	
	• <b>Select the language</b> displayed on the back of remote control	Simplified chinese/ Traditional chinese/ English	Page 50
	• Set whether or not to <b>make a beep sound</b>	<b>ON/OFF</b>	Page 52
	• Set whether or not to <b>run the water for the bowl unit and top unit automatically at a fixed interval in order to prevent freezing</b> (dynamic mode → Page 59)	<b>ON/OFF</b>	
	• Set whether or not to <b>use the setting lock</b>	<b>ON/OFF</b>	
	• Set whether or not to <b>use the personal setting</b>	<b>ON/OFF</b>	Page 54
	• Set to <b>remember your favorite pressure, wand position and water temperature settings</b>	Register1 / Register2	






# Changing Settings

## Auto flushing

1  Press.

2   Select  
[AUTO FUNCTION].

3   Select  
[AUTO FLUSH].

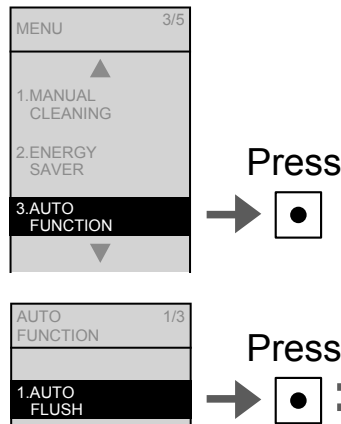


Set whether or not to clean the bowl unit automatically

**Auto flushing**


Change the amount of time before the toilet flushes automatically


**Auto flush delay**

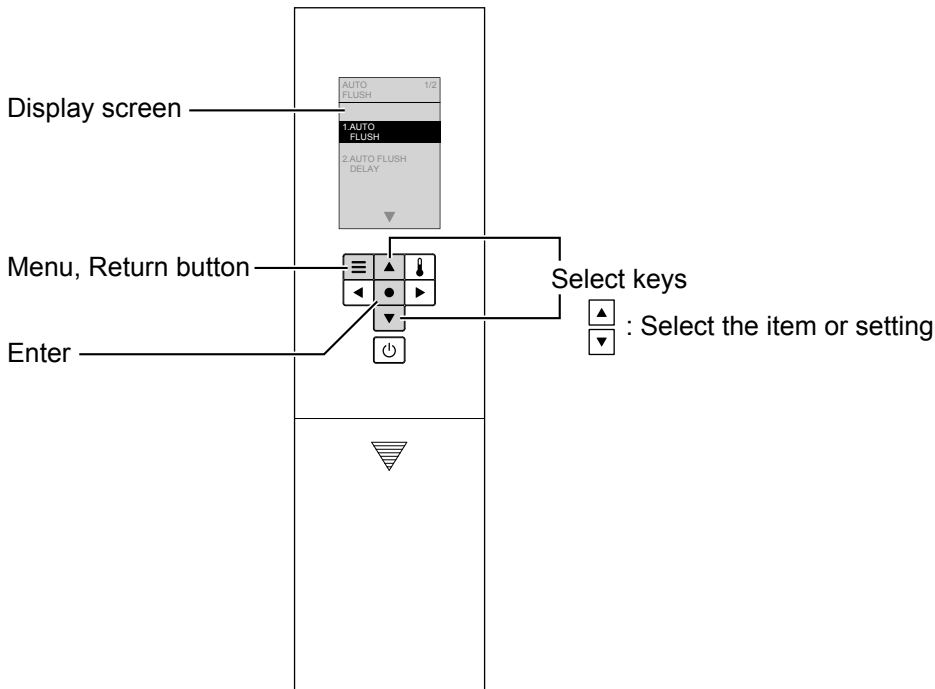




### Items set on this display

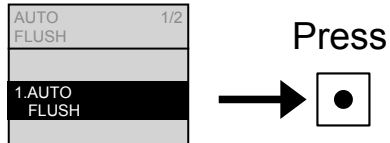

1. AUTO FLUSH  
"Auto flushing"
2. AUTO FLUSH DELAY  
"Auto flush delay"


**4**   Select  
[AUTO FLUSH].



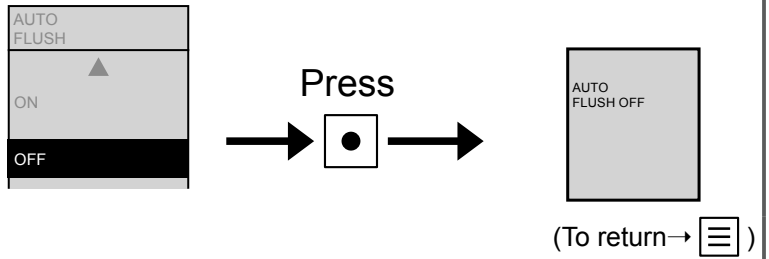


**5**   Select [ON] or [OFF].

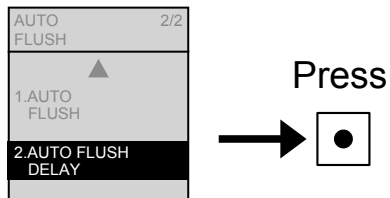

**4**   Select  
[AUTO FLUSH DELAY].



**5**   Select [5S],  
[10S] or [15S].

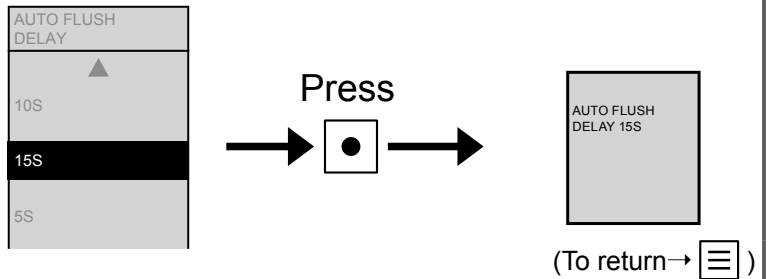





# Changing Settings

## Auto open / close

1  Press.

2   Select  
[AUTO FUNCTION].

3   Select  
[AUTO OPEN/CLOSE].

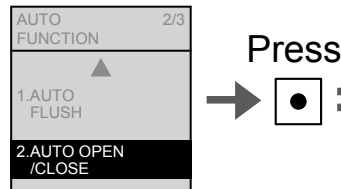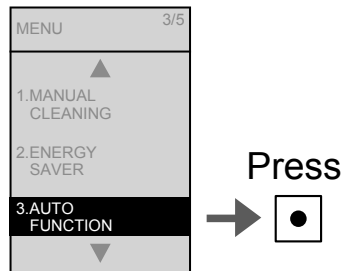


Set whether or not to open and close the toilet lid automatically

**Auto open / close**



Change the amount of time before the lid/seat closes automatically

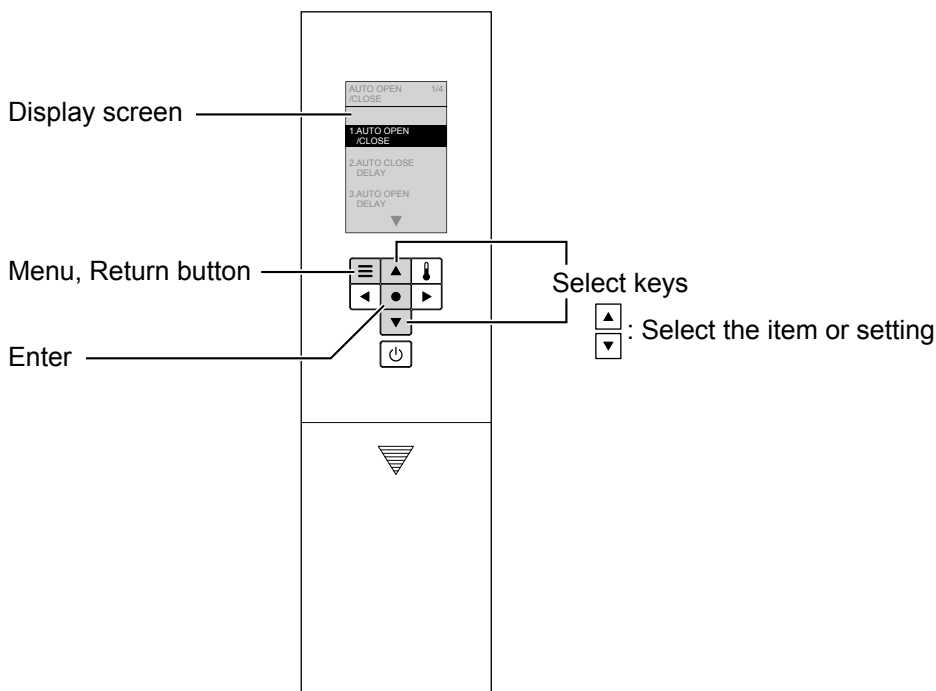
**Auto close delay**




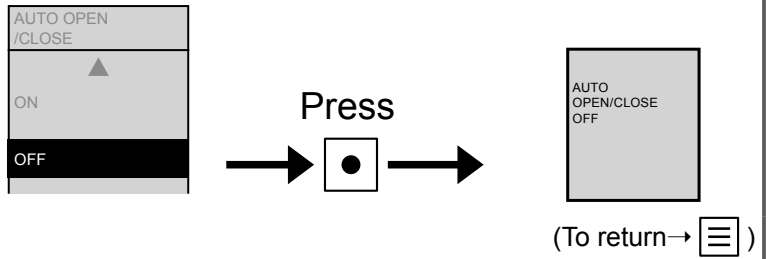
### Items set on this display



1. AUTO OPEN/CLOSE  
"Auto open/close"
2. AUTO CLOSE DELAY  
"Auto close delay"
3. AUTO OPEN DELAY  
"Auto open delay"
4. SEAT/LID  
"Seat/lid"

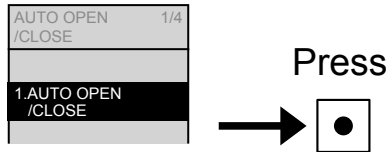
**4**   Select  
[AUTO OPEN/CLOSE].






**5**   Select [ON] or [OFF].

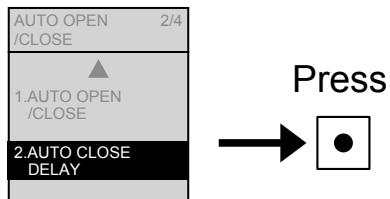

**4**   Select  
[AUTO CLOSE DELAY].



**5**   Select [25S] or [90S].\*<sup>1</sup>

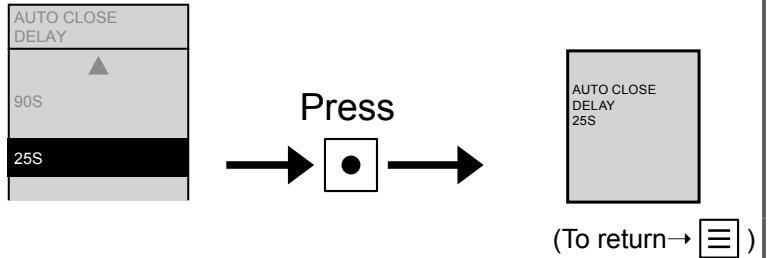



\*1 When set to "25 seconds", the lid/seat does not open automatically for about 15 seconds after closing automatically.


# Changing Settings

## Auto open / close (Continued)


**1**  Press.

**2**   Select  
[AUTO FUNCTION].

**3**   Select  
[AUTO OPEN/CLOSE].

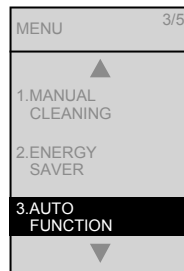

Press

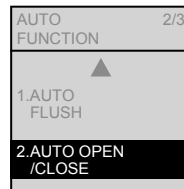

Press




Change the time period till automatic opening (After closing by hand.)

**Auto open delay**



Automatically open and close the toilet lid only/  
Automatically open and close the toilet seat and toilet lid

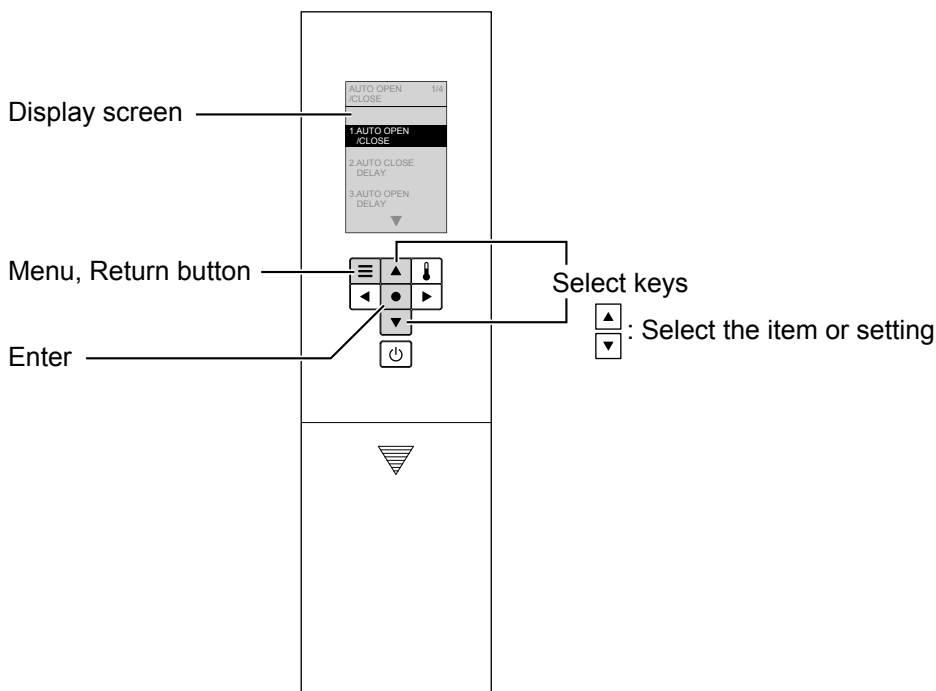
**Seat/lid**




### Items set on this display


1. AUTO OPEN/CLOSE  
"Auto open/close"
2. AUTO CLOSE DELAY  
"Auto close delay"
3. AUTO OPEN DELAY  
"Auto open delay"
4. SEAT/LID  
"Seat/lid"


**4**   Select  
[AUTO OPEN DELAY].

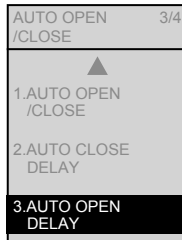




Press 

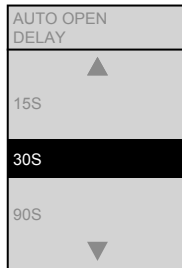
**5**   Select  
[15S], [30S] or [90S].

 

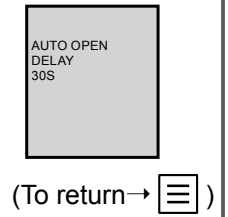

Press  →

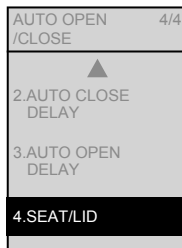



**4**   Select [SEAT / LID].




Press 

 **5**   Select  
[LID] or [SEAT·LID].

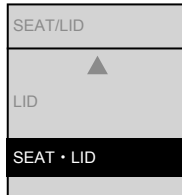

Press  →

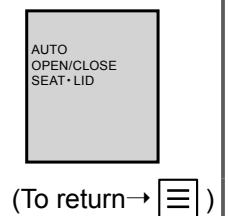


# Changing Settings

## Cleaning Features


1  Press.

2   Select  
[AUTO FUNCTION].

3   Select  
[AUTO CLEANING].

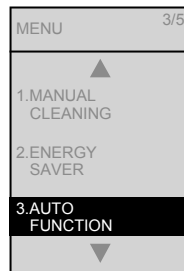

Press

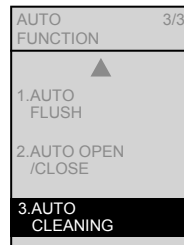


Press



Set whether or not to clean the wand automatically  
**Auto wand CLEAN**


Set whether or not to spray mist in the bowl unit automatically  
**Pre-mist**

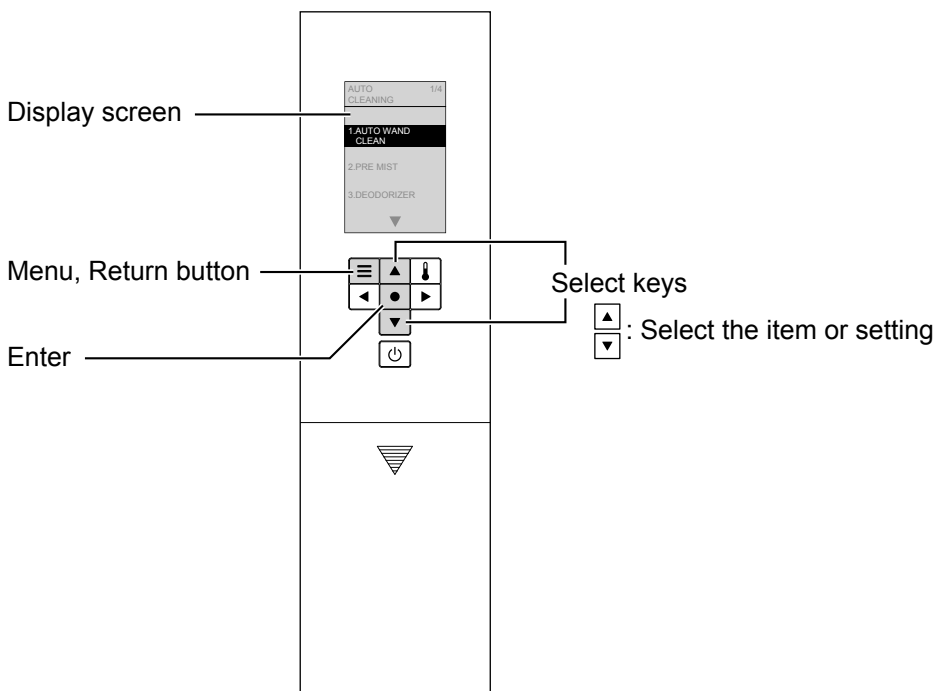

### Items set on this display


1. AUTO WAND CLEAN  
"Auto wand CLEAN"
2. PRE MIST  
"Pre-mist"
3. DEODORIZER  
"Deodorizer"
4. AUTO POWER DEODORIZER  
"Auto power deodorizer"

 4




Select

[AUTO WAND CLEAN].


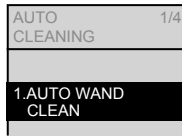


Press

 5




Select [ON] or [OFF].

 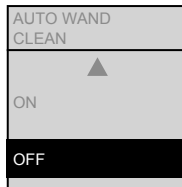


Press



(To return → )

 4




Select [PRE MIST].




Press

 
5




Select [ON] or [OFF].

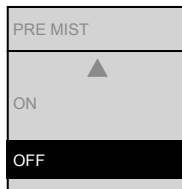

Press

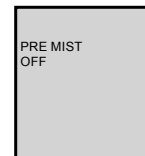

(To return → )




# Changing Settings

## Cleaning Features (Continued)


**1**  Press.

**2**   Select  
[AUTO FUNCTION].

**3**   Select  
[AUTO CLEANING].

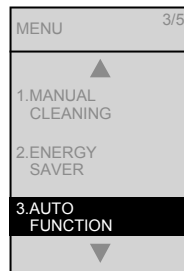


Press 

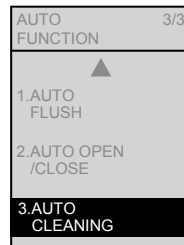

Press 



Set whether or not to deodorize automatically after sitting on the toilet seat  
**Deodorizer**

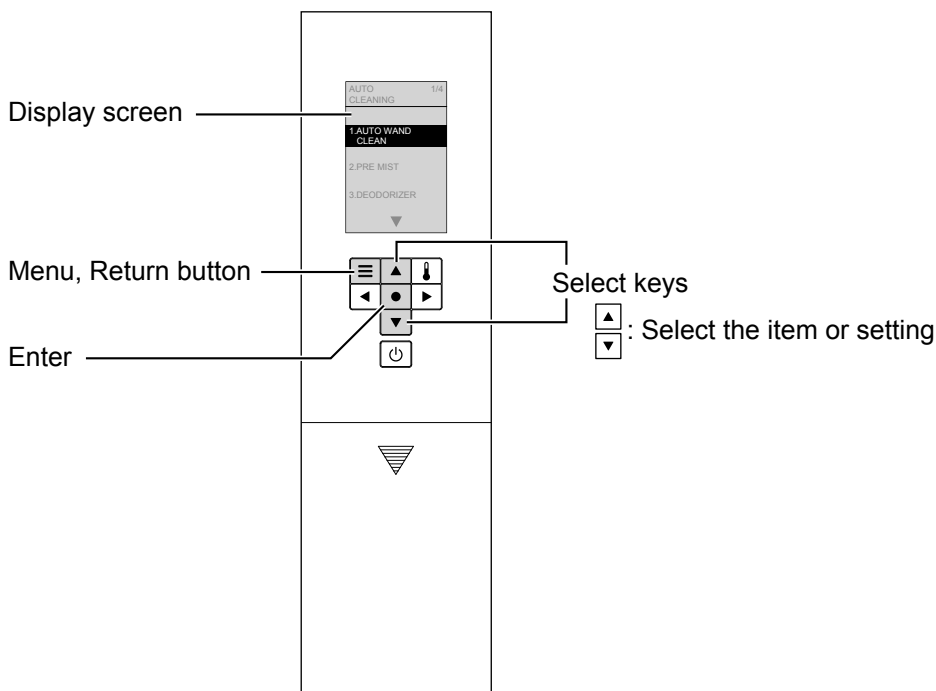
Set whether or not to deodorize automatically after standing up  
**Auto power deodorizer**






### Items set on this display

1. AUTO WAND CLEAN  
"Auto wand CLEAN"
2. PRE MIST  
"Pre-mist"
3. DEODORIZER  
"Deodorizer"
4. AUTO POWER DEODORIZER  
"Auto power deodorizer"

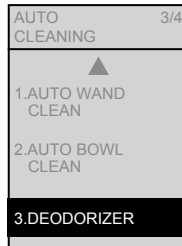
**4**   Select [DEODORIZER].





Press 



**5**   Select [ON] or [OFF].

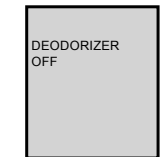



Press  →






(To return → )

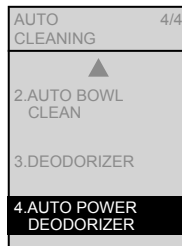**4**   Select [AUTO POWER DEODORIZER].





Press 

**5**   Select [ON] or [OFF].

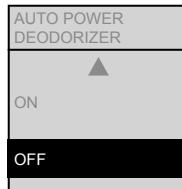

Press  →

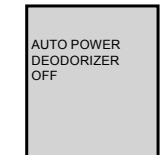

 

(To return → )

# Changing Settings

## Language Settings

1  Press.

2   
 Select

[语言 / 語言 /  
LANGUAGE].




Press



Select the language displayed on the back of remote control


### Language Settings

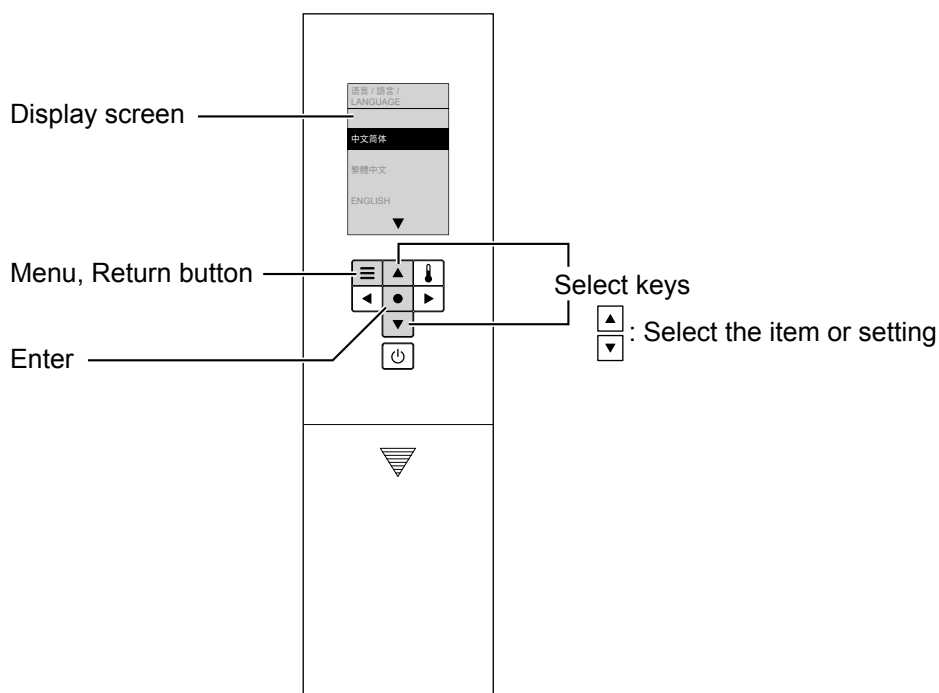

### Items set on this display


1. 中文简体  
"Simplified chinese"
2. 繁體中文  
"Traditional chinese"
3. ENGLISH  
"English"

 
# 3



Select

 [ 中文简体 ] [ 繁體中文 ] or  
[ ENGLISH ].





(To return → )

# Changing Settings

## Other settings

1  Press.

2   Select  
[OTHER SETTING].



Press 

Set whether or not to make a beep sound


### Beep sound

Set whether or not to run the water for the bowl unit and top unit automatically at a fixed interval in order to prevent freezing

### Anti freezing



Set whether or not to use the setting lock

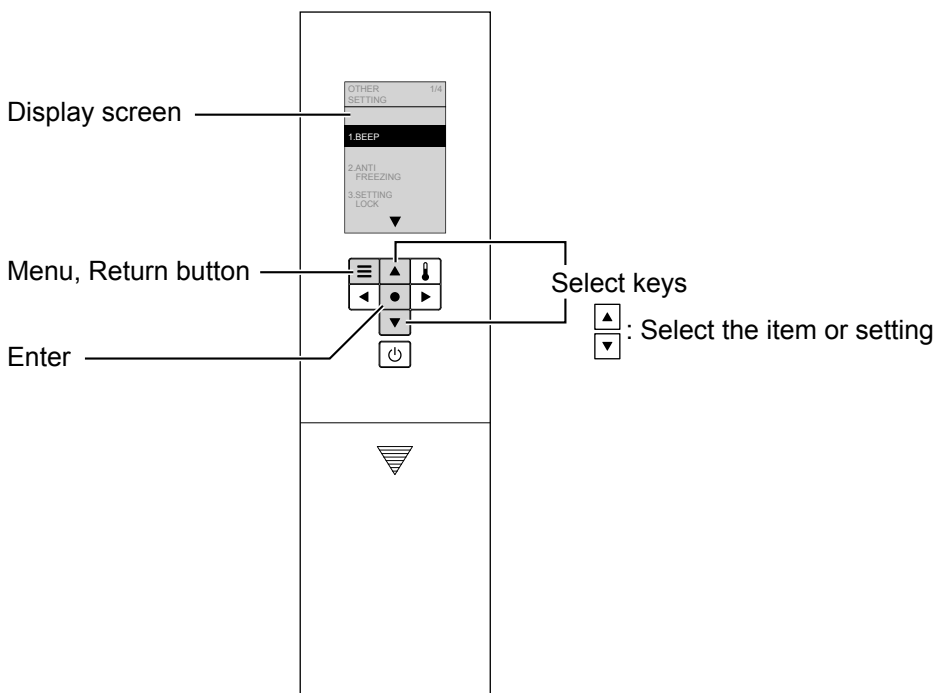
### Setting lock






#### Items set on this display

1. BEEP  
"Beep sound"
2. ANTI FREEZING  
"Anti freezing"
3. SETTING LOCK  
"Setting lock"
4. PERSONAL SETTING  
"Personal setting"

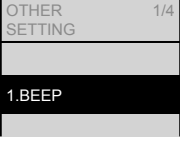
**3**   Select [BEEP].



Press 



**4**   Select [ON] or [OFF].





Press 





(To return → )

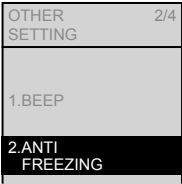
**4**   Select [ANTI FREEZING].




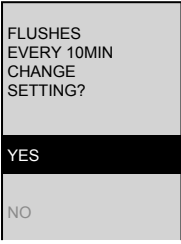
Press 


**5**   Select [ON] or [OFF].


<For setting to [ON]> When the time is set, the bowl unit is cleaned in about 10 minutes intervals to prevent freezing.






Press 





Press 






(To return → )


**3**   Select [SETTING LOCK].




Press 


**4**   Select [ON] or [OFF].

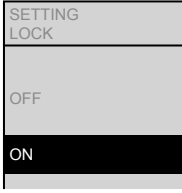


Press 



**5** Check the displayed screen.





Display screen during setting lock

Cancellation method:  
 Press "Enter" for 2 seconds or longer.  
 • If you want to relock after cancellation, reconfigure the setting.

# Changing Settings

## Other settings (Continued)

1  Press.

2   Select  
[OTHER SETTING].




Press



Set whether or not to use the personal setting

**Personal setting**

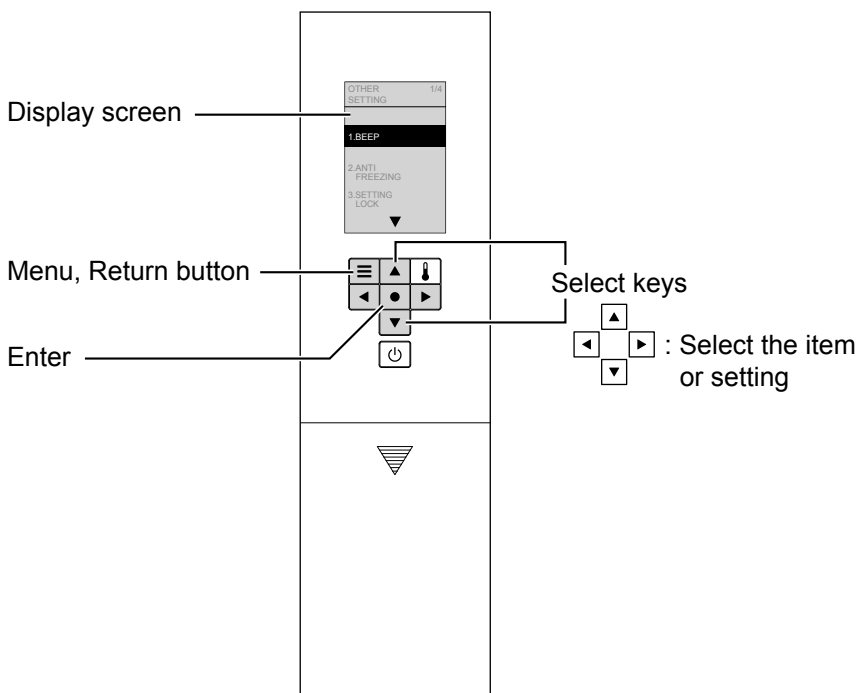




Set to remember your favorite pressure, wand position and water temperature settings

**Personal setting Register1 Register2**


### Items set on this display



1. BEEP  
"Beep sound"
2. ANTI FREEZING  
"Anti freezing"
3. SETTING LOCK  
"Setting lock"
4. PERSONAL SETTING  
"Personal setting"

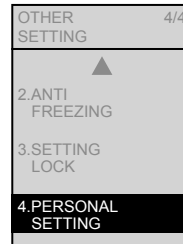
**3**  Select  
 [PERSONAL SETTING].

 


Press



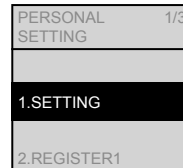


**4**  Select [SETTING].  

 


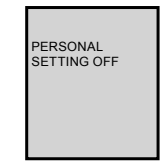
 
Press



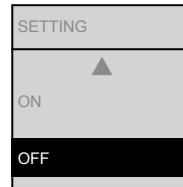


**5**  Select [ON] or [OFF].  


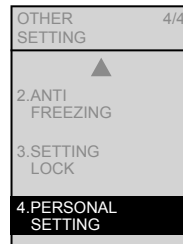


Press

 




(To return → )

**3**  Select  
 [PERSONAL SETTING].




Press







 **4**  Select [REGISTER1] or  
 [REGISTER2].








Press








**5**  Select [PRESSURE] and  
  
  Set the water pressure.

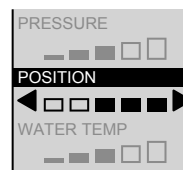



**6**  Select [POSITION] and  
  
  Set the wand position.




**7**  Select [WATER TEMP] and  
  
  Set the water temperature.

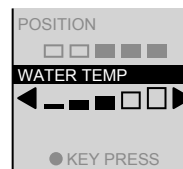

Press

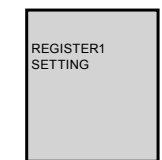 

(To return → )



# What to Do?

## If the water does not flow due to a power outage


### If the water does not flow due to a power outage (when water failure hasn't occurred)

#### ■ You can flush the toilet with the hand lever (for flushing in case of power outage).

- Pulling the hand lever does not flush the toilet when the power is supplied.



When testing the operation, switch the breaker on the distribution board to OFF.

- 1** Remove the side panel (left).

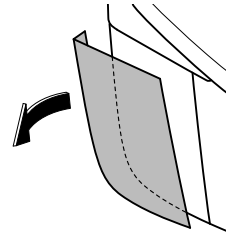


- 2** Pull the hand lever to where it stops. (about 30 seconds)

- The water surface in the bowl rises.

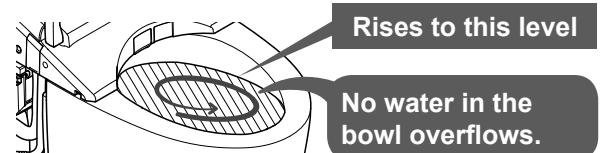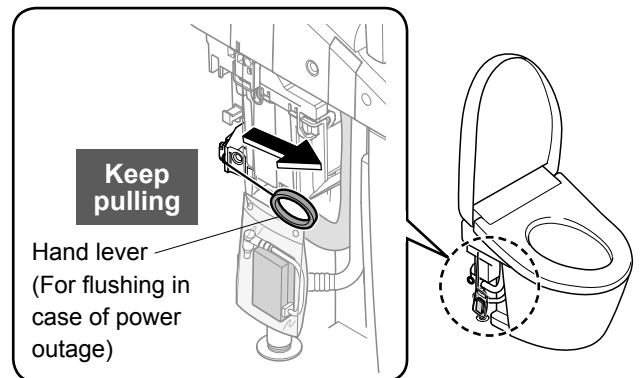


- 3** When the beep sound is made and water supply stops, release the hand lever.

- The toilet flushes.
  - You cannot flush the toilet for about 60 seconds after flushing it or releasing the hand lever halfway.
- Wait at least about 60 seconds and then flush the toilet again.

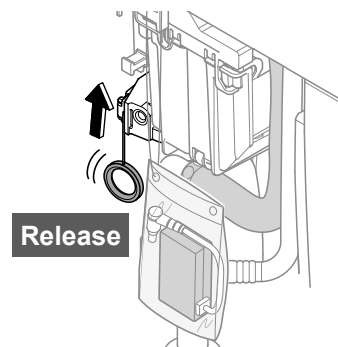

- 4** Reinstall the side panel.

- Fit the side panel to the top and side of the bowl unit without a gap.

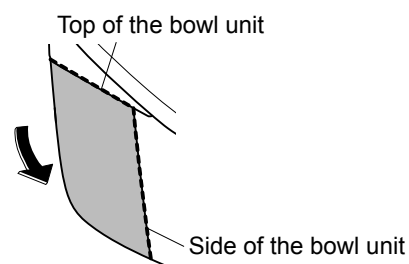

#### Attention!

- When the power is restored, be sure to perform a full flush. (To prevent waste from remaining in the drain pipe.)

- You can flush the toilet with a bucket. (Page 58)


If power outage lasts for a long period (2 days or more), insert batteries in the battery box.

**Attention!**


- Be careful not to expose the battery box to water. (May cause malfunctions.)

**1** Remove the side panel (left). (Page 56)


**2** Take the battery box out of the bag.

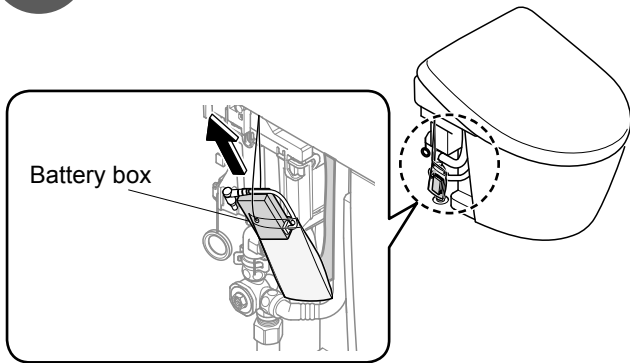

**3** Insert two AA batteries properly in the battery box.

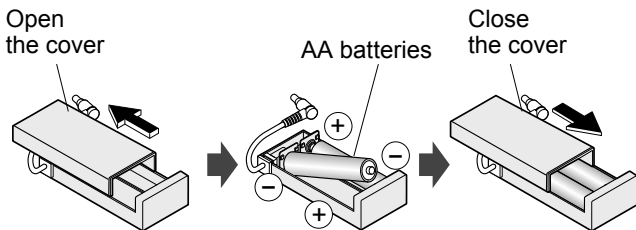


**4** Put the battery in the bag.

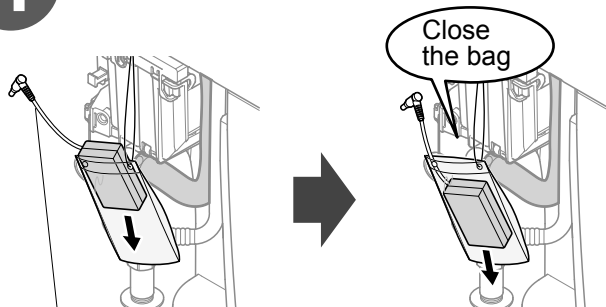

Take the battery box cable out of the bag.

**5** Connect the battery box cable to the battery box plug socket.

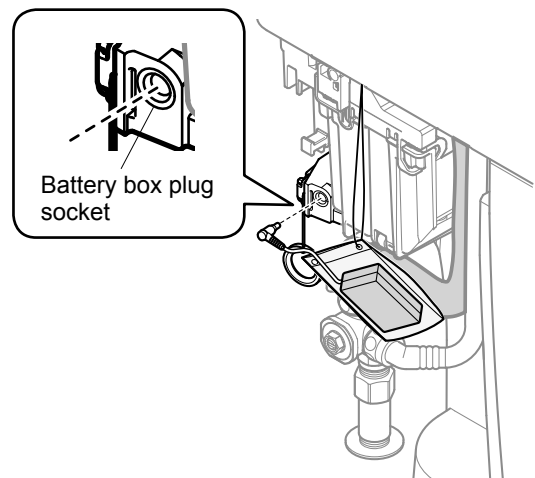

■ To flush the toilet with the hand lever (Page 56 Step 2 3)

- When the power outage recovers: unplug the battery box, take out the batteries, put the battery box cable inside the bag, and put back the side panel. (Page 56)

■ **About the batteries**

- Use dry cell, alkaline batteries.
- Be sure to follow "Safety Precautions" to prevent the batteries from rupturing or leaking fluid, etc. (Pages 7, 10)

# What to Do?

**If the water does not flow due to a water service interruption**

**If you cannot operate with the remote control**

**If the water does not flow due to a water service interruption**


**1** Use a bucket to flush water.

**2** If the water level is low after flushing, add more water.

- Prevents odors.

**Attention!**



- If there is a water supply failure, set "Auto flushing" to "OFF". (Page 40)
- When the water supply is restored, be sure to perform a full flush. (To prevent waste from remaining in the drain pipe.)

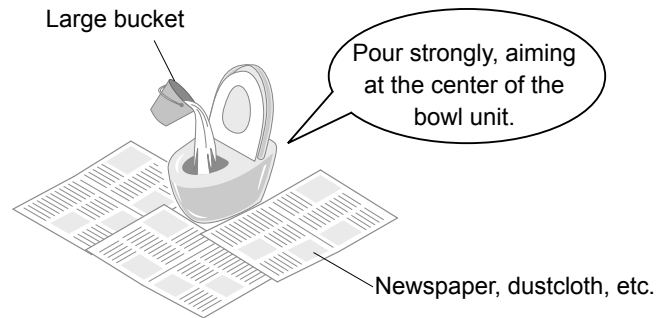

**If you cannot operate with the remote control**

■ Flush is also possible using the buttons on the left side of top unit.

■ If the low battery warning mark "  " lights up, replace the batteries.

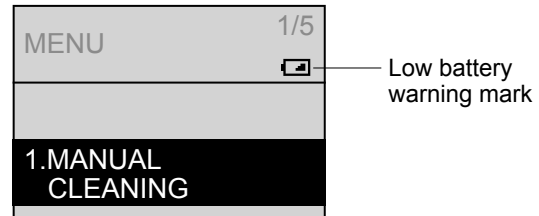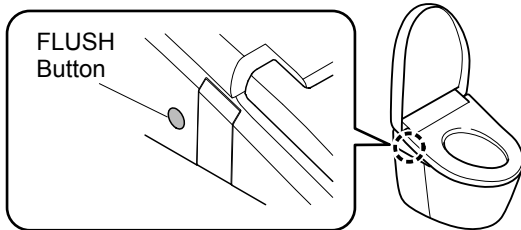

■ Replacing the batteries

**1** Switch the breaker on the distribution board to OFF.

**2** Remove the remote control from the hanger.  
(Page 14)


**3** Open the battery cover and replace two AA batteries. (Page 14)

- The low battery warning LED turns off.

**4** Mount the remote control in the hanger.

**5** Switch the breaker on the distribution board to ON.

- The "Power" LED lights up.

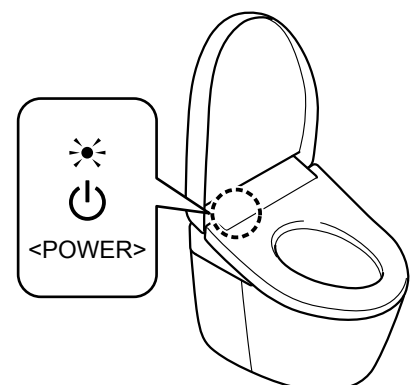

**Attention!**

- "ON" and "OFF" settings of the functions such as the energy saver function may be canceled when the batteries are replaced. Set them again.

# Freeze Damage Prevention

When the ambient temperature is likely to drop to 0°C or lower, take measures to prevent freezing.

## Attention!

- When the ambient temperature is likely to drop to 0°C or lower, do not use the energy saver feature. (May damage the product.)
- Warm the bathroom or take measures against freezing so that the ambient temperature does not drop below 0°C.
- Before starting work, set "Auto flushing" (Page 40) and "Auto open/close" (Page 42) to "OFF".

## How to Freeze Damage Prevention (Dynamic mode)


This method runs the water for the product automatically at a fixed interval in order to prevent freezing.

### ■How to Set (Page 52)

- Switch "Anti freezing" to "ON" with the remote control.

While Anti freezing is set to ON, it works as follows.

- The "Power" LED flashes.
- The toilet flushes at intervals of about 10 minutes.
- About 50 ml of water comes out from near the wand at intervals of about 5 minutes. (The wand remains retracted.)

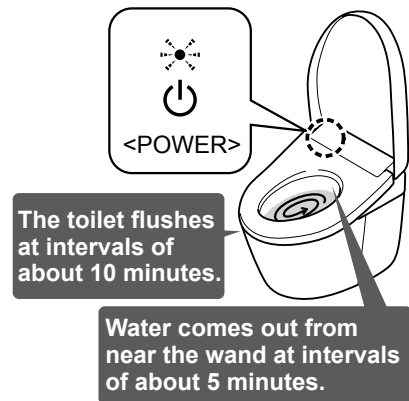

# What to Do?

## Long Periods of Disuse

**If the toilet is in a location you will not visit for a long time, drain the water.**

(The water in the tank may cause malfunctions or become contaminated and cause skin irritation or other problems.)  
(May cause freezing and damage to product.)

### CAUTION


- Do not drain water when the top unit is lifted up with the "Cleaning lift" (Page 32).


## How to drain the water

**1** Close the shutoff valve. (Page 63)

- The water supply stops.




**2**  Press "Full flush" button on the remote control to drain the tank.

**3**  Press "Wand CLEAN" button.  
(Release the pressure from the water supply pipe.)

**4** Switch the breaker on the distribution board to OFF.


**5** Drain the pipe.

- (1) Remove the cover and water filter drain valve.
- Loosen the water filter drain valve with a flat-head screwdriver and then pull it.

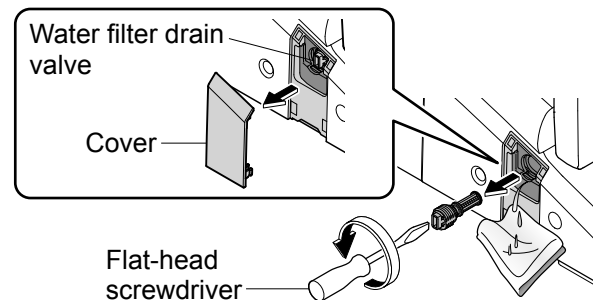


- (2) After draining the water, install the water filter drain valve and cover.

- Insert the water filter drain valve and use a flat-head screwdriver to tighten it securely.

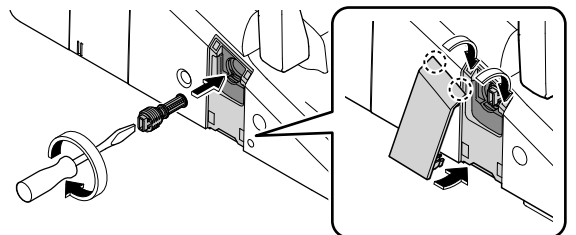

- 6** Pull out the water drain lever.
- Water comes out from around the wand (about 20 seconds)

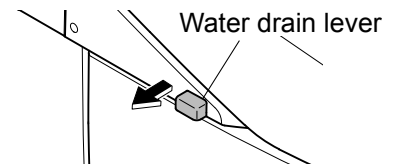

- 7** Release your hand to return the water drain lever to its original position.

**■If water may get frozen**

- Add antifreeze solution in the water in the bowl to prevent freezing.  
(The antifreeze solution should not be flushed out. Collect it before using the toilet and dispose of it.)



**■To use the product again**


- The water needs to be resupplied. (See below)

## Resupplying the Water

- 1** Open the shutoff valve. (Page 15)
- Check that water is not leaking from a pipe or the top unit.

- 2** Switch the breaker on the distribution board to ON.
- The "Power" LED lights up.

- 3** ① Discharge water from the wand.
- (1) Pressing down the left side of the toilet seat,
  - (2)  Press "Rear cleansing" button to discharge water from the wand.
    - Catch the water in a paper cup or other receptacle.
  - (3)  Press "Stopping" button.

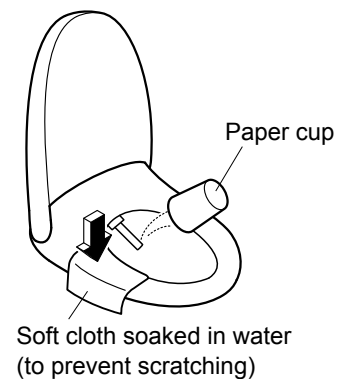


- ②  Press "Full flush" button.

- The tank fills with water (in models for sale in Hong Kong, Indonesia and Malaysia, water also flows into the bowl unit.)  
The LED on the main display flashes. It stays lit after the tank becomes full (about 60 seconds max. (about 80 seconds max. in models for sale in Hong Kong, Indonesia and Malaysia)).
- You cannot flush the toilet until water supply is complete. Never operate the toilet while the tank is filling with water.

**■If the remaining water has frozen and no water comes out**

- Heat the inside of the bathroom, and warm the water supply hose and shutoff valve using a cloth soaked in warm water.

- 4** After the bowl unit fills with water, press  "Full flush" button again.


# What to Do?

## Removal of Operation guide


Follow the procedure below.

### How to remove the operation guide

- 1** Switch the breaker on the distribution board to OFF.
- 2** Remove the remote control from the hanger.  
(Page 14)
- 3** Remove the hanger and operation guide.

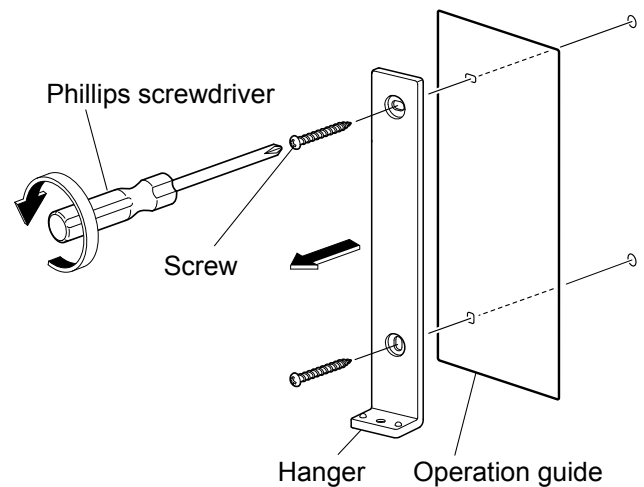

- 4** Screw the hanger on the wall.

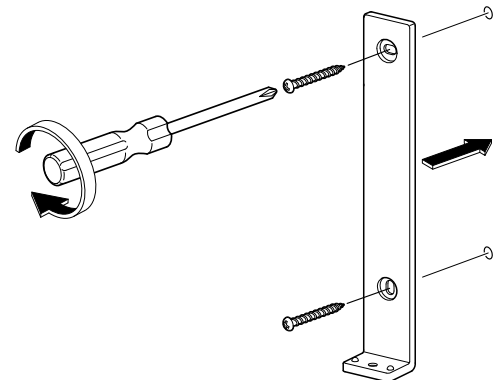

- 5** Mount the remote control in the hanger.
- 6** Switch the breaker on the distribution board to ON.
  - The "Power" LED lights up.

■ To install back the operation guide, follow the procedure above.  
(Install the operation guide at step **4**.)


# Troubleshooting

First, try the actions described on pages 63 to 70.

If the problem persists, consult the installer, seller, or TOTO customer service (see contact information on the back cover).

In the following case, switch the breaker on the distribution board to off and consult with TOTO customer service (see contact information on the back cover).

- "Power" LED, "Seat" LED, and "Energy saver" LED are flickering

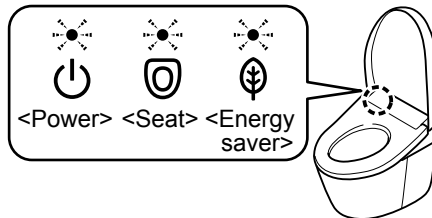

**CAUTION**

**!** If a water leak occurs, close the shutoff valve.

- The beep sound keeps sounding

## Please check first

Is the Power LED lit?

- Is the "Power ON/OFF" setting "OFF"?


→ Switch it to "ON" with the remote control. (Page 15 Step 2-2)

- Is the "Power" LED on the main display flashing?

→ The "Anti freezing" is set to "ON". (Pages 52, 59)

- Is the breaker on the distribution board turned on?

→ Check whether there is a power outage or the breaker has turned "OFF".

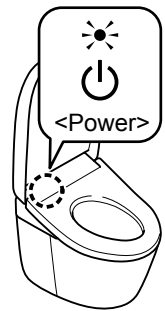

Is the Energy saver LED lit?

- While the LED is lit, energy saver (Page 26) is in operation, so the toilet seat temperature may be reduced or the heater may be turned off.




Is the remote control working?

- Does the display screen on the back of the remote show " " ?

→ Replace the batteries. (Pages 14, 58)

- Is the remote control transmitter or the remote control receiver blocked?

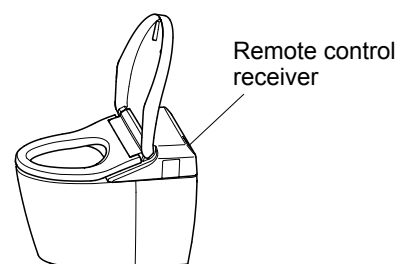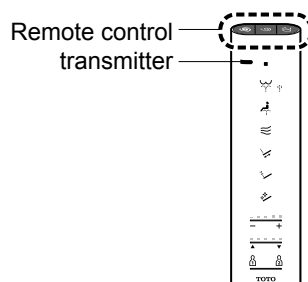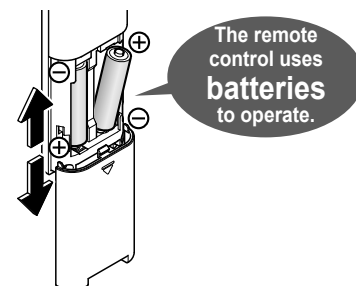


→ Remove obstructions, dirt, water droplets or any other blockages.





# Troubleshooting

## Rear Cleansing, Front Cleansing and Wand

Trouble	Please check	Ref. Page
<p><b>The wand (or cleansing water) does not come out</b></p>	<ul style="list-style-type: none"> <li>● When the temperature is low, it takes time for the wand to come out after the remote control button is pressed because the water must be warmed up first.</li> </ul>	-
	<ul style="list-style-type: none"> <li>● Did you sit on the toilet continuously for 2 hours or longer? (If so, operation is stopped for safety purposes.) → Stand up from the seat and then use again.</li> </ul>	-
	<ul style="list-style-type: none"> <li>● If the water supply pressure drops significantly, for example if water is used elsewhere or if there is a water failure, the function may stop for safety. → Switch the breaker on the distribution board to OFF and wait about 10 seconds before inserting it again. If the same symptom reappears. → There may be a malfunction. Consult with TOTO customer service (see contact information on the back cover).</li> </ul>	-
	<ul style="list-style-type: none"> <li>● The seat switch will not turn on unless you sit on the seat properly. → Sit back on the toilet seat.</li> </ul>	11
	<ul style="list-style-type: none"> <li>● Are you using a toilet seat cover, a toilet lid cover or a seat for infants? → Remove any covers. When using a seat for infants or a soft highchair, remove after each use.</li> </ul>	 Covers 11
<p><b>The wand extends but the cleansing water does not come out/ The cleansing water pressure is weak</b></p>	<ul style="list-style-type: none"> <li>●  Are you pressing "Wand CLEAN" button?               <ul style="list-style-type: none"> <li>•  When you press "Wand CLEAN" button, "ewater+" comes out from the vicinity of the wand to clean the wand. → To clean the wand with it extended, perform "Wand cleaning".</li> </ul> </li> </ul>	34
	<ul style="list-style-type: none"> <li>● Has a water failure occurred? → ■ Press "Stopping" button on the remote control and wait until water service is restored.</li> </ul>	-
	<ul style="list-style-type: none"> <li>● Is the shutoff valve closed? → Fully open the shutoff valve.</li> </ul>	15
	<ul style="list-style-type: none"> <li>● Is the water filter drain valve clogged with foreign matter? → Clean the filter.</li> </ul>	36
<p><b>The cleansing water is cold</b></p>	<ul style="list-style-type: none"> <li>● Is the water pressure set to a low level?</li> <li>● Is the warm water temperature set to "OFF" or a low level?</li> <li>● When the temperature of the water supply or the bathroom is low, the water temperature may be low when first sprayed.</li> </ul>	17 24 -
<p><b>Stops in the middle of use</b></p>	<ul style="list-style-type: none"> <li>● Rear cleansing, Rear soft cleansing and Front cleansing stop automatically after about 5 minutes of continuous use.</li> <li>● Does the seat switch have difficulty detecting? → Sit back on the toilet seat. If you get up slightly from the seat, or sit forward on the seat, the seating switch may temporarily stop detecting your presence.</li> </ul>	- 11
<p><b>Water comes out unexpectedly from the wand</b></p>	<ul style="list-style-type: none"> <li>● Is the "Power" LED (green) on the main display flashing?               <ul style="list-style-type: none"> <li>• The "Anti freezing (dynamic mode)" is set to "ON". (Water comes out from near the wand at about 5 minutes intervals and the bowl unit flushes at about 10 minutes intervals.)</li> </ul> </li> <li>● When you sit on the toilet seat, water comes out for several seconds while water is warmed up.</li> </ul>	52,59 -
	<ul style="list-style-type: none"> <li>● Is the "Auto wand CLEAN" LED on the main display flashing?               <ul style="list-style-type: none"> <li>• "Auto wand cleaning" starts and the wand is cleaned.</li> </ul> </li> </ul>	20

## Warm air drying



Trouble	Please check	Ref. Page
The dryer temperature is low	● Is the dryer temperature set to low level?	24
Stops in the middle of use	● The feature stops automatically after about 10 minutes of continuous use.	-
	● Does the seat switch have difficulty detecting? → Sit back on the toilet seat. If you get up slightly from the seat, or sit forward on the seat, the seating switch may temporarily stop detecting your presence.	11

## Flushing

Trouble	Please check	Ref. Page
For not flushing	● Is the shutoff valve fully open?	15
	● Has a power outage occurred? → You can flush the toilet with the hand lever (for flushing in case of power outage).	56
	● Has a water failure occurred? → Use a bucket to flush water.	58
The toilet does not flush even when the button of remote control is pressed	● Is the LEDs on the main display flashing? • The tank is filling with water. (This takes about 60 seconds maximum.)	-
The bowl unit does not clean automatically or timing is delayed (Auto flushing)	● Is "Auto flushing" set to "OFF"? → Set to "ON".	40
	● Even if "Auto flushing" is set to "ON", it is not available in the following instances. • About 60 seconds after the toilet is flushed. → Wait about 60 seconds and flush the toilet with the remote control.	16
	• When the time spent sitting on the toilet seat or standing in front of the bowl unit is less than about 6 seconds. → Flush with the remote control.	16
	• When staying in front of the bowl unit after standing and using the toilet. → Stay off the bowl unit and wait about 3 seconds.	-
	• When water droplets or dirt are disrupting the body sensor. → Remove the dirt.	12,13
	● The seat switch will not turn on unless you sit on the seat properly. → Sit back on the toilet seat.	11
	● The timing for the "Auto flushing" can be changed. (After about 10 seconds → after about 5 or 15 seconds)	40
The toilet flushes on its own	● Is "Auto flushing" set to "ON"? → You can turn it "OFF".	40
	● Does the seat switch or the body sensor have difficulty turning on or detecting? → Sit back on the toilet seat. If you lift your hip off the toilet seat during use or sit forward on it, the seat switch may not turn on, and thus auto flushing may occur during use. → Remove any dirt that is on the body sensor.	11 12,13
	● Is the "Power" LED (green) on the main display flashing? • The "Anti freezing (dynamic mode)" is set to "ON". (Water comes out from near the wand at about 5 minutes intervals and the bowl unit flushes at about 10 minutes intervals.)	52,59
Waste material does not flush down completely	● Is the shutoff valve fully open?	15
	● Is the water filter clogged? → Clean the filter.	36
	● Is the water supply to the toilet disrupted by other running water fixtures? → Cease using other fixtures and then flush the toilet.	-

# Troubleshooting

## Flushing


Trouble	Please check	Ref. Page
Waste material does not flush down completely	<ul style="list-style-type: none"> <li>● Are the flush and light flush buttons being used correctly?                             <ul style="list-style-type: none"> <li>•  (for solid waste) : up to 10 m of toilet paper (single)</li> <li>•  (for liquid waste): up to 3 m of toilet paper (single)</li> </ul> </li> </ul>	16
	<ul style="list-style-type: none"> <li>● Flushing may be difficult depending the consistency of the waste material. → Flush the toilet again. If the bowl unit is not cleansed with a flushing, remove the stains with a brush or similar instrument.</li> </ul>	31
	<ul style="list-style-type: none"> <li>● When the tank is filling, you cannot flush the toilet. → Once the "POWER" LED on the main display are lit and the tank fills up with water, flush the toilet.</li> </ul>	-
A small amount of water flows into the bowl unit after the unit flushes* <sup>1</sup>	<ul style="list-style-type: none"> <li>● If the water supply pressure drops significantly, for example if water is used elsewhere or if there is a water failure, water is supplied so that the water surface in the bowl unit rises to a certain level. If the same symptom reappears. → There may be a malfunction. Consult with TOTO customer service (see contact information on the back cover).</li> </ul>	-
Some barium remains after flushing	<ul style="list-style-type: none"> <li>● It may be difficult to flush down substances with a higher specific gravity than water, such as barium. → Flush the toilet again. If the bowl unit is not cleansed by flushing, remove the stains with a brush or similar instrument.</li> </ul>	31
There is residue on the bowl unit surface	<ul style="list-style-type: none"> <li>● Oil and other hard-to-see grime may stick to the bowl unit surface. → Clean with (non-abrasive) neutral toilet detergent.</li> </ul>	31
Pulling the hand lever (for flushing in case of power outage) does not flush the toilet	<ul style="list-style-type: none"> <li>● Pulling the hand lever does not flush the toilet when the power is supplied. When testing the operation, switch the breaker on the distribution board to OFF.</li> </ul>	-
	<ul style="list-style-type: none"> <li>● To flush the toilet with the hand lever, keep pulling the lever until the beep sound is made and water supply stops.</li> </ul>	56
	<ul style="list-style-type: none"> <li>● You cannot flush the toilet for about 60 seconds after flushing it with the hand lever or releasing the hand lever halfway. → Wait at least about 60 seconds and then flush the toilet again.</li> </ul>	-
	<ul style="list-style-type: none"> <li>● If power outage lasts for a long period (2 days or more), insert batteries in the battery box.</li> </ul>	57
	<ul style="list-style-type: none"> <li>● If the toilet does not flush with batteries in the battery box, the batteries are running out. → Replace them with new ones.</li> </ul>	-

## Toilet Seat and Toilet Lid (Auto open/close)

Trouble	Please check	Ref. Page
The toilet lid does not open automatically	<ul style="list-style-type: none"> <li>● Is "Auto open/close" set to "OFF"? → Set to "ON".</li> </ul>	42
	<ul style="list-style-type: none"> <li>● Does the body sensor have difficulty detecting? → Remove any dirt that is on the body sensor.</li> </ul>	12,13
	<ul style="list-style-type: none"> <li>● Even when set to "ON", "Auto open/close" is not performed for about 15 seconds after the toilet seat or toilet lid is closed.                             <ul style="list-style-type: none"> <li>• When the toilet lid is closed by hand (To make the product more user-friendly, a time interval is set from when the lid is closed to when it will open next.) → Move away from the toilet and wait at least about 15 seconds before approaching the bowl unit again or open and close by hand.</li> </ul> </li> </ul>	-
	<ul style="list-style-type: none"> <li>● Detection by the body sensor may be difficult when the room temperature exceeds 30°C. → Open and close by hand.</li> </ul>	-

\*1 Hong Kong only

## Toilet Seat and Toilet Lid (Auto open/close)

Trouble	Please check	Ref. Page
<b>The toilet lid does not open automatically</b>	● Is "Auto open delay" set to "30 seconds" or "90 seconds"?	44
	● After switching the breaker on the distribution board to ON, the toilet lid does not open automatically for about 10 to 60 seconds. → Open and close by hand.	-
	● Is a toilet lid or seat cover installed? → Remove any covers.	11
<b>The toilet lid does not close automatically</b>	● Is "Auto open/close" set to "OFF"? → Set to "ON". ● In the following cases, the toilet lid closes in about 5 minutes. <ul style="list-style-type: none"> <li>• When you did not sit on the toilet seat</li> <li>• When you sat on the toilet seat for less than 6 seconds</li> <li>• When you stood in front of the bowl unit for less than 6 seconds</li> </ul>	42 -
	● If they do not close automatically even though "Auto open/close" is set to "ON", the body sensor may be detecting incorrectly. → If there is a reflective object in front, such as a mirror or glass, move the reflective object or use a curtain or other object to block it.	11
<b>The toilet lid opens on its own</b>	<ul style="list-style-type: none"> <li>● Is the body sensor directly exposed to sunlight? → Do not directly expose the sensor to sunlight, because it may cause incorrect detection.</li> <li>● Is there a heater within the detection range of the body sensor? → Do not place within the detection range of the body sensor.</li> <li>● Is a urinal or wash basin also installed in the bathroom? → The body sensor may detect someone using the urinal, causing the toilet lid to open or close.</li> <li>● When the bathroom door is open, the sensor may detect people who pass in front of the toilet.</li> </ul>	11
<b>The toilet lid closes on its own</b>	● Is "Auto open/close" set to "ON"? → You can turn it "OFF".	42
	● Is "Auto close delay" set to "25 seconds"?	42
	● The seat switch will not turn on unless you sit on the seat properly. → Sit back on the toilet seat.	11
<b>The toilet lid and toilet seat open at the same time</b>	● Is "Seat/lid" set to [Seat·lid]?	44
<b>Stops (or closes) while opening</b>	<ul style="list-style-type: none"> <li>● If the lid or seat hits an obstruction the first time it opens after switching ON the breaker on the distribution board, it may stop (or close) partway during the next operation. → Eliminate any obstructions and switch the breaker on the distribution board to OFF. Switch it to ON again after about 5 seconds. Then press  "Opening and closing the toilet seat" button.</li> </ul>	-
<b>The open timing has changed</b>	● Detection by the body sensor may be difficult when the room temperature exceeds 30°C, such as in the summertime.	11
<b>Cannot open or close with the remote control</b>	● If it opens automatically. → Check "Is the remote control working?"	63
	● If automatic opening does not work either <ul style="list-style-type: none"> <li>• The toilet lid may not be mounted correctly. → Mount them correctly.</li> </ul>	33
	● Incorrect detection may occur when operating under fluorescent lights.	-

# Troubleshooting

## Toilet Seat and Toilet Lid

Trouble	Please check	Ref. Page
<b>The toilet seat is cold</b>	● Is the toilet seat temperature set to "OFF" or a low level?	24
	● Is energy saver in operation? • The energy saver feature is on when the "Energy saver" LED is on and the "Power" LED is off on the main display. When you sit on the seat, the toilet seat heater is turned on temporarily and the seat is warmed in about 15 minutes. → You can turn it "OFF" if the energy saver feature is "ON".	26 28
	● Have you been seated for a long time? • After about 20 minutes of sitting, the temperature starts going down, and after about 1 hour, the toilet seat heater is turned "OFF". → Stand up from the seat and then use again.	-
	● The seat switch will not turn on unless you sit on the seat properly. → Sit back on the toilet seat.	11
	● Is a toilet lid or seat cover installed? → Remove any covers.	11

## Energy Saver

Trouble	Please check	Ref. Page
<b>The energy saver LED does not light up</b>	● Did you switch the breaker on the distribution board to off or was there a power outage? • The "Energy saver" LED on the main display may go off when the power is turned on even if the energy saver feature is "ON". (It will turn on within about 24 hours since the setting is retained.)	-
<b>The timer energy saver feature is not working</b>	● Did you replace the remote control batteries? • "Timer energy saver" may be canceled when the batteries are replaced. → Set the timer energy saver again at the time you want to start it.	28
<b>The auto energy saver+ or auto energy saver feature is not working</b>	● Because the function takes several days learning the usage conditions before starting energy saver, the amount of energy saving may be low, depending on the frequency of use. → Check the energy saver setting.	26

## Deodorizer

Trouble	Please check	Ref. Page
<b>The deodorizer seems to be not working</b>	● Is "Deodorizer" set to "OFF"? → Set to "ON".	48
	● Even after sitting down, you do not hear operation sounds. → Sit back on the toilet seat. If you hear an operation sound when you sit on the toilet seat. → Clean the deodorizing filter.	- 35
<b>A strange odor is emitted</b>	● Are you using an air freshener or deodorizer that you purchased separately? • Doing so may reduce the effectiveness of the product deodorizer or cause strange odors. → Remove the air freshener or deodorizer.	-
<b>The auto power deodorizer feature is not working</b>	● Is "Auto power deodorizer" set to "OFF"? → Set to "ON".	48
	● It starts about 10 seconds after you stand up from the toilet seat.	-

## Sanitary

Trouble	Please check	Ref. Page
<b>The auto wand cleaning LED does not light up</b>	<ul style="list-style-type: none"> <li>● If the "Auto wand cleaning" LED is not lit, it is time to replace the component that generates "ewater+". Consult the installer, seller, or TOTO customer service (see contact information on the back cover).</li> </ul>	-

## Others

Trouble	Please check	Ref. Page
<b>Water is leaking from the plumbing connections</b>	<ul style="list-style-type: none"> <li>● If any nuts in a connection are loose, firmly tighten them with a tool such as a monkey wrench. → If the water leak does not stop, close the shutoff valve and consult with TOTO customer service (see contact information on the back cover).</li> </ul>	-
<b>The display on the remote control goes out</b>	<ul style="list-style-type: none"> <li>● The display goes out when no button on the remote control is pressed for about 60 seconds or more.</li> </ul>	-
<b>The top unit is unstable</b>	<ul style="list-style-type: none"> <li>● There is clearance between the toilet seat cushion and the bowl unit for activating the seat switch. When you sit on the toilet seat, the toilet seat subsides slightly to activate the seat switch.</li> </ul>	11
<b>Water splashes up when using the toilet</b>	<ul style="list-style-type: none"> <li>● The water in the bowl unit that is used to mask the smell of excrement is the cause of the splashing. → Adding a layer of toilet paper on the surface of the water can slightly dampen splashing.</li> </ul>	-
<b>When flushing, you hear a squishing sound underneath the floor</b>	<ul style="list-style-type: none"> <li>● There are cases when the sound is made inside the discharge pipe because of the device to ensure water in the bowl unit after the unit flushes.</li> </ul>	-
<b>When flushing, you hear a gurgling sound</b>	<ul style="list-style-type: none"> <li>● When the toilet is flushed together with waste material, the sound is a result of air, waste material and water being pulled through the system.</li> </ul>	-
<b>The top unit makes a sound</b>	When sitting on the toilet seat <ul style="list-style-type: none"> <li>● When "Pre-mist" is "ON", you hear operation sounds for preparing the pre-mist or spraying mist in the bowl unit. → You can turn it "OFF".</li> </ul>	46
	When moving away from the bowl unit after use <ul style="list-style-type: none"> <li>● When "Auto power deodorizer" is "ON", operation sounds are made while the deodorizing power increases for 60 seconds after you stand up from the toilet seat. → You can turn it "OFF".</li> <li>● If "Auto wand CLEAN" is "ON" and you use the cleansing functions (e.g., Rear cleansing and Front cleansing), you may hear that the wand is extended and cleaned with "ewater+." → You can turn it "OFF".</li> </ul>	48
	When not using the product (e.g., at night) <ul style="list-style-type: none"> <li>● If "Auto wand CLEAN" is "ON" and you do not use the cleansing functions (e.g., Rear cleansing and Front cleansing) for about 8 hours, you will hear that the wand is cleaned with "ewater+" and then the remaining water is drained from inside the product. → You can turn it "OFF".</li> </ul>	46

# Troubleshooting

## Others

Trouble	Please check	Ref. Page
<p><b>You feel air in the bowl unit when sitting on the toilet seat</b></p>	<ul style="list-style-type: none"> <li>● A mist is sprayed inside the bowl unit to make it more difficult for dirt to adhere when sitting on the toilet seat. You may feel air when a mist is sprayed. → You can turn it "OFF".</li> </ul>	46
<p><b>There is a black stain on or around the bowl unit</b></p>	<ul style="list-style-type: none"> <li>● Ammonia in urine may cause black stains. → If urine has splashed on the bowl unit or floor, wipe it immediately.</li> </ul>	-
<p><b>There is black or pink slime on the toilet bowl surface</b></p>	<ul style="list-style-type: none"> <li>● It is a result of growth of airborne fungal spores or bacteria that feed on filth on the toilet bowl. → Clean with (non-abrasive) neutral toilet detergent.</li> </ul>	-
<p><b>There are water droplets on the bowl unit surface</b></p>	<ul style="list-style-type: none"> <li>● Condensation occurs when the humidity is high, and there is a significant difference between water and room temperatures. → Wipe off droplets with dry cloth. (Condensation can build up on condensation-proof bowls when the difference between room and water temperatures exceeds 15°C and the ambient humidity reaches 80%.)</li> </ul>	-

# Specifications

Item			DH	
Rated power supply			AC 220 - 240 V, 50 Hz/60 Hz (For Hong Kong, AC 220 V, 50 Hz)	
Rated power consumption			820 - 828 W (For Hong Kong, 830 W)	
Maximum power consumption			1428 - 1439 W (For Hong Kong, 1428 W) (When the water supply temperature is 0°C)	
Type of water heater			Instantaneous type	
Power cord length			1.2 m (For Singapore, 5.0 m)	
Water protection level			IPX4	
Bowl Unit	Flush volume		Floor drain : Full 3.8 L, Light 3.0 L Wall drain : Full 4.8 L, Light 3.4 L (For Hong Kong, Indonesia and Malaysia, Full 4.5 L, Light 3.0 L)	
	Water supply system		Direct supply, Pressurized supply	
	Flush type		Cyclone flushing	
	Bowl style		Elongated	
Functions	Anti freezing	Dynamic mode	Flush volume (dynamic) 42 L/h <sup>*1</sup> (For Hong Kong, Indonesia and Malaysia, 43 L/h <sup>*1</sup> )	
	Cleansing	Spray volume	Rear cleansing	Approx. 0.27 to 0.43 L/min. <at 0.20 MPa water pressure>
			Rear soft cleansing	Approx. 0.27 to 0.43 L/min. <at 0.20 MPa water pressure>
			Front cleansing	Approx. 0.29 to 0.43 L/min. <at 0.20 MPa water pressure>
		Water temperature	Adjustable temperature range: OFF, about 30 - 40°C	
		Heater capacity	1200 - 1428 W (For Hong Kong, 1200 W)	
		Safety device	Temperature fuse	
	Backflow prevention device	Vacuum breaker, Check valve		
	Heated seat	Surface temperature	Adjustable temperature range: OFF, about 28 - 36°C (Auto energy saver: about 26°C, Auto energy saver+: OFF)	
		Heater capacity	45 - 54 W (For Hong Kong, 45 W)	
		Safety device	Temperature fuse	
	Deodorizer	Method	O <sub>2</sub> deodorization	
		Airflow volume	Normal mode: Approx. 0.09 m <sup>3</sup> /min, Power mode: Approx. 0.16 m <sup>3</sup> /min	
		Power consumption	Normal mode: Approx. 1.7 W, Power mode: Approx. 5.3 W	
	Warm air dryer	Warm air temperature <sup>*2</sup>	Adjustable temperature range: about 37 - 55°C	
		Airflow volume	Approx. 0.22 m <sup>3</sup> /min	
		Heater capacity	185 - 220 W (For Hong Kong, 220 W)	
		Safety device	Temperature fuse	
	Water supply pressure			Minimum required water pressure: 0.05 MPa <dynamic, 10 L/min>, Maximum water pressure: 0.75 MPa <Static>
	Water supply temperature			0 - 35°C
Working ambient temperature			0 - 40°C	
Dimensions			W 386 mm x D 693 mm x H 511 mm	
Weight			About 44 kg (Top unit about 6 kg, Bowl unit about 38 kg) (For Hong Kong, Indonesia and Malaysia, about 42 kg (Top unit about 6 kg, Bowl unit about 36 kg))	

\*1 The flush volume changes depending on water pressure.

\*2 Temperature around the warm air outlet measured by TOTO.

- When disposing of this product, please follow your local or state guidelines for proper disposal.



# Safety Guidelines

## A warm-water cleaning toilet seat is an electric appliance.

Continued use after malfunction occurs or use when its life-time is expired may deteriorate the electric components, producing smoke or resulting in a fire.

## For safe use of the warm-water cleaning toilet seat

### Periodical inspection is recommended.

- Please consider replacing the product when its life-time is expired.



If any abnormality of the product is observed, stop using it and consult the installer, seller or the contact listed on the back cover of this manual.

(A damaged product may cause a fire, electric shock, or may flood the floors with water.)

- Turn off the power immediately and close the shutoff valve.

# Limited Warranty

## LIMITED ONE YEAR WARRANTY

1. TOTO warrants its products to be free from manufacturing defects under normal use and service for a period of one (1) year from the date of purchase. This warranty is extended only to the ORIGINAL PURCHASER.
2. TOTO's obligations under this warranty are limited to repair or replacement, at TOTO's option, of products or parts found to be defective, provided that such products were properly installed and used in accordance with this OWNER'S MANUAL. TOTO reserves the right to make such inspections as may be necessary to determine the cause of the defect. TOTO will not charge for labor or parts in connection with warranty repairs or replacements. **TOTO is not responsible for the cost of removal, return and/or reinstallation of products.**
3. This warranty does not apply to the following items:
  - a) Damage or loss sustained in a natural calamity such as fire, earthquake, flood, thunder, electrical storm, etc.
  - b) Damage or loss resulting from any unreasonable use, misuse, abuse, negligence, or improper maintenance of the product.
  - c) Damage or loss resulting from removal, improper repair, or modification of the product.
  - d) Damage or loss resulting from sediments or foreign matter contained in a water system.
  - e) Damage or loss resulting from the quality of water in the region where the product is used.
  - f) Damage or loss resulting from improper installation or from installation of a unit in a harsh and/or hazardous environment.
  - g) Damage or loss resulting from electrical surges or lightning strikes or other acts which are not the fault of TOTO or which the product is not specified to tolerate.
  - h) Damage or loss resulting from normal and customary wear and tear, such as gloss reduction, scratching or fading over time due to use, cleaning practices or water or atmospheric conditions.
4. This warranty gives you specific legal rights. You may have other rights which vary from country to country.
5. To obtain warranty repair service under this warranty, you must take the product or deliver it prepaid to a TOTO service facility, together with a letter stating the problem, or contact a TOTO distributor or product service contractor, or directly to TOTO sales office. If, because of the size of the product or nature of the defect, the product can not be returned to TOTO, receipt by TOTO of written notice of the defect shall constitute delivery. In such case, TOTO may choose to repair the product at the purchaser's location or pay to transport the product to a service facility.

WARNING! TOTO shall not be responsible or liable for any failure of, or damage to, this product caused by either chloramines in the treatment of public water supply or cleaners containing chlorine (calcium hypochlorite).

NOTE: The use of a high concentrate chlorine or chlorine related products can seriously damage the fittings. This damage can cause leakage and serious property damage.

THIS WRITTEN WARRANTY IS THE ONLY WARRANTY MADE BY TOTO. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY SHALL BE THE EXCLUSIVE REMEDY AVAILABLE TO THE PURCHASER. TOTO SHALL NOT BE RESPONSIBLE FOR LOSS OF USE OF THE PRODUCT OR FOR OTHER INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE OR EXPENSES INCURRED BY PURCHASER, OR FOR LABOR OR OTHER COSTS DUE TO INSTALLATION OR REMOVAL, OR COSTS OF REPAIRS BY OTHERS, OR FOR ANY OTHER EXPENSE NOT SPECIFICALLY STATED ABOVE. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR USE, ARE EXPRESSLY LIMITED TO THE DURATION OF THIS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THE ABOVE LIMITATION AND EXCLUSION MAY NOT APPLY TO YOU.

# MEMO

# MEMO